FOTILE

吸油烟機

使用安裝説明書 | EMG6018/EMG6018-C EMG9008/EMG9008-C

如有任何需要,請聯系方太授權的服務中心。本 説明書部分圖片爲示意圖,僅供參考,若圖片與 實物不符,以實物爲准。 WWW.FOTILEGLOBAL.COM




尊敬的用户, 您好! 感謝您選購方太公司爲您精心制造的方太系列產品,

使用前請通讀本《使用安裝説明書》(以下簡稱説明書),此説明書將有利于您熟悉油烟機安全信息、操作和保養維修等,并讓您享受到全新的下厨樂趣。

請您在使用前務必認真閱讀説明書,并遵從説明書要求進行使用。本説明書的操作説明對于維持產品的良好工作狀况十分重要,若因使用不當造成產品故障,您將失去免費保修的權利,任何直接或間接的免費保修申請將不被本公司各地授權的服務中心所接受。同時我們建議您在質量保修期內及保修期后,如有需要維修時請與方太公司當地授權的服務中心聯系,這對您和我們都是非常重要的。

我們授權的服務中心將爲您提供方太公司專業的零部件及技術支持,使您的產品得到優質快捷的維修保障,同時讓您得到最輕松細心的服務。

如果您需要服務,您將需要提供產品型號和序列號。

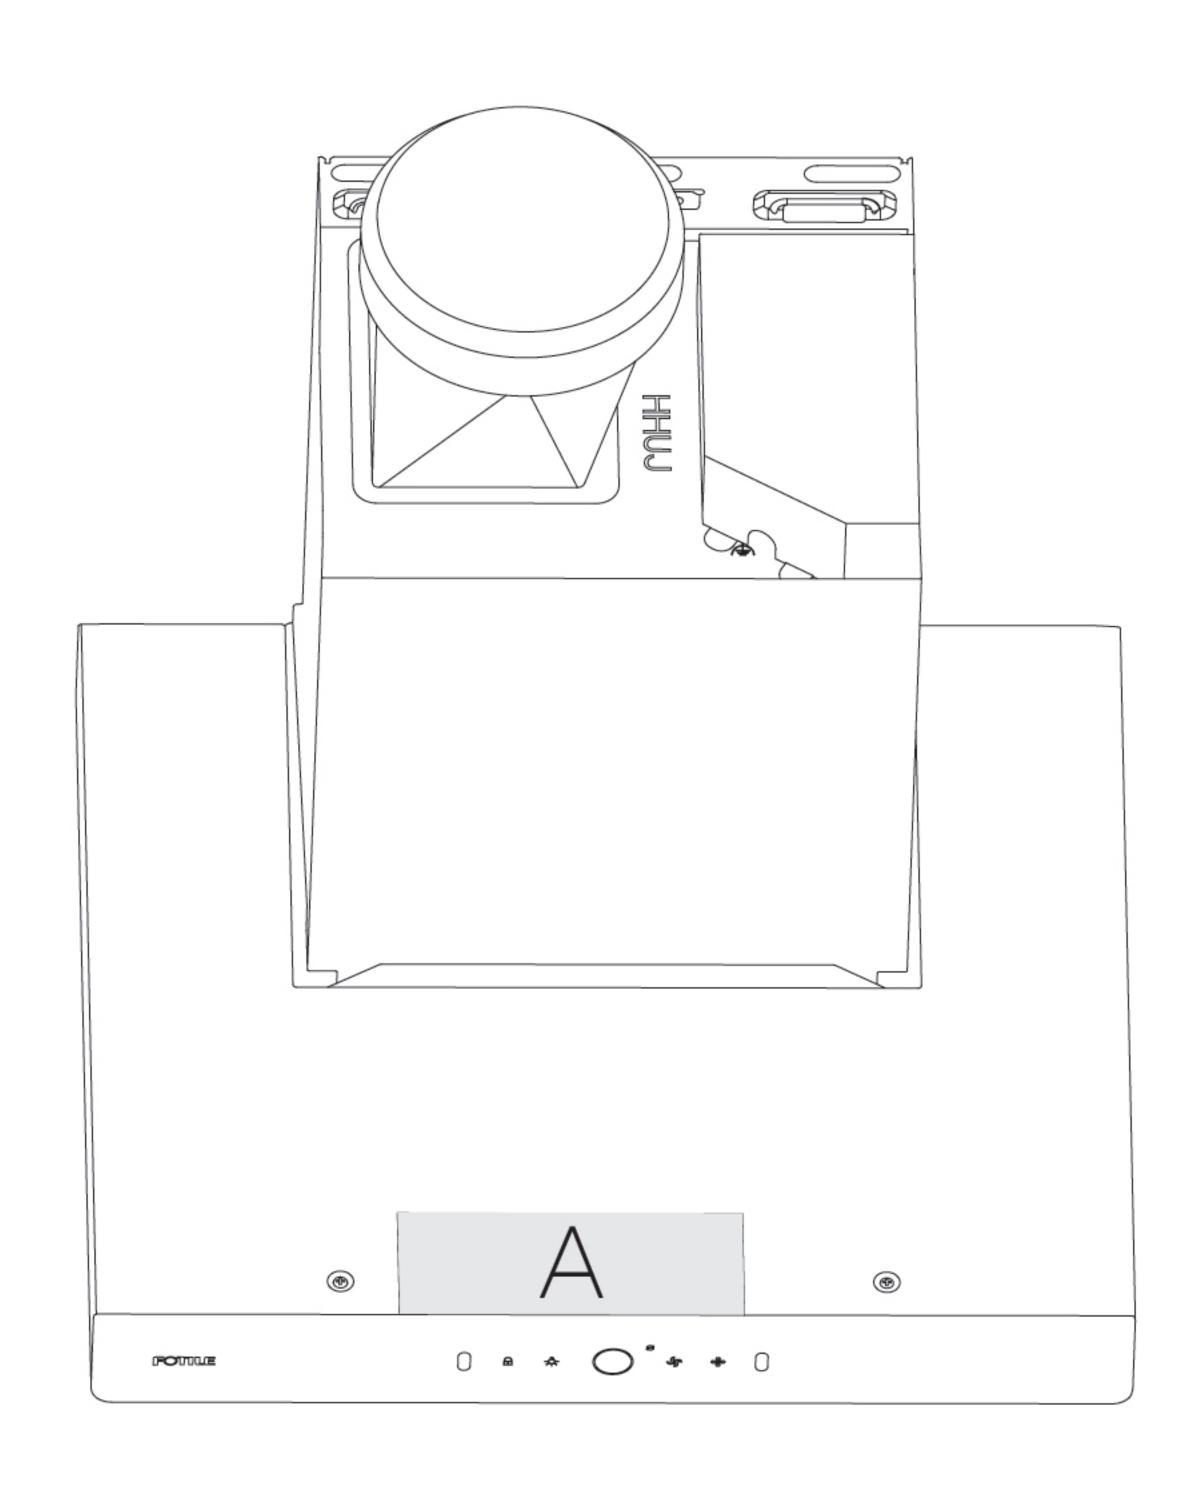

目錄

| 警告和安全説明 1 | | |
|-----------|------------------|--|
| 安裝 | 5 | |
| | 装箱單5 | |
| | 安裝警告6 | |
| | 産品尺寸圖7 | |
| | 安裝建議8 | |
| | 安裝步驟 10 | |
| | 安裝后的調試 13 | |
| | | |
| 清潔保養- | 14 | |
| 使用方法- | 15 | |
| | 主要技術參數 15 | |
| | 操作説明16 | |
| 常見故障的 | 的識别和處理 18 | |

產品特征和參數會在無通知情况下隨時更改,并且可能與此説明書略有不同。 請訪問我們的官網www.fotileglobal.com,獲取最新信息。



警告和安全説明

特别説明:

請嚴格按照本説明書規定使用,由于本産品不當使用造成的任何財産損失、人身損害,本公 司不承擔責任。

⚠警告:

器具不打算由存在肢體、感官或精神能力缺陷或缺少使用經驗和知識的人(包括兒童)使用, 除非有負責他們安全的人對他們進行與器具使用有關的監督或指導。

此產品不適用于(包括8歲以下兒童)身體、感知或精神能力减弱或缺乏經驗或知識的人群, 除非在對其安全負責的人監督或指導如何安全使用此產品的情况下(針對歐盟市場)。 應照看好兒童,確保他們不玩耍本器具。

注意: 當使用烹飪器具時, 易觸及部件可能會發燙。




- a. 請定期倒去積油,每次使用吸油烟機后,請擦拭吸油烟機外表面。b. 爲了更加舒適地使用,請經常對吸油烟機外表面和油杯進行清潔。
 - c. 如果不按説明書規定的方法清洗,吸油烟機有起火的危險。

| 接 地 | 插頭必須插在合理安裝并接地的電源插座上,以確保安全。接地綫不得與煤氣管、自來水管、避雷針、電話綫等連接。接地不良可能會引起觸電或其他事故。 |
|--|--|
| | 本器具含有僅用于實現功能用途的接地連接。 |
| The Market of the second of th | 由于本吸油烟機的安裝程序比較復雜,且重量較重,應由專業安裝維修人員按照説明書進行安裝。未按説明書要求安裝螺釘或固定裝置可能會導致觸電、脱落、起火等危險。 |
| | 使用此新產品之前請開封檢查此產品是否受損,如果發現此產品有明顯的損壞,請勿安裝使用,請您立即聯系方太授權的服務中心。 |
| Safety Guideline | 請遵照加熱設備廠家的安全指南,同時要遵照消防等管理 部門頒布的安全標准進行。 |


| >30mm | 安裝吸油烟機的墻壁要有足够的支撑强度,對于中空墻壁,中空板實心層的厚度必須大于30mm以上,對于混凝土墻壁可直接打安裝孔。整機必須牢固安裝在墻壁上。 |
|--|--|
| | 當在墻壁、天花板上進行切割或者鑽孔時,請注意不要損壞電綫以及其他隱藏的設備。 |
| | 本産品僅供家庭日常使用,請不要用于商業用途或在其它特殊環境中使用(例如:室外);也不能用來排出有危險的或者容易爆炸的物質或者氣體。如您在特殊環境中使用本産品,方太將不承擔責任。 |
| | 當吸油烟機與燃燒燃氣或其他燃料的器具同時使用時,房間必須通風良好(該條不適用于把氣體排回室内的器具)。 |
| ON CONTRACTOR OFF | 油鍋着火時,請立即關閉吸油烟機(吸油烟機的運行會助燃火勢)。采用有效的滅火方法滅火。例如,用金屬的蓋子將明火蓋住,立即關閉燃氣總閥門,并使易燃物遠離明火。 |
| | 出風管必須確保排到室外。爲了避免火灾的發生并保持空 氣清新,請將廢氣排到室外。請不要將廢氣排到墻內、閣 樓、車庫中(只適用于有出風管的吸油烟機)。 |
| T≤40°C | 吸油烟機使用環境的温度不能超過 40 ℃。 |
| EXTRACT WASHINGTON WASHINGTON PARAMETER HOLD CONTRACT CON | 請按照本説明書規定的方法清洗油烟機,否則吸油烟機有起火的危險。 |
| | 當油杯内的儲油達到油杯容積的三分之二時,請及時清理, 防止溢出。油杯中所收集的廢油請勿食用! |
| ON OFF CO. | 在移動吸油烟機進行安裝、清潔或者修理前,務必切斷電源,以免觸電;在進行安裝、清潔或修理時,應佩戴防護手套,以防被吸油烟機内金屬板快口傷手。 |



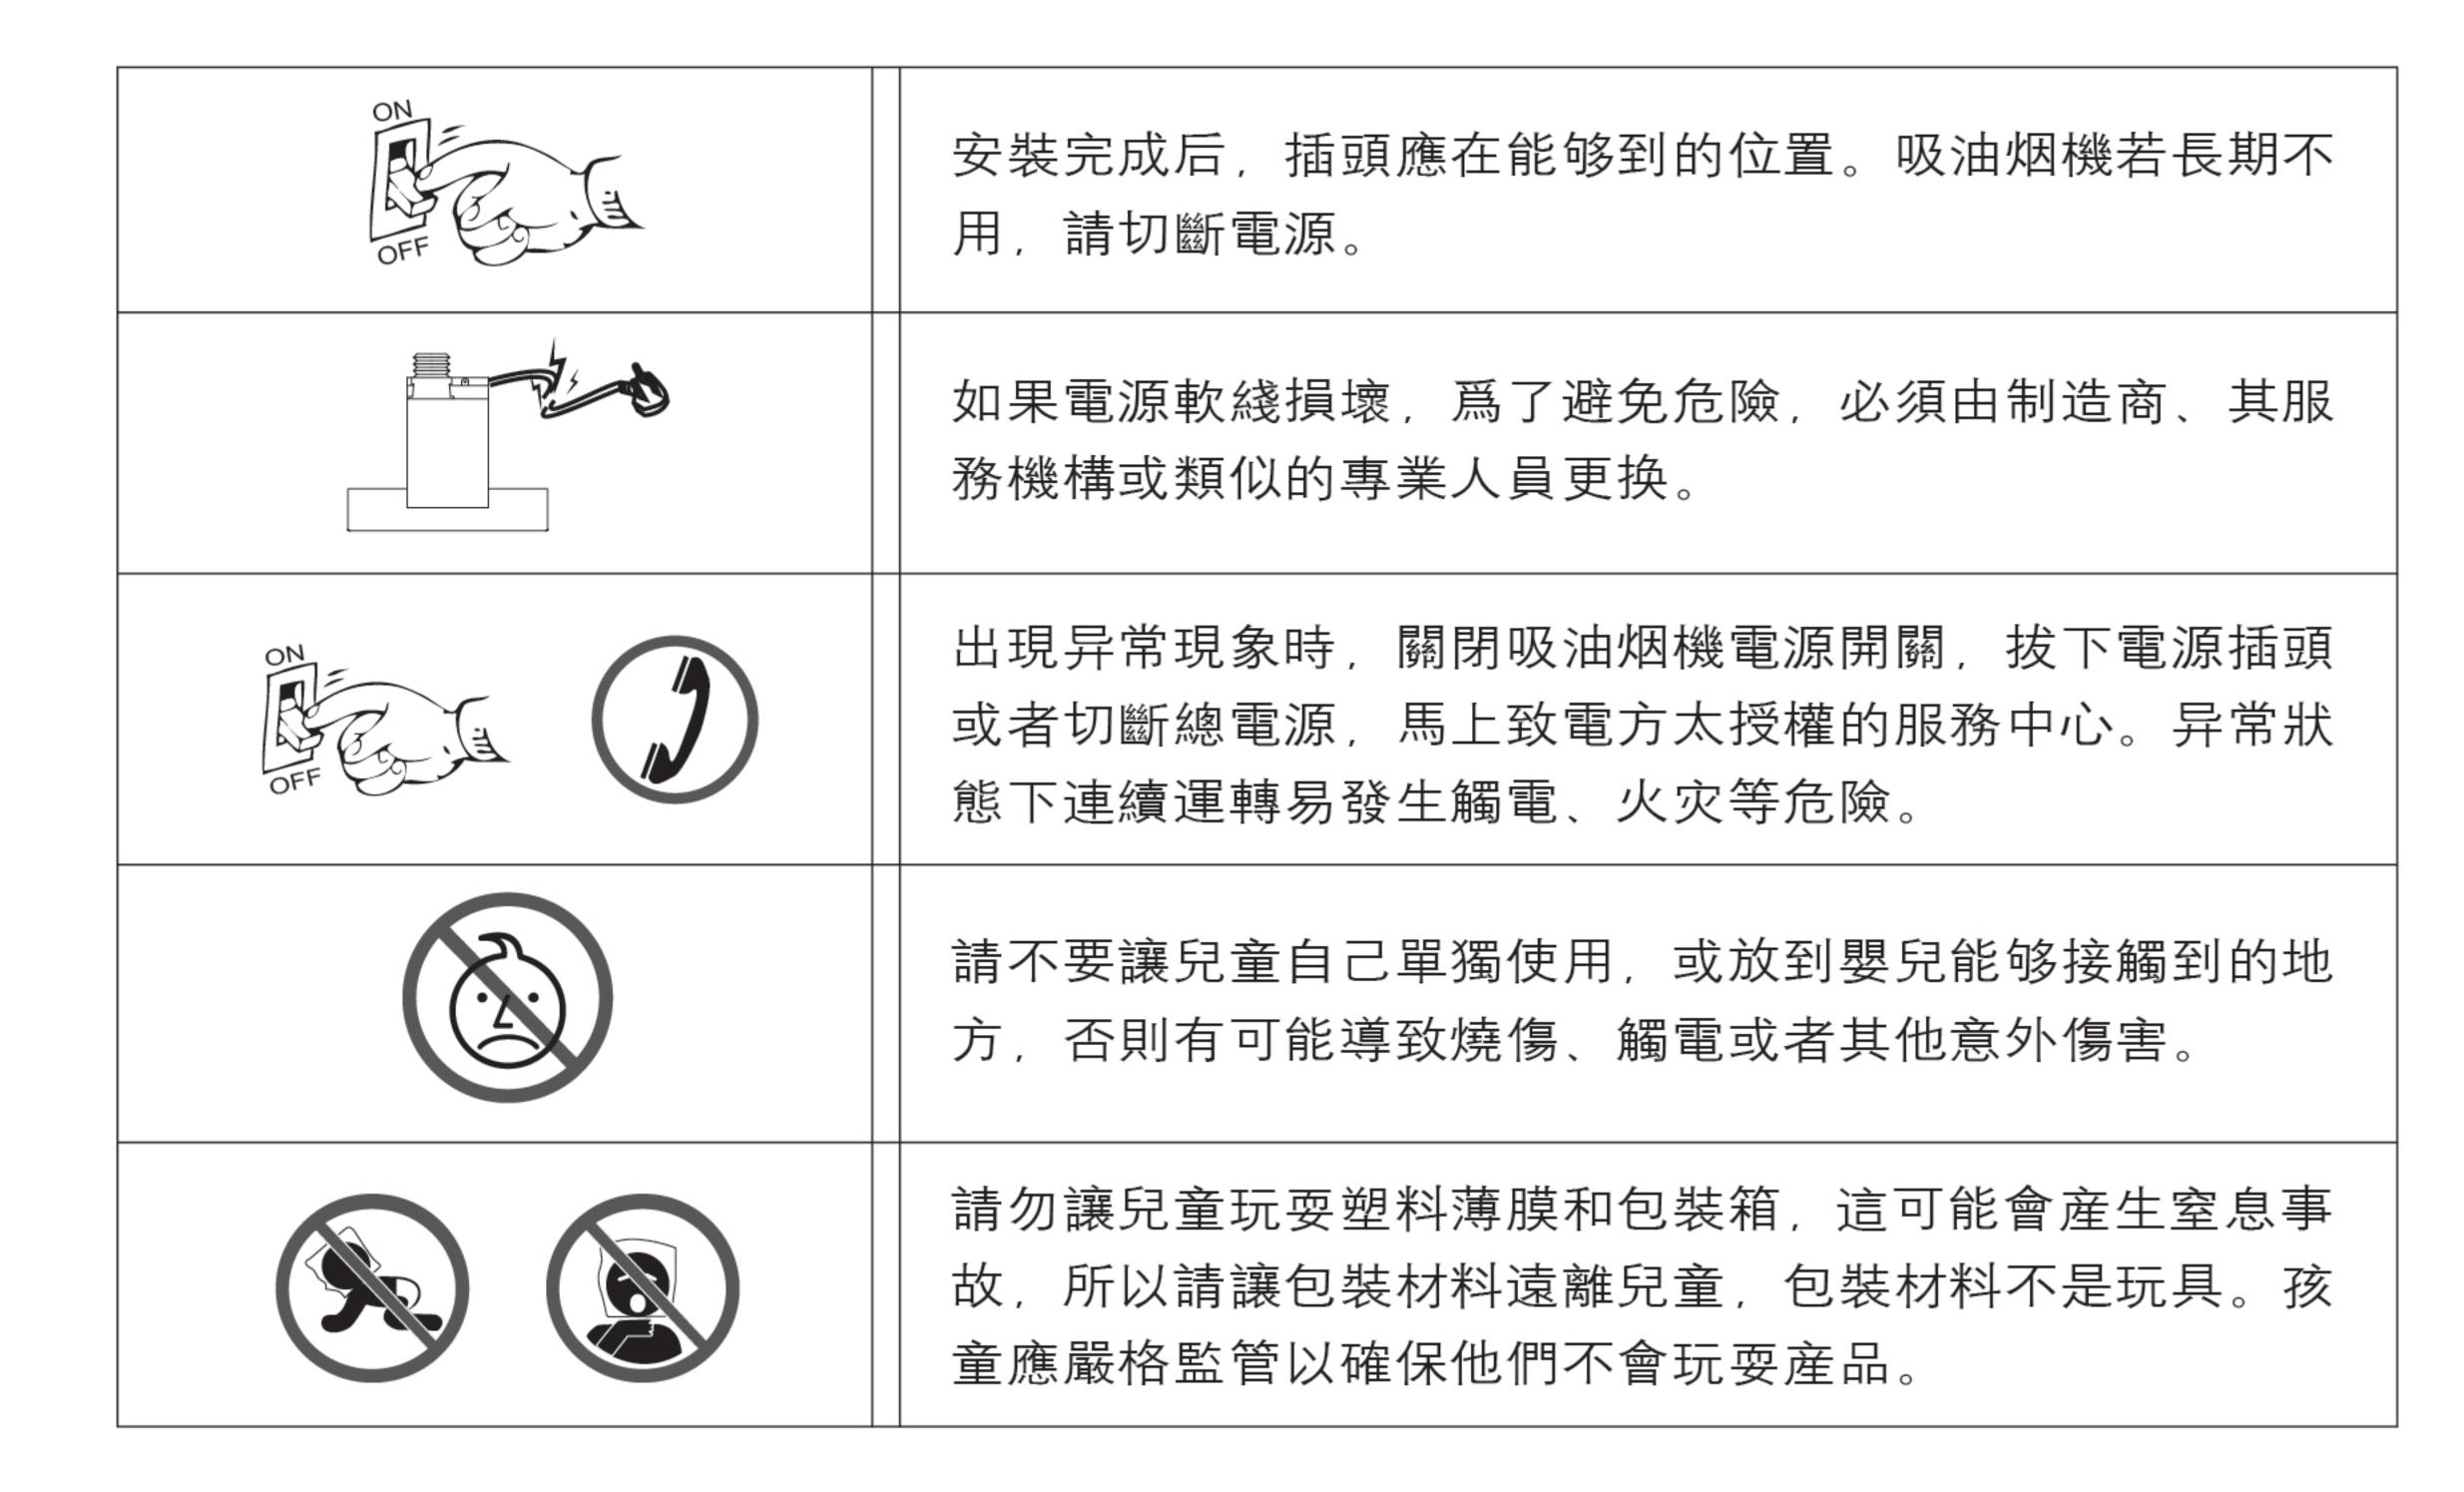


禁止



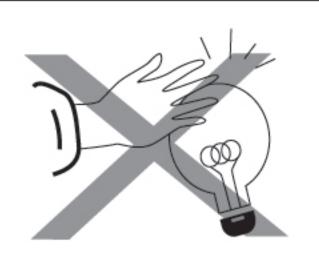

請勿觸摸已經開啓或者剛關閉不久的燈泡,以免燙傷。

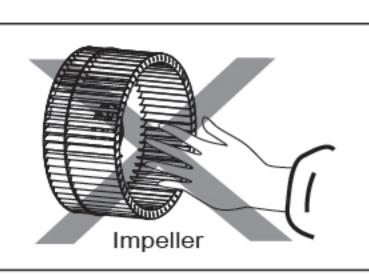

吸油烟機運行時不要將手或其他物品伸入葉輪中以免造成傷害。





嚴禁電機、開關、接插件等電氣部件沾水,禁止用水衝洗吸油烟機。吸油烟機被水淋濕后,請不要使用,如果使用會導致漏電、觸電等事故。



請不要用潮濕的手觸摸電源插頭、電器部件以及操作電源開關, 否則易發生觸電事故。



- a. 保修服務須由方太公司授權的服務機構或人員執行。如私自拆機維修,產品將不享受保修。
- b. 爲避免任何可能對產品的損害,請確保實際電壓和頻率與本説明書中闡明的一致
- c. 當吸油烟機與使用非電能的設備同時使用時,室内負壓不得超過4Pa(4x10-5bar)(針對德國市場)。
- d. 其他燃燒器具產生的燃燒氣體可能由于回流會對安全產生不利影響,這些氣體可能導致一氧化碳中毒,因此在安裝抽油烟機后,應由專業人員測試烟管,以確保燃燒氣體不會回流(針對澳洲市場)。
- e. 本公司產品上使用了鋼化玻璃,玻璃的鋼化機理决定這種玻璃存在極小概率的自爆。一旦發生非使用不當的自爆,我公司承諾免費提供該配件。鋼化玻璃在以下情况,發生破裂的幾率可能會大大提高,請避免發生:例如用炊具或其他硬物敲擊玻璃,特别是敲擊玻璃四個角部;打開油烟機周圍橱櫃門時撞擊到玻璃;玻璃處于過冷和過熱、冷熱交替嚴重的環境等情况。



安裝

裝箱單

| 主機(軸測圖) | 1 |
|-----------------------|---|
| 出風管 | 1 |
| 密封膠帶 | 2 |
| 挂鈎 | 1 |
| 木螺釘 ST4.5×60 | 6 |
| 膨脹管φ10×60 | 6 |
| 出風罩螺釘 M4×18mm | 8 |
| 風機架螺釘 M4×6mm | 2 |
| 出風管螺釘 ST3.9×9.5mm | 4 |
| 裝飾罩挂鈎螺釘 ST2.9×19mm | 2 |



安裝警告

<u>注</u> 注



建議厨房裝修完成后再安裝吸油烟機。



如果安裝吸油烟機前需要移動燃氣電,請在移動前關閉燃氣閥門。



確保吸油烟機安裝的墻面平整, 吸油烟機必須保持水平。



安裝吸油烟機后,請確保機器能够正常運行,并仔細閱讀和保存好產品使用説明書。



新油烟機的包裝:請以環保的方式處置這些包裝材料,保持一個良好的環境。請勿讓兒童玩耍塑料薄膜和包裝箱,這可能會產生窒息事故,所以請讓包裝材料遠離兒童,包裝材料不是玩具。



爲了保護環境,請妥善處理不能 使用的舊油烟機。



吸油烟機較重,且安裝過程復雜,因此請聯系專業人員按照產品使用 説明書安裝。



吸油烟機可能有非常鋒利的邊, 在進行安裝、清潔或修理時,請 佩戴合格的防護手套,謹防被吸 油烟機內金屬板快口等劃傷和擦 傷。



在墙上或天花板上開鑿或鑽孔時,請注意不要損壞電綫和其他隱藏的設備。安裝時請切斷吸油烟機電源。



嚴格執行

請使用專用電源插座,并且專用電源插座應有可靠接地。



安裝吸油烟機的墻壁要有足够的支撑强度,否則吸油烟機可能掉落損壞。



出風管必須確保排到室外。爲了避免火灾的發生并保持空氣清新,請將廢氣排到室外。請不要將廢氣排到當內、閣樓、車庫中。(只適用于有出風管的吸排別烟機)器具排出的氣體不應排到用于排出從燃燒燃氣或其他燃料的器具中產生的烟氣的烟道中(該條不適用于把氣體排回室內的器具)。



墻面安裝


安裝吸油烟機的墻壁要有足够的支撑强度,對于中空墻壁,中空板實心層的厚度「必須大于30mm以上,對于混凝土墻壁可直接打安裝孔。整機必須牢固安裝在墻壁上。




產品尺寸圖

EMG6018




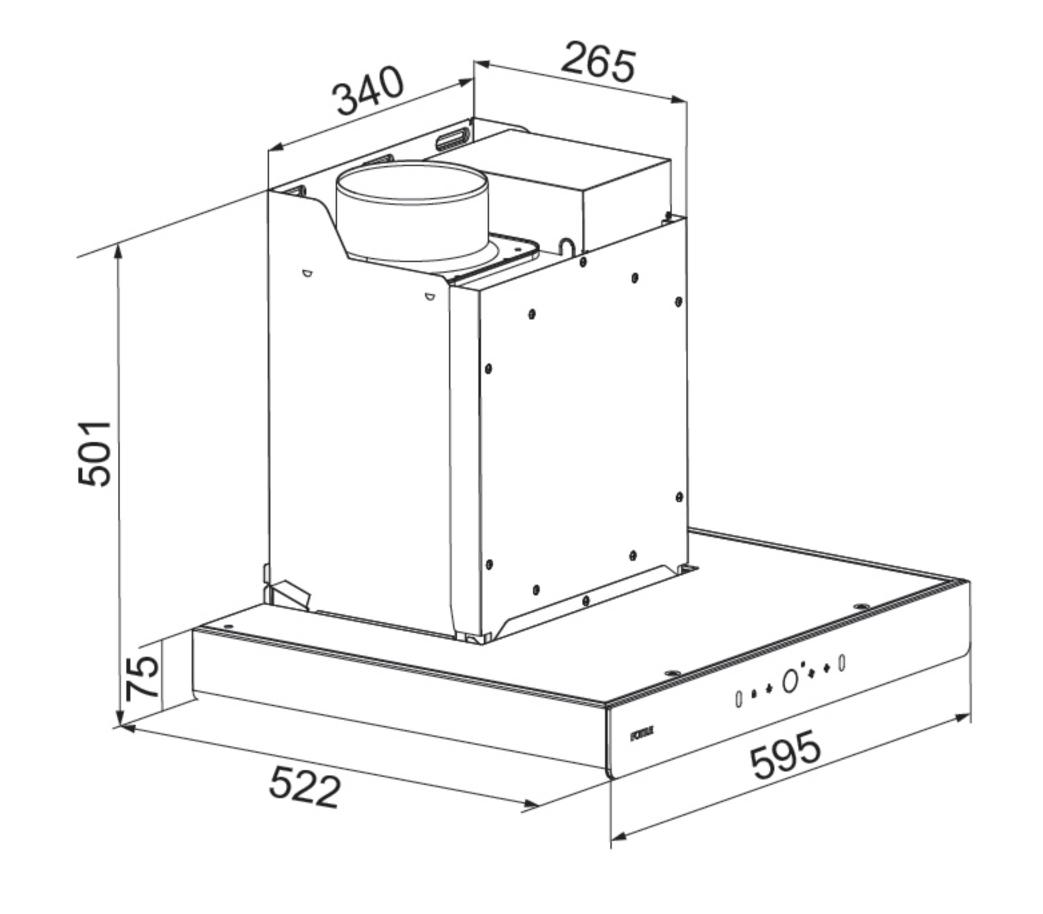

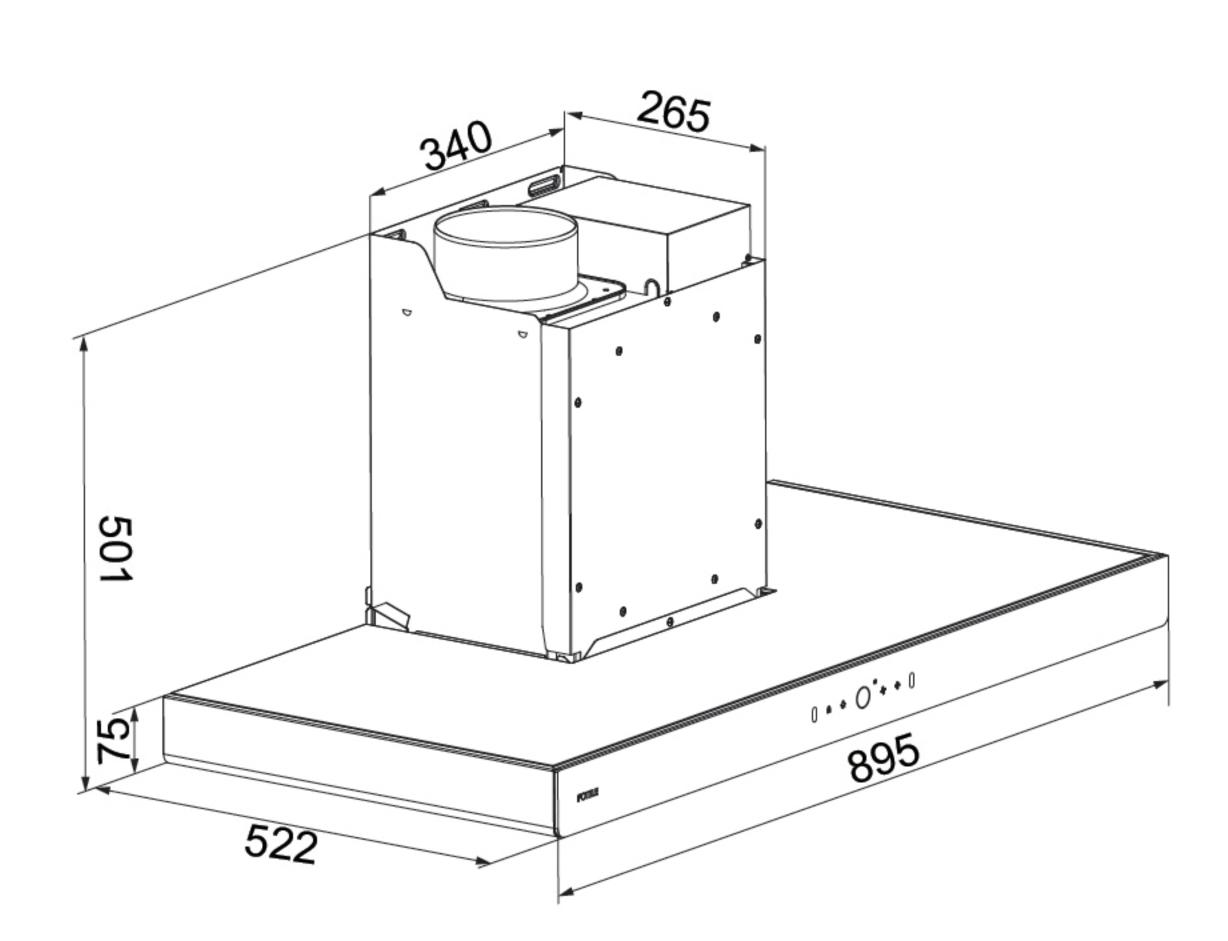

EMG6018-C

EMG9008-C

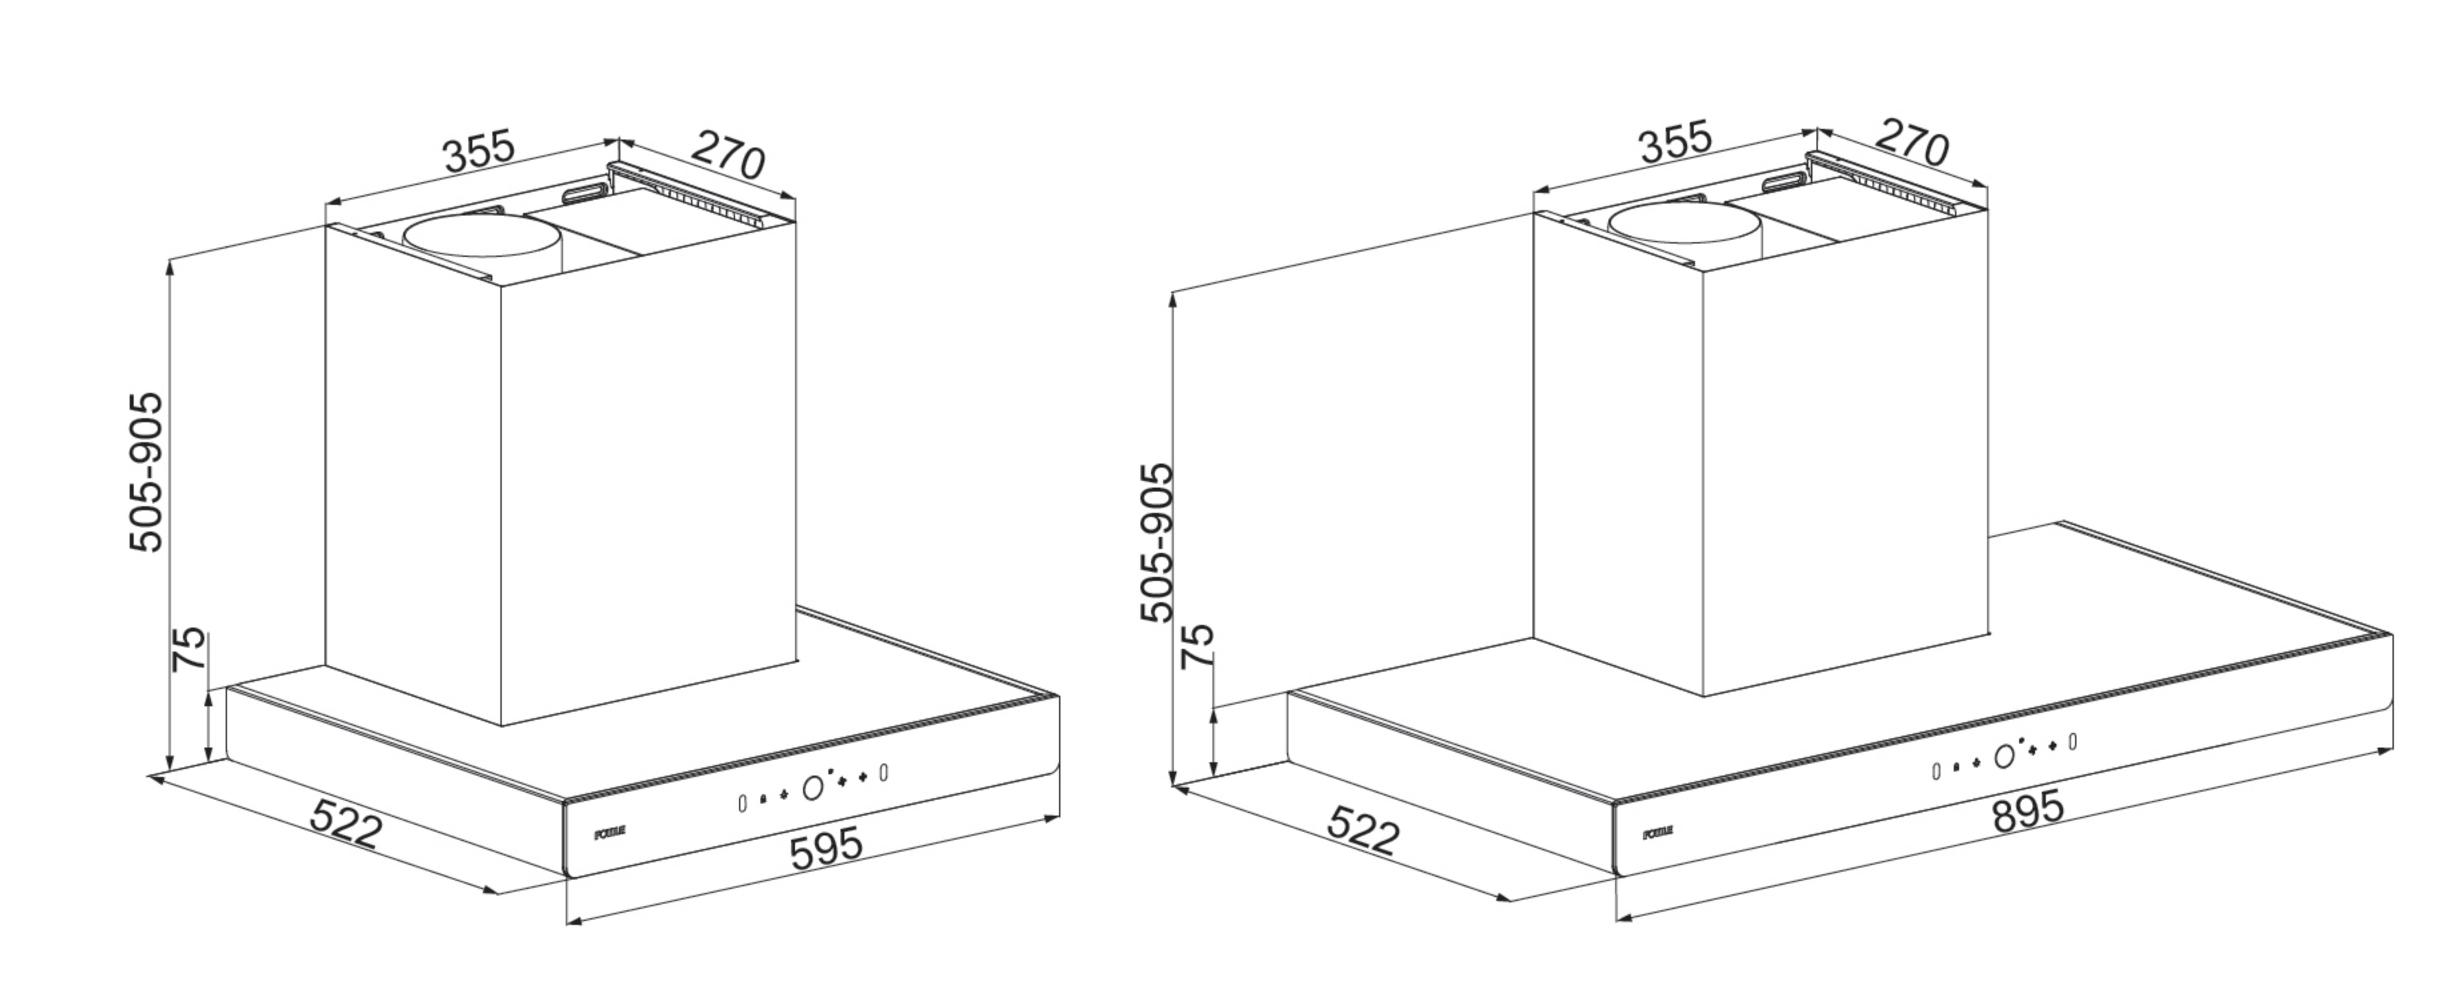

産品基本尺寸(單位: mm)

安裝建議

■ 安裝位置

- 1. 該吸油烟機只能安裝于家庭厨房,請勿在其他場合使用該吸油烟機。
- 2. 吸油烟機必須安裝在爐竈的上方,吸油烟機必須保持水平。
- 3. 吸油烟機周圍環境的温度不能超過40°C。
- 4. 安裝墻面應爲不可燃物,嚴禁安裝在木質等易燃的墻面上。


■ 吸油烟機與橱櫃安裝示意圖(單位: mm)


吊頂或橱櫃開孔尺寸


外排式安裝示意圖

EMG6018/EMG6018-C


EMG9008/EMG9008-C

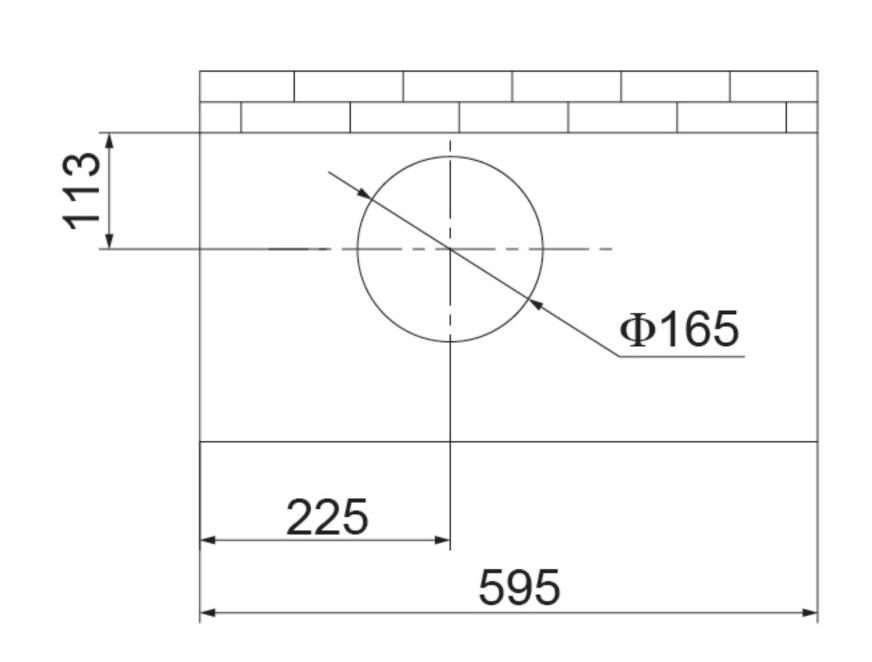

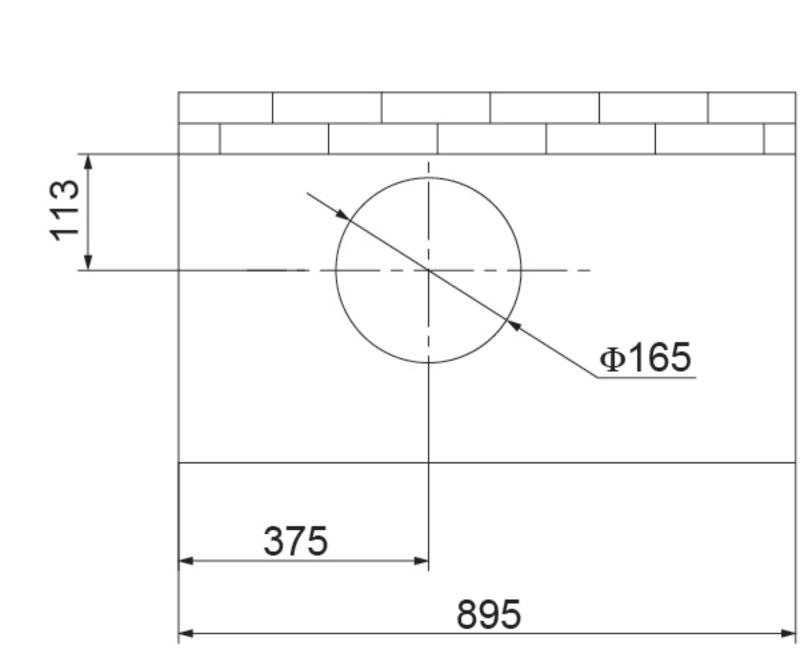

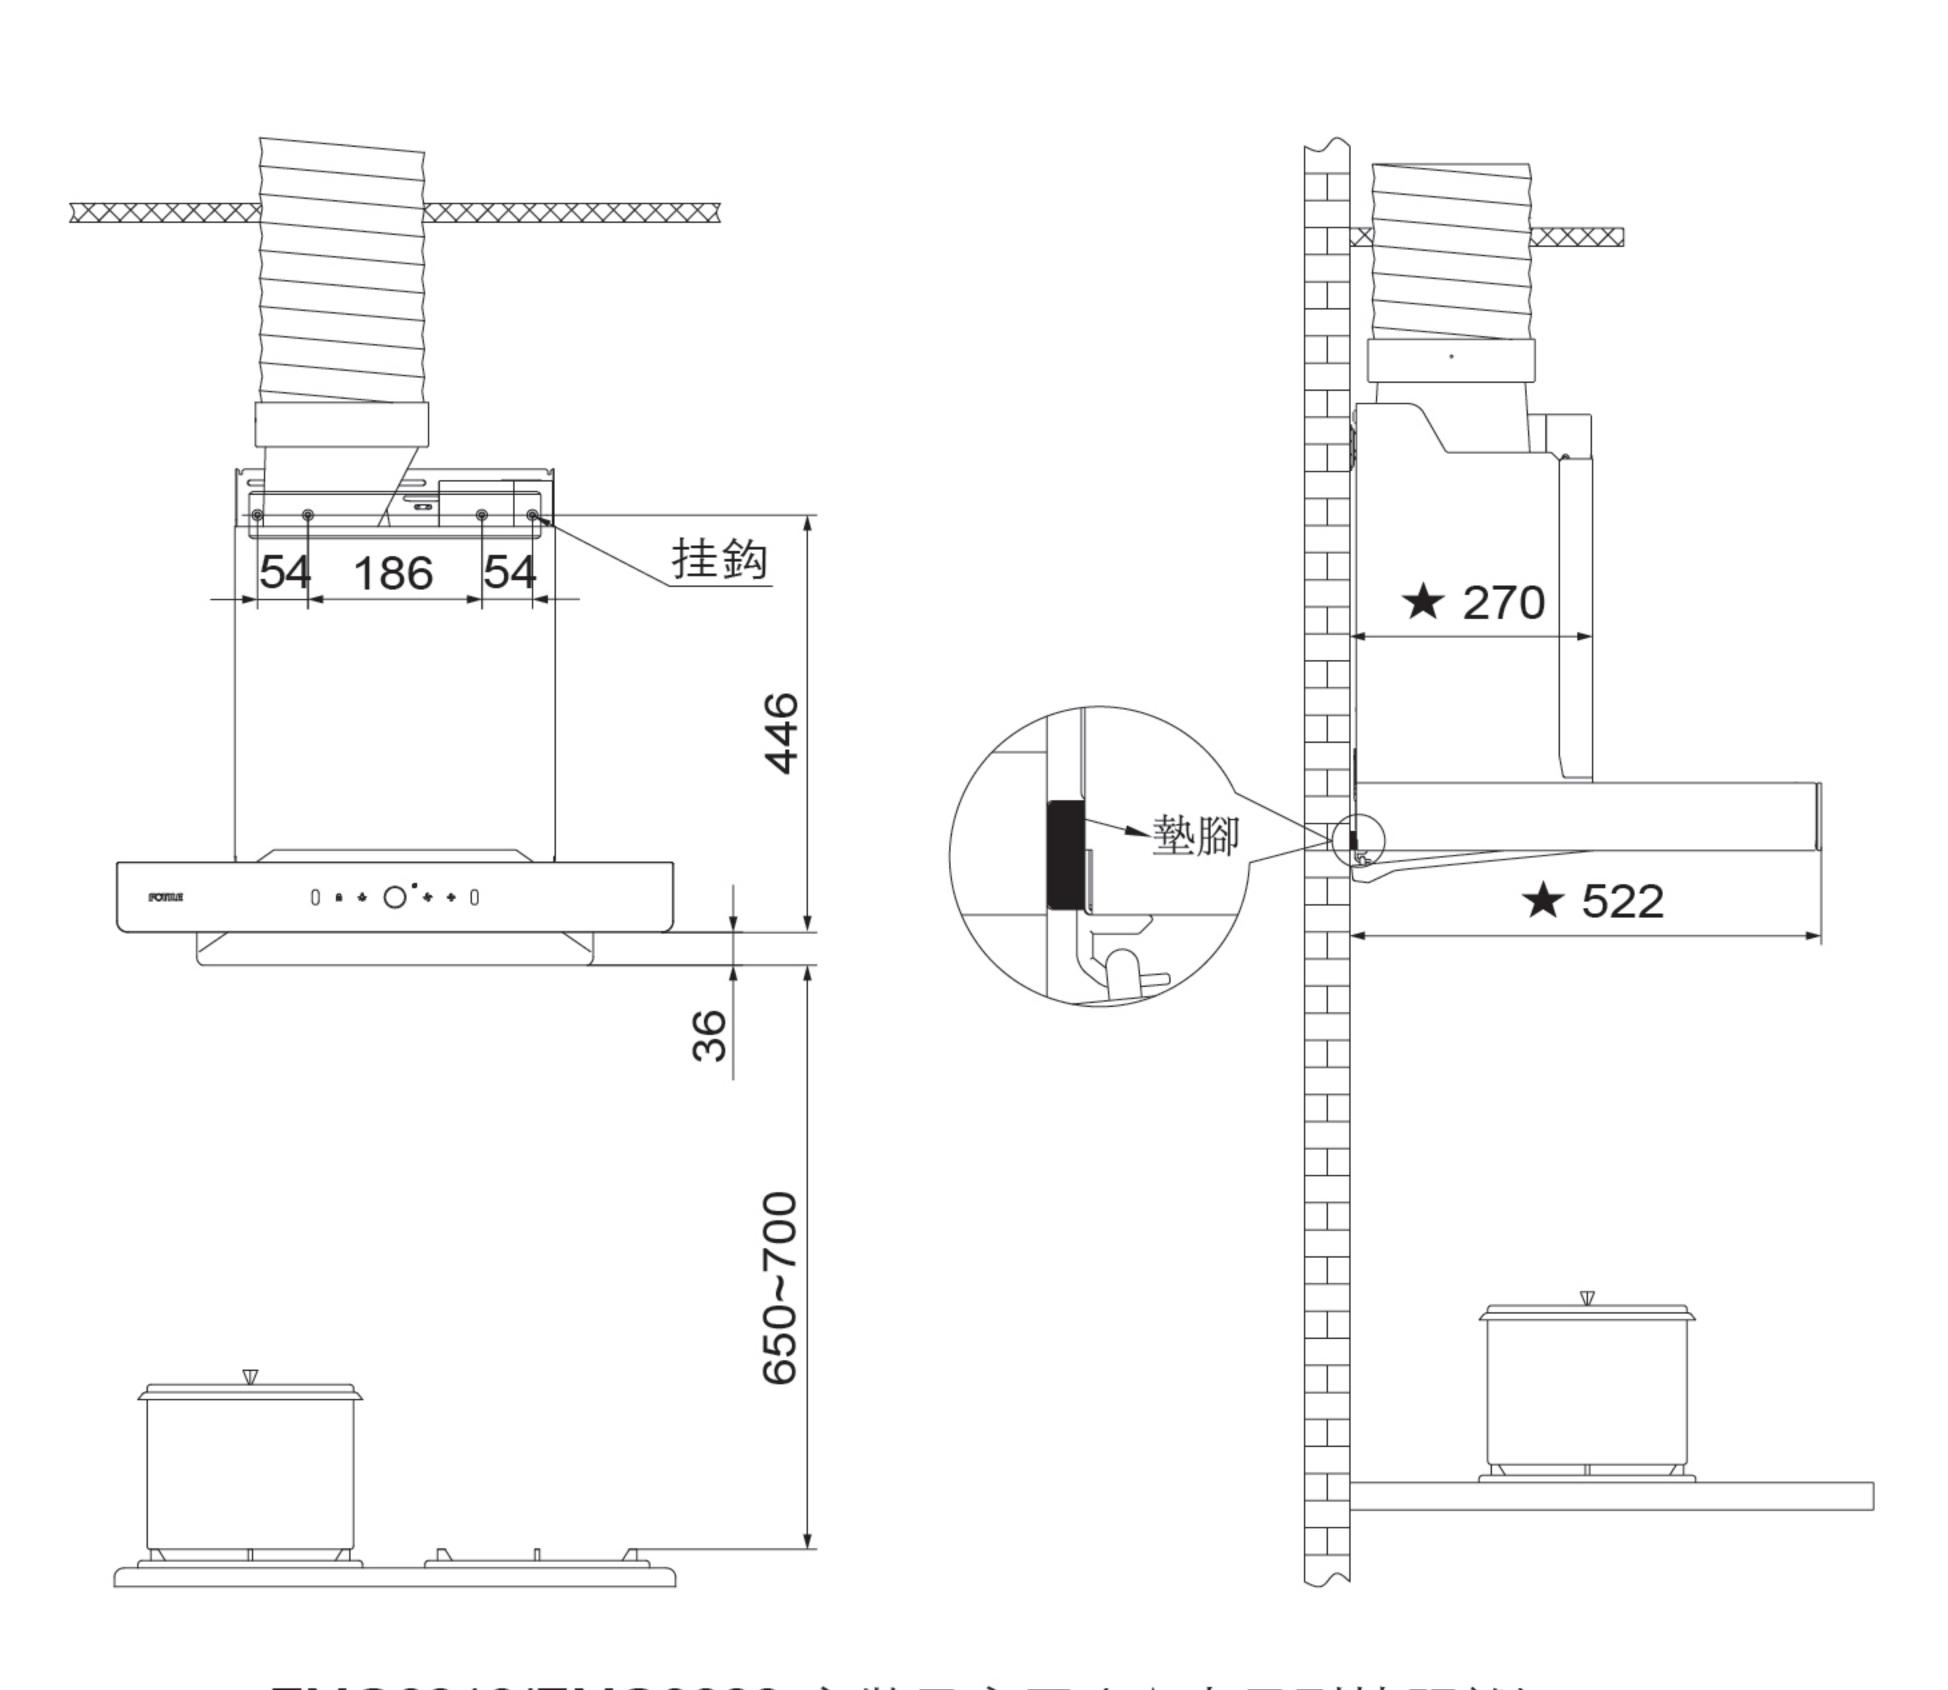

EMG6018/EMG9008 安裝示意圖 (★表示到墻距離)

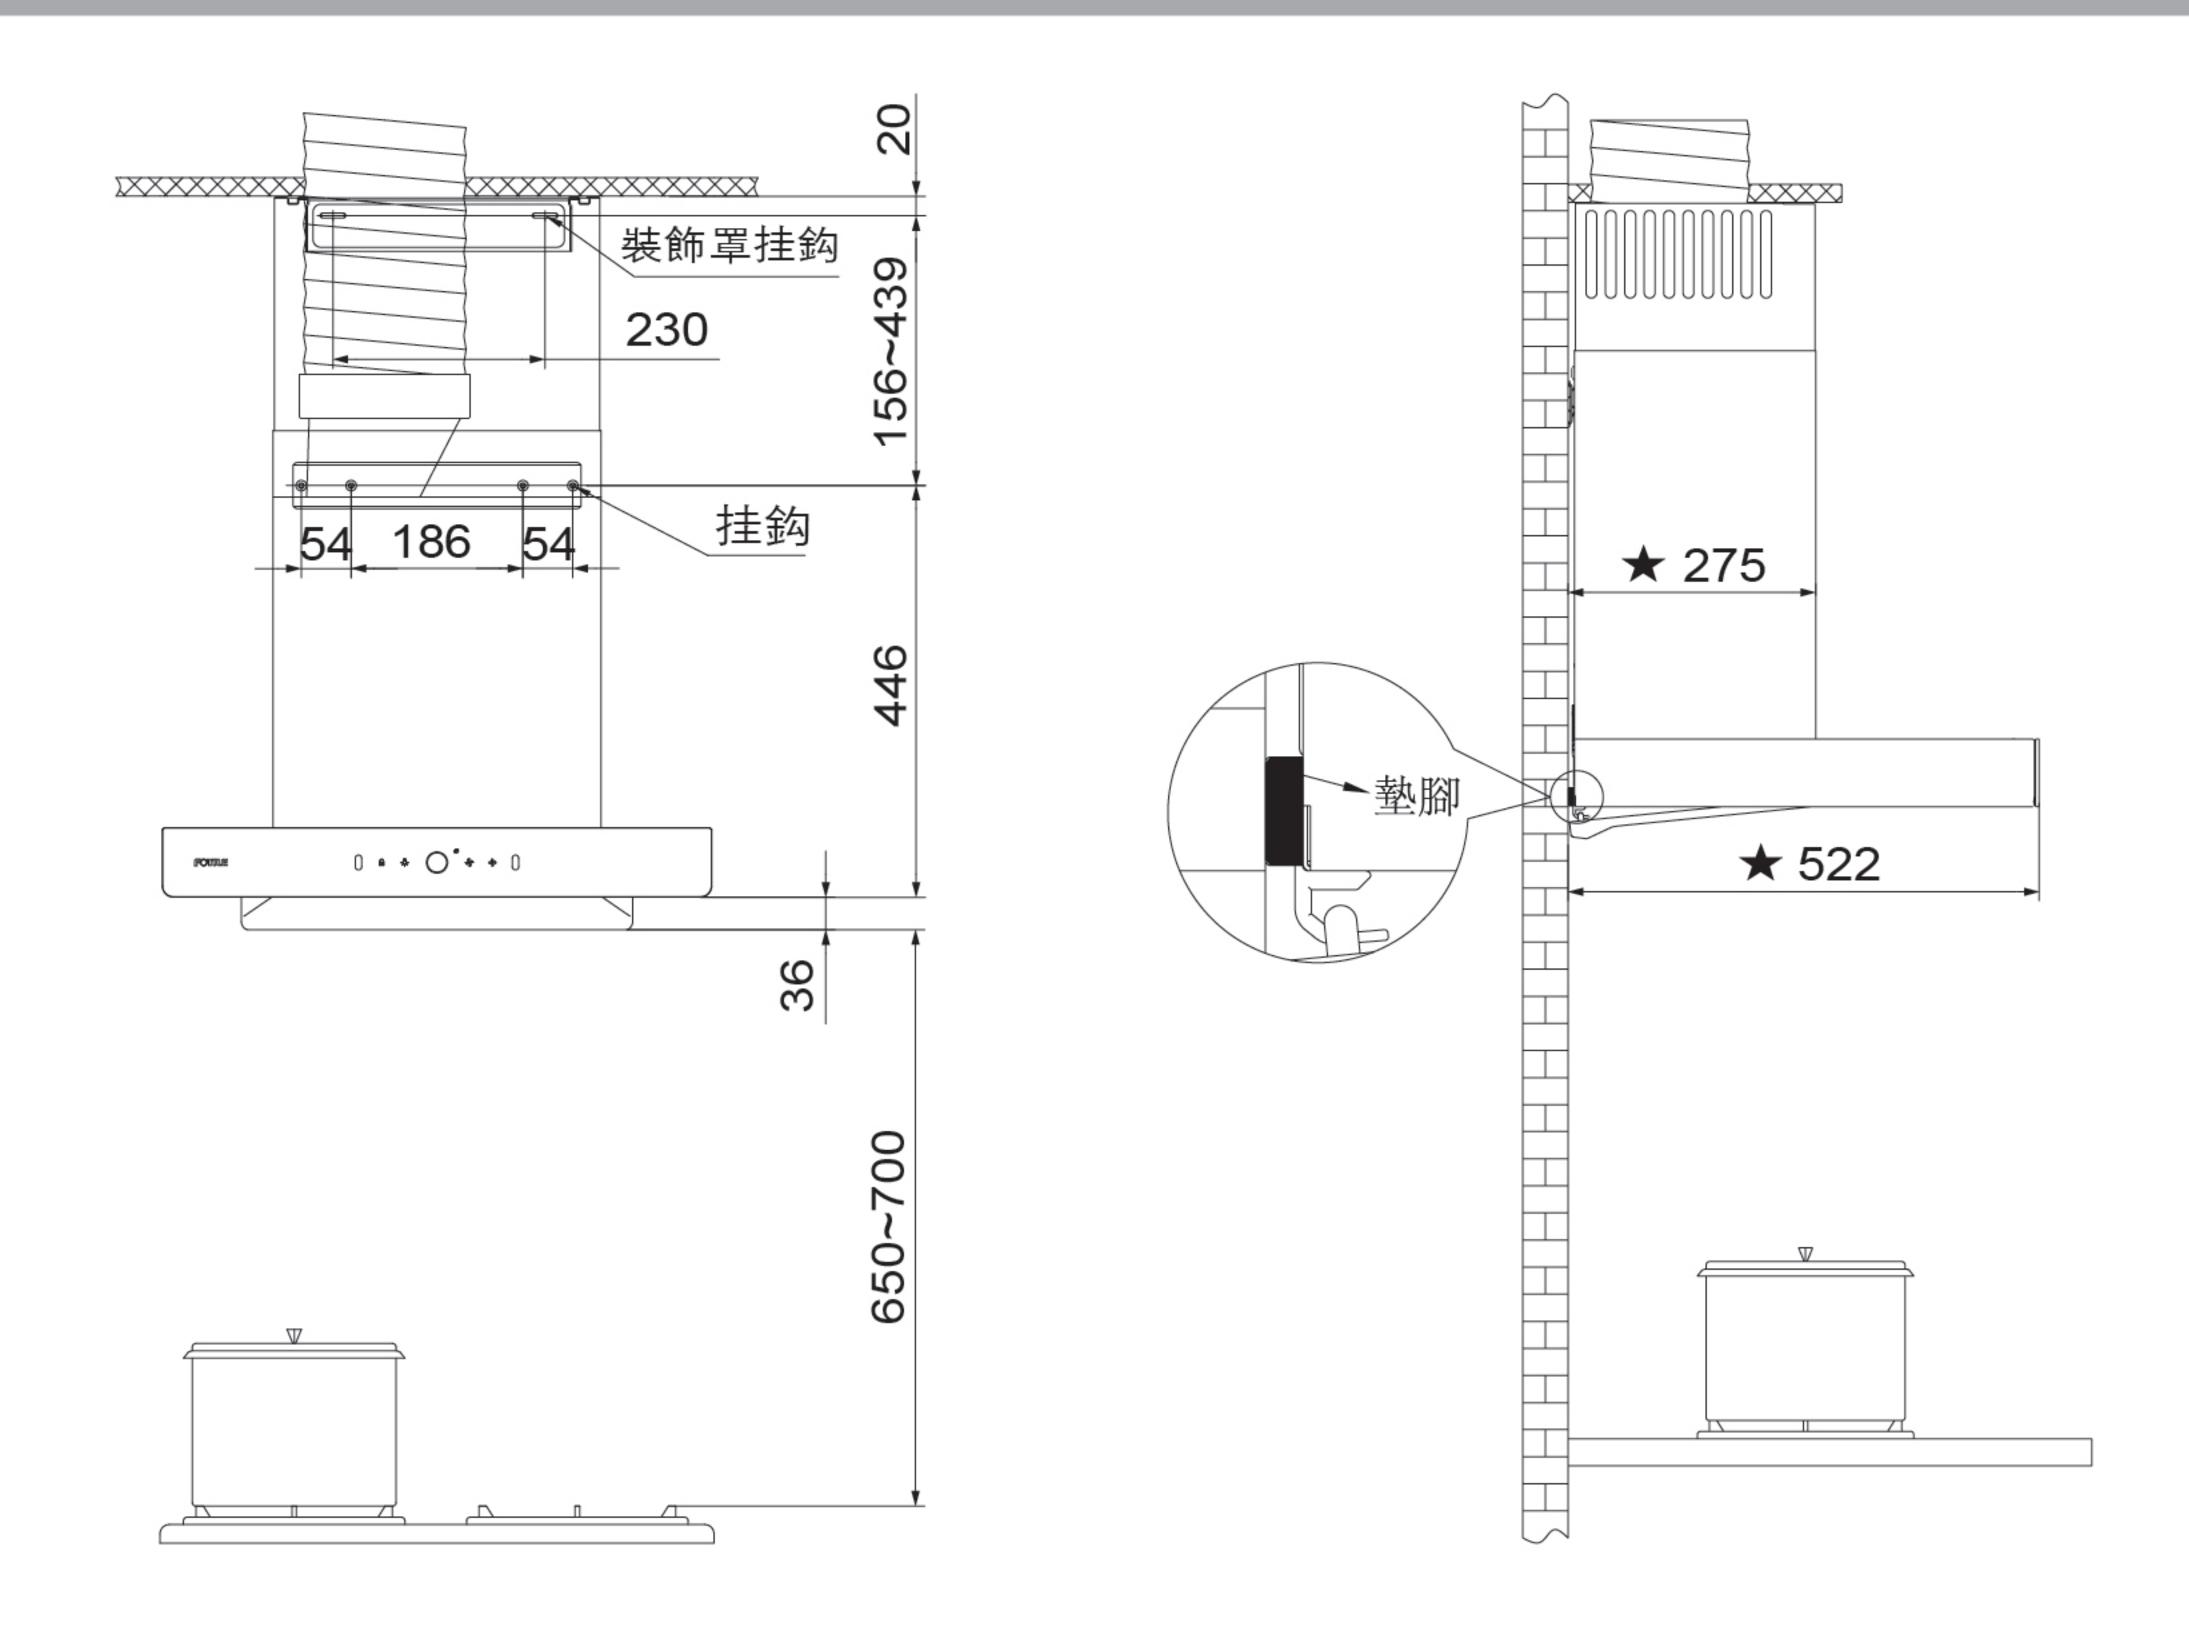

EMG6018-C/EMG9008-C安裝示意圖(★表示到墻距離)



注意:

吸油烟機的安裝高度(即爐竈上烹飪器具的支承面與吸油烟機最低部位的距離)不得低于650mm。

如燃氣爐竈安裝説明規定了較大的安裝距離則對此應予考慮。爲保證吸油烟效果,請在推薦安裝高度內安裝吸油烟機。若實際安裝高度超過推薦安裝高度,則產品的吸油烟效果可能會受到一定影響。如所屬地區有相關法律規定油烟機安裝高度,建議遵守相關法律。

■ 安裝前的准備工作

- 1. 警告:
- (1) 爲了不對吸油烟機造成損害,請確保不要讓雜物等進入排風口。
- (2) 估算吸油烟機通到室外的出風管的位置,參見安裝示意圖。
- (3) 一個直綫的、較短的出風管將使得吸油烟機的排烟更加順暢。
- (4) 出風管與墻孔的連接處使用管道膠帶嚴格進行密封。必須確保出風管與出風罩連接牢固。
- (5) 墙洞過小會影響排烟效果,在保證安全的前提下,建議擴孔至出風管尺寸。
- 2. 工具准備

安裝本吸油烟機應具備以下工具(包括并不限于以下工具)

(1) 衝擊電鑽 (帶鑽頭φ10)


(2) 十字螺絲刀


(3) 卷尺

(4) 水平尺


安裝步驟


- 1. 打開包裝箱拿出主機,清點裝箱清單。(裝箱清單見P5)
- 2. 取下風機外罩、裝飾罩:用螺絲刀取下主機背后固定風機外罩的2顆螺釘,然后雙手抓住風機外罩和裝飾罩向上取出。(僅限EMG6018-C/EMG9008-C)

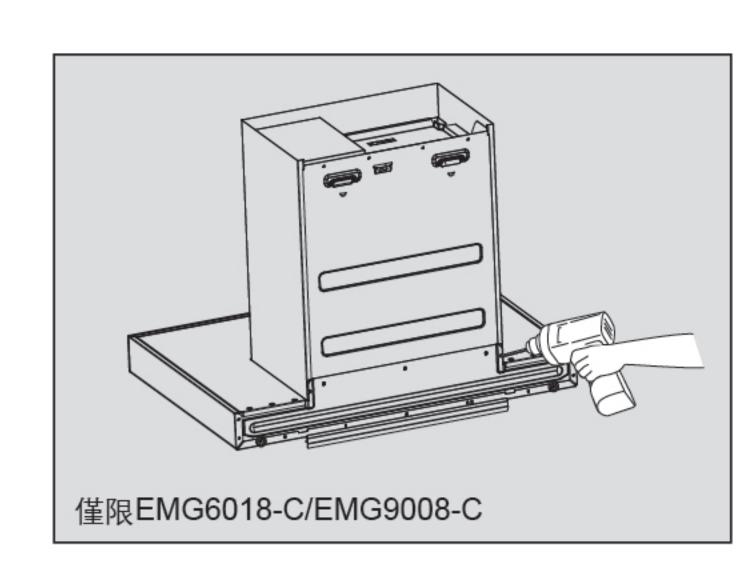

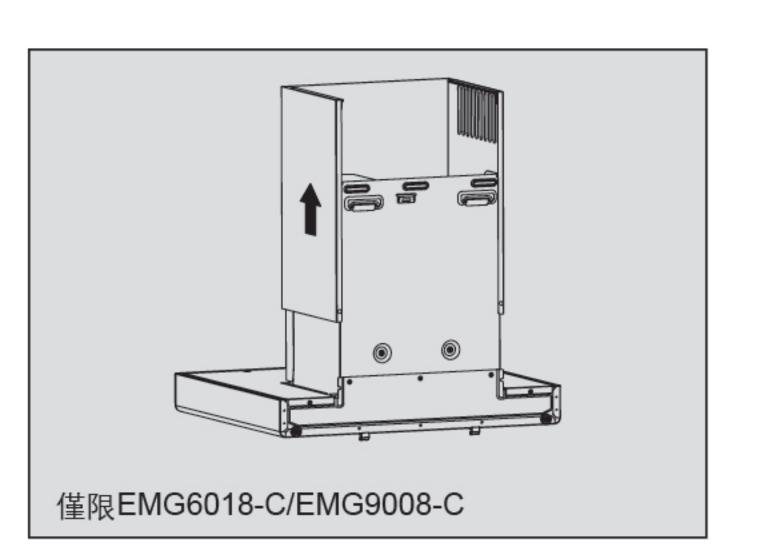


3. 如安裝示意圖所示,在打孔標識處用電鑽打φ10mm孔,并埋設膨脹管,用挂鈎螺釘固定 挂鈎,并用水平尺確保挂鈎水平。針對EMG6018-C/EMG9008-C,裝飾罩挂鈎可用2顆裝 飾罩挂鈎螺釘挂定到吊頂上。

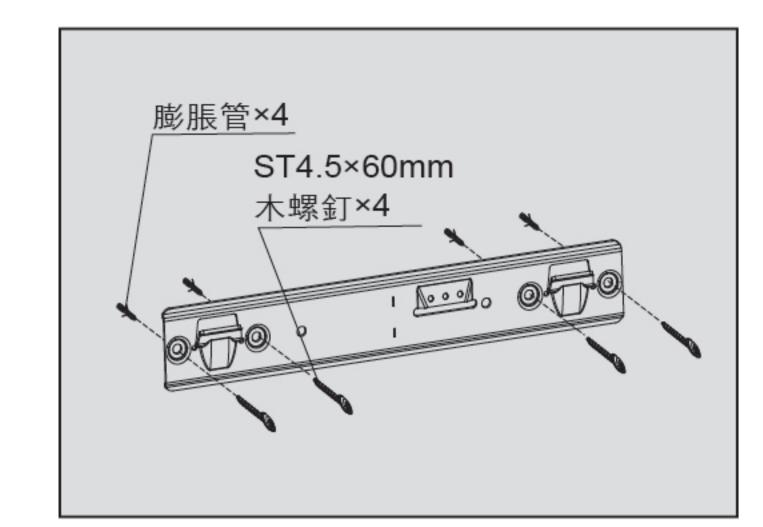


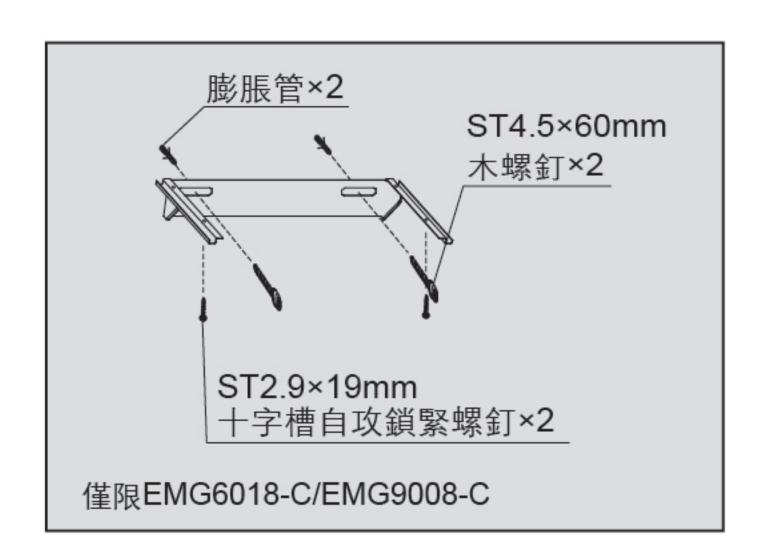

4. 如圖所示,用8顆M4×18mm出風罩螺釘將出風罩及密封圈固定在主機頂部上。

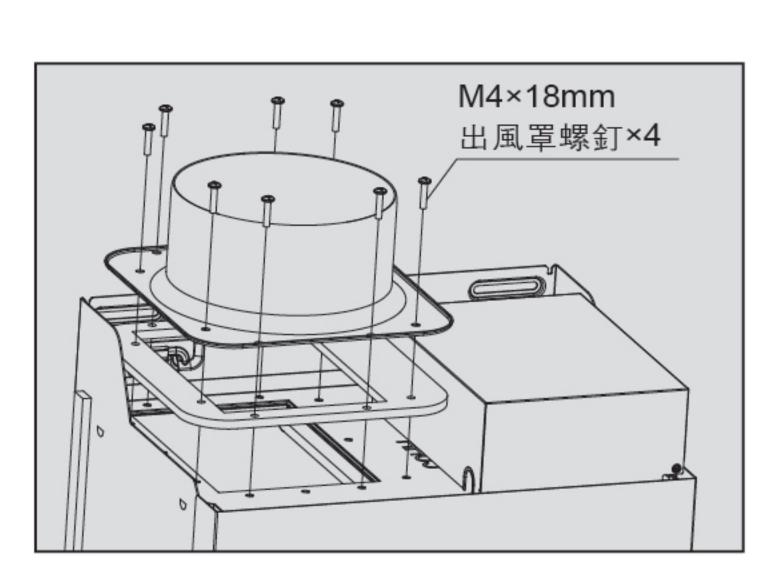


5. 布置出風管: 鋁箔出風管與預留的烟管或墻孔間須密封嚴密以防漏烟, 烟管不能擠壓變形、 小角度轉彎、轉彎數量不超過2個, 烟管須拉直并固定。

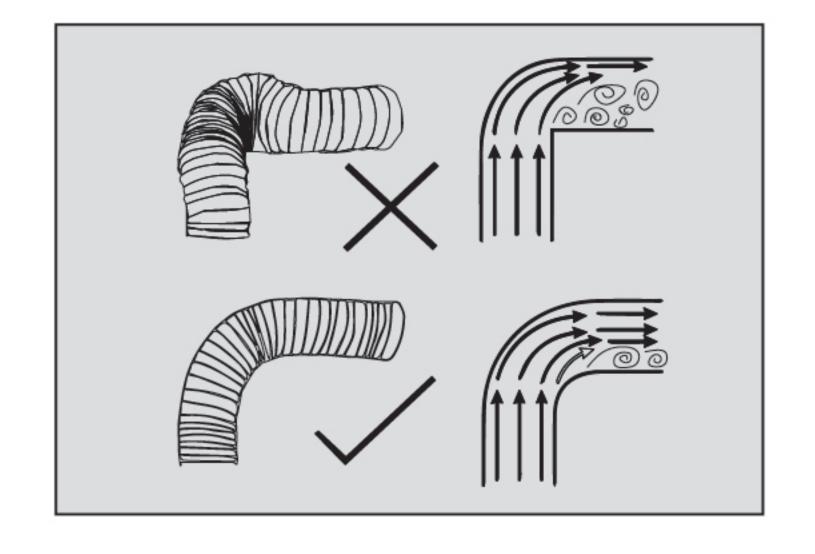


6. 抬起主機,將背部挂鈎孔挂入挂鈎,用水平尺確認主機水平,并用風機架螺釘M4×6mm將 風機架與挂鈎固定。


FOTILE

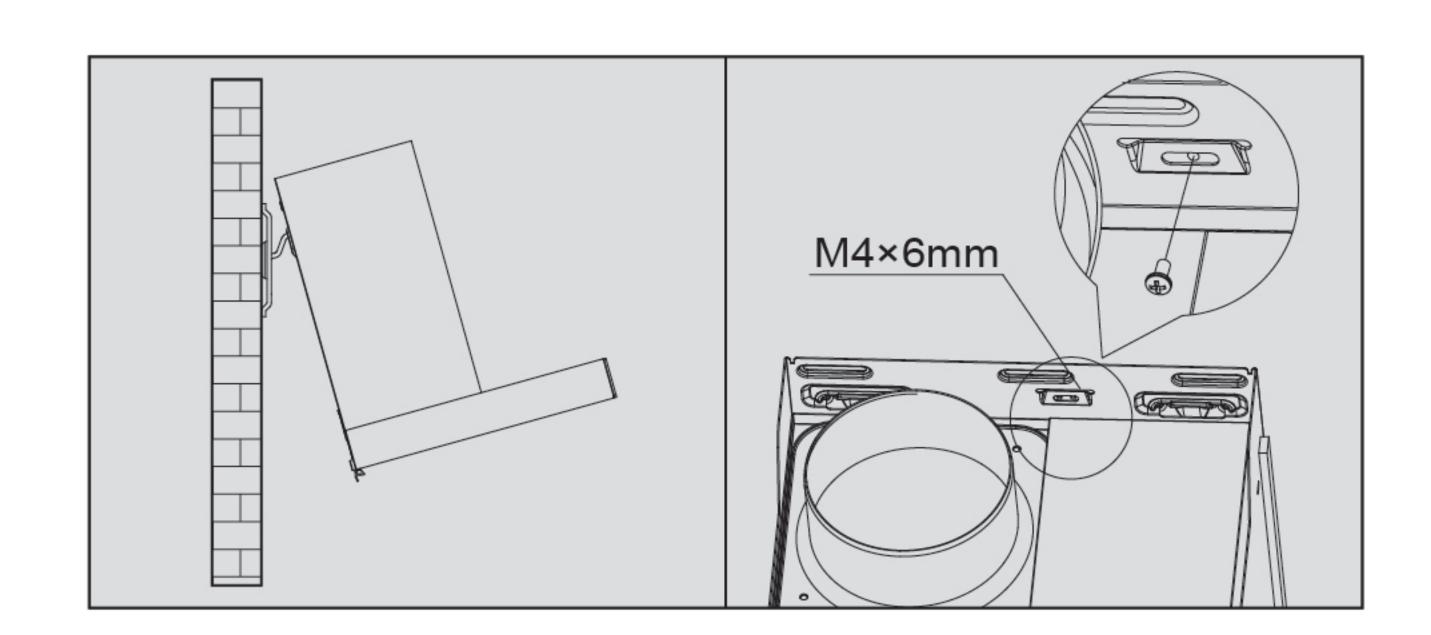



7. 連接出風管:根據實際距離剪去多余出風管或補接烟管,把烟管套進出風罩連接圈,最后用密封膠帶纏繞固定密封好。把油烟機的電源綫插到插座上,通電后開風機檢測是否有漏風。

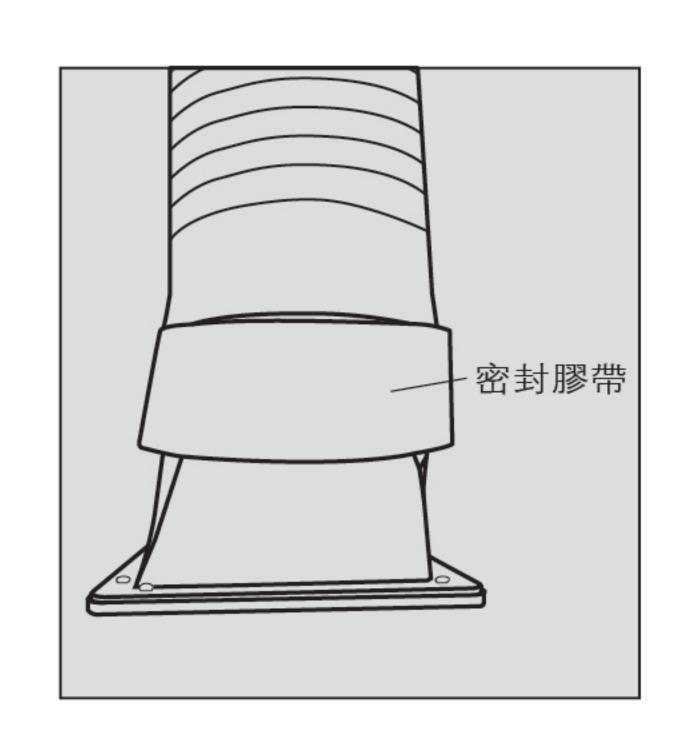


- 8. 風機外罩、裝飾罩安裝: (僅限EMG6018-C/EMG9008-C)
 - (1)把風機外罩、裝飾罩表面保護膜撕掉;
 - (2)將裝飾罩放入風機外罩;
 - (3)把風機外罩、裝飾罩同時拿起,先把裝飾罩卡入裝飾罩挂鈎内,然后同時將裝飾罩、風機外罩沿裝飾罩挂鈎組件推到底;
 - (4)把裝飾罩、風機外罩推到底后,風機外罩緩緩滑下來,將風機外罩卡扣卡入風機架,然 后將風機外罩插入頂板與風機架的間隙內。

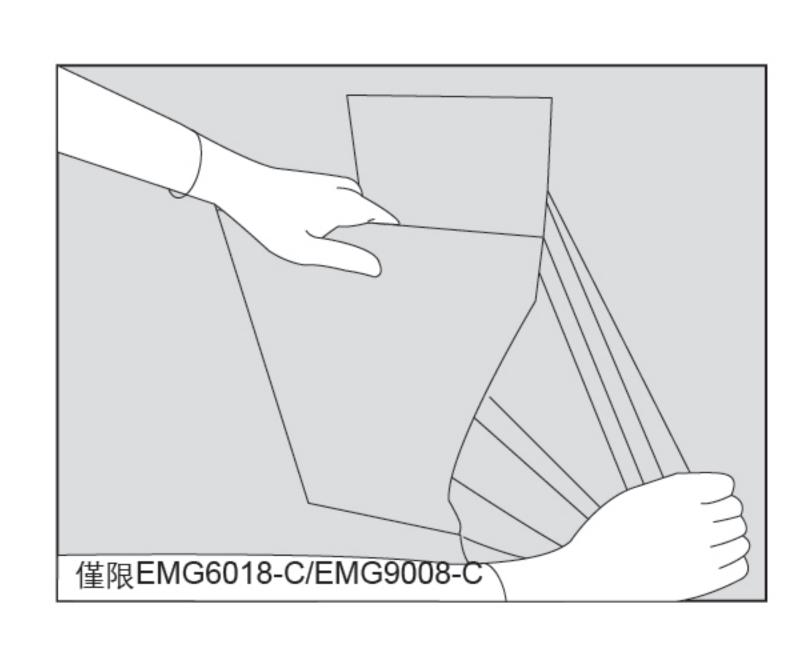


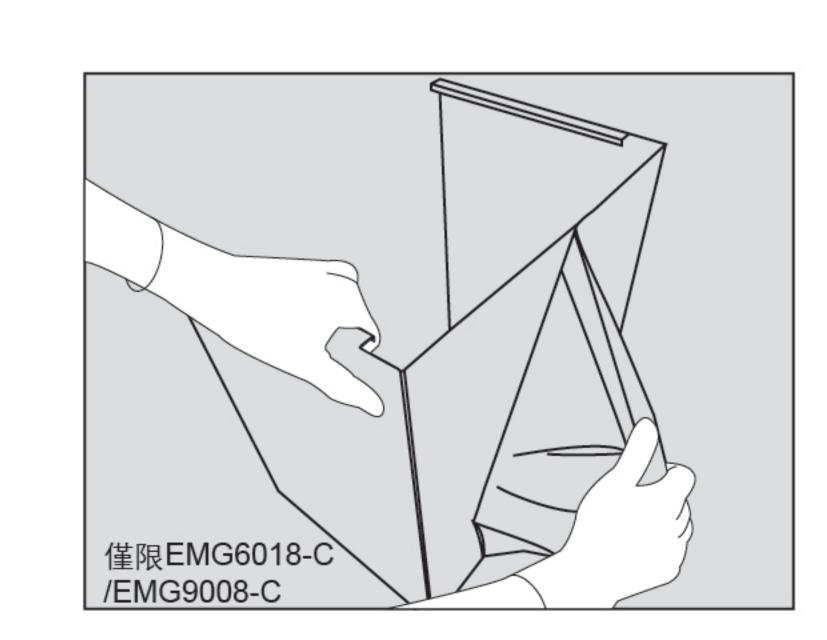

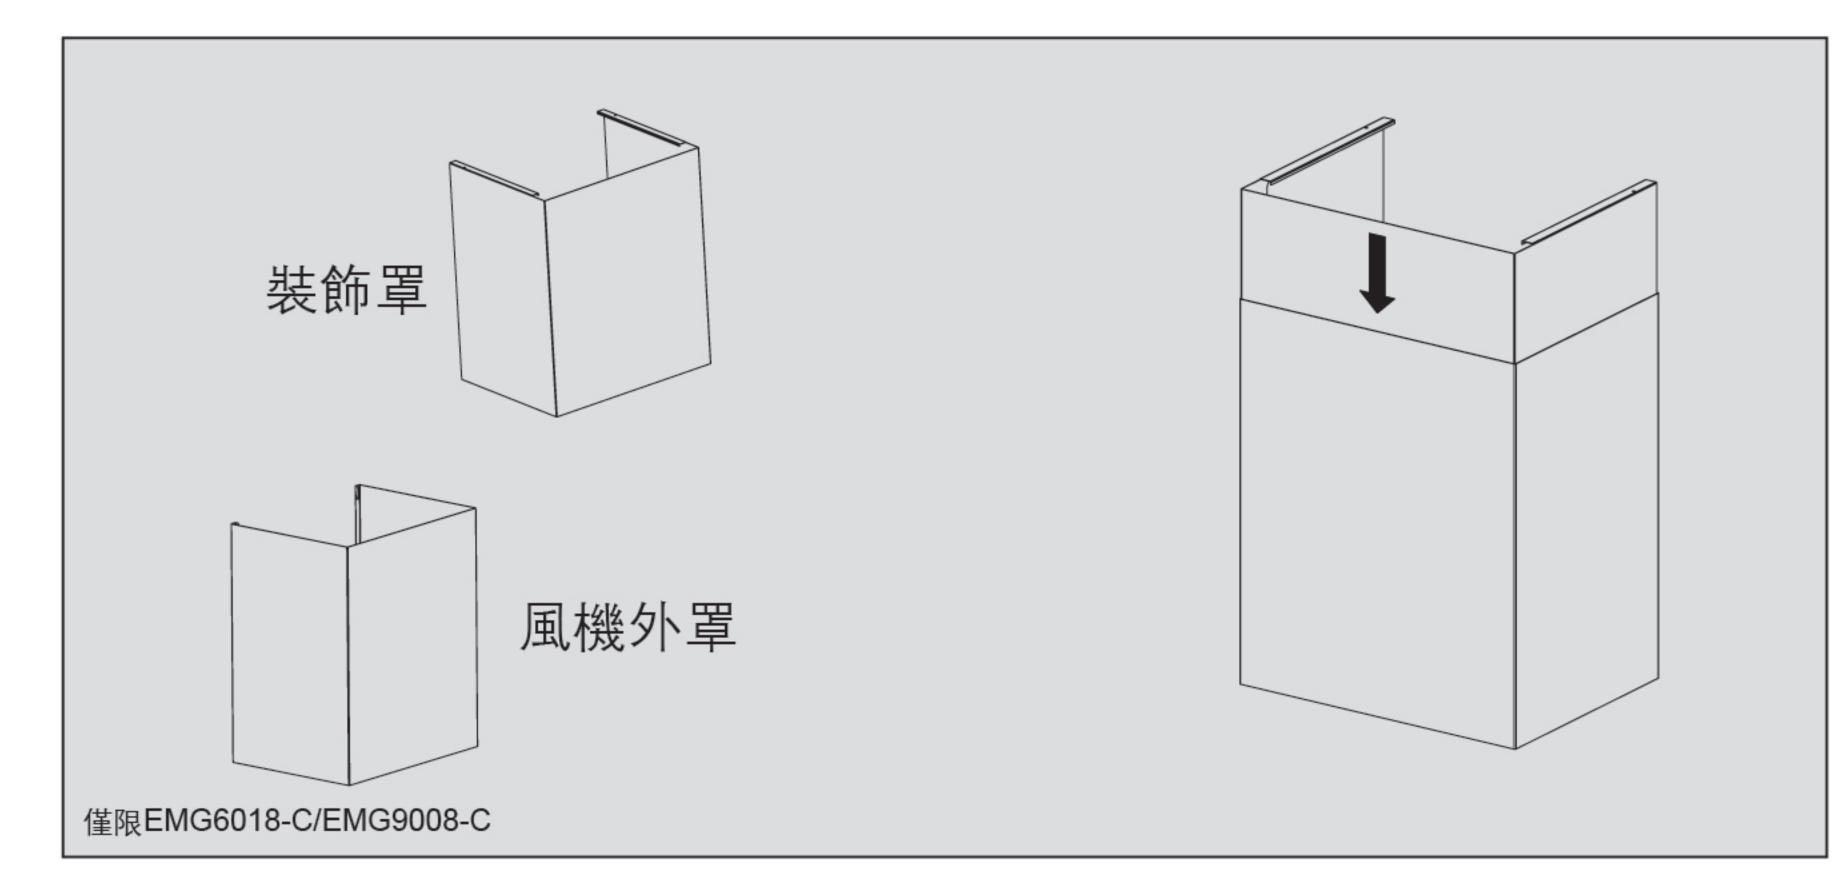


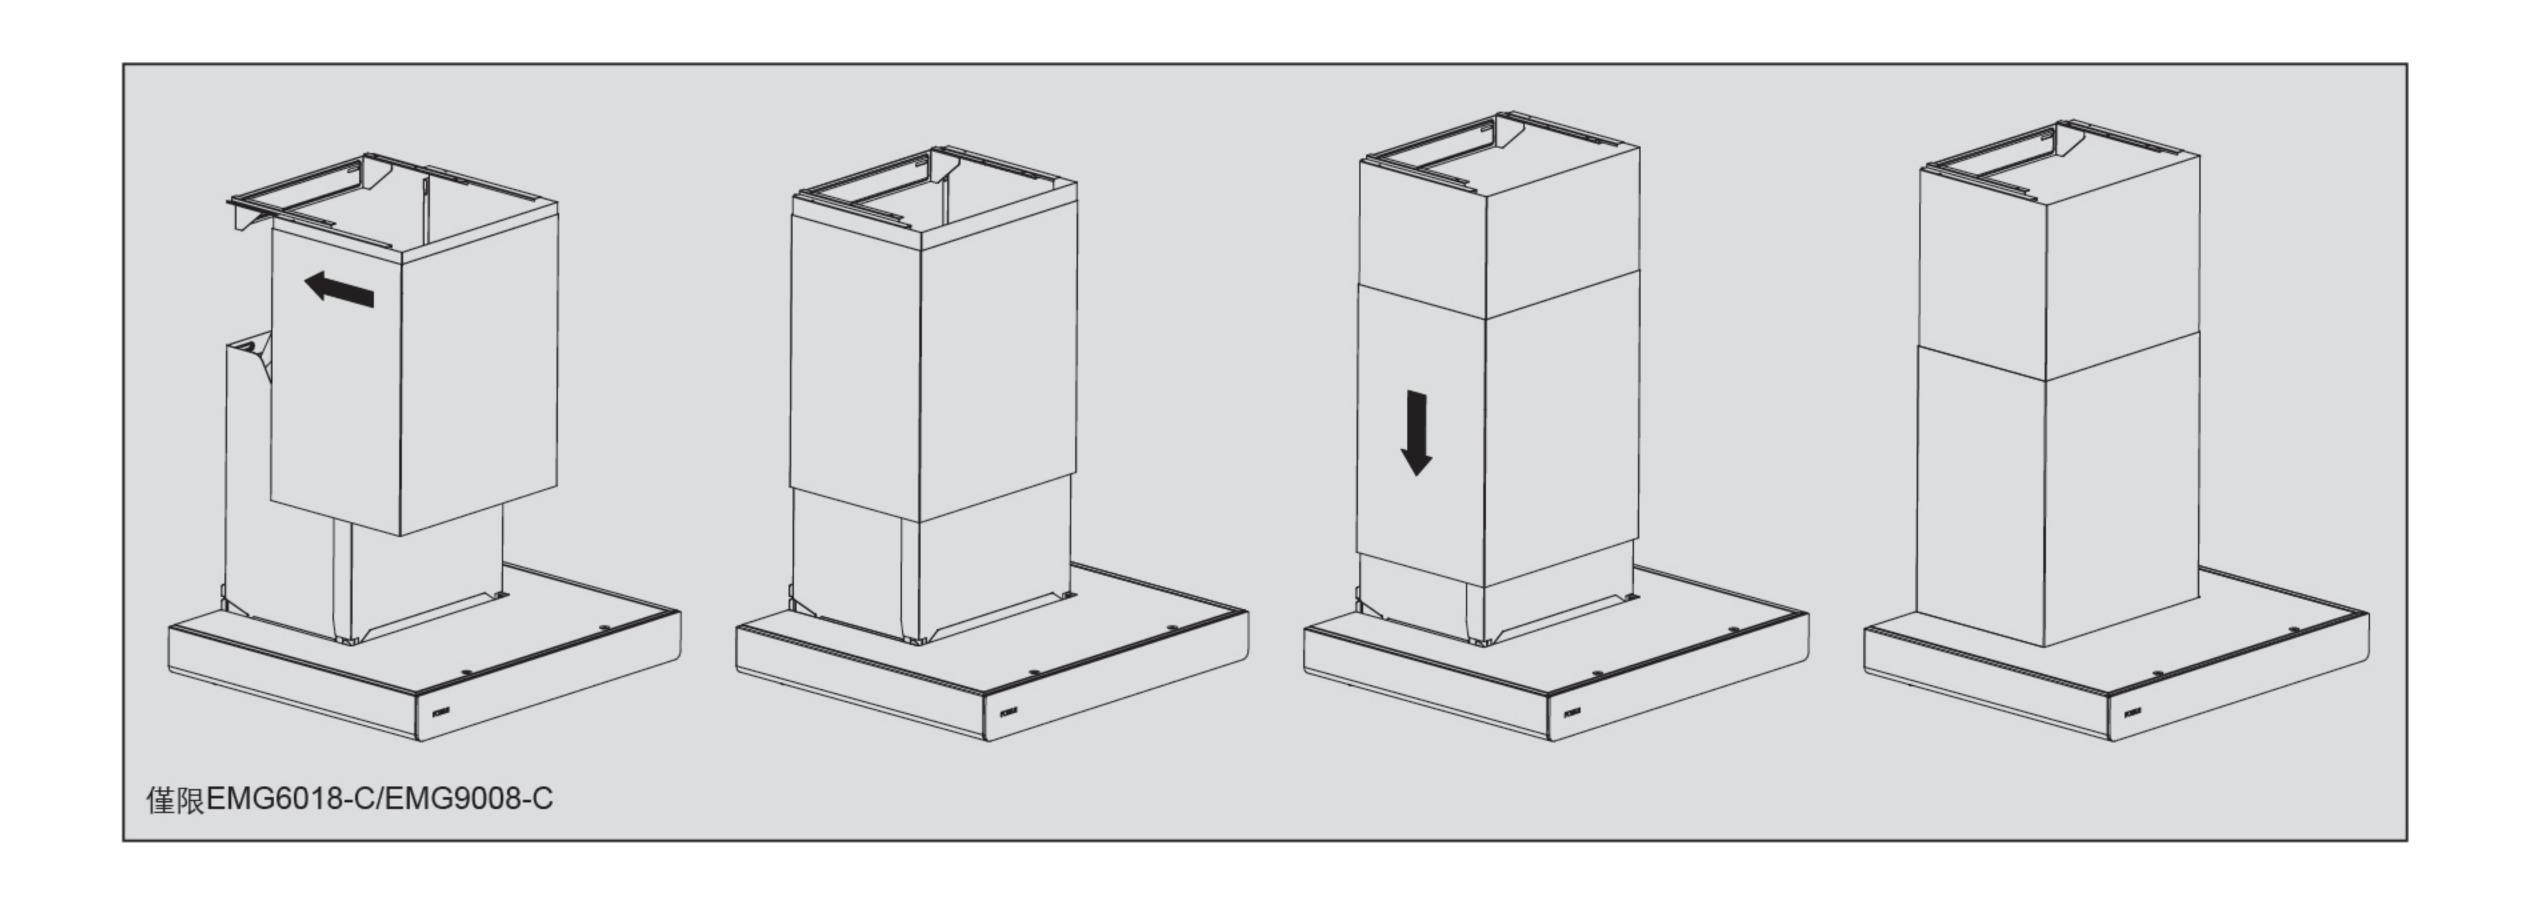


- 9. 安裝蝶翼板挂架: (僅限EMG9008/EMG9008-C)
 - (1)取出蝶翼板挂架組件;

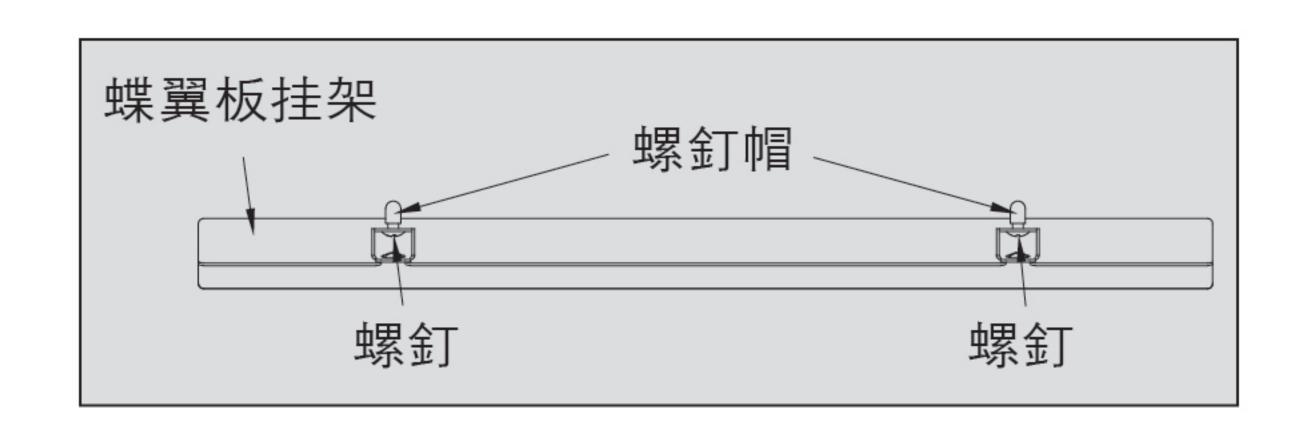


(2)去掉螺釘帽;

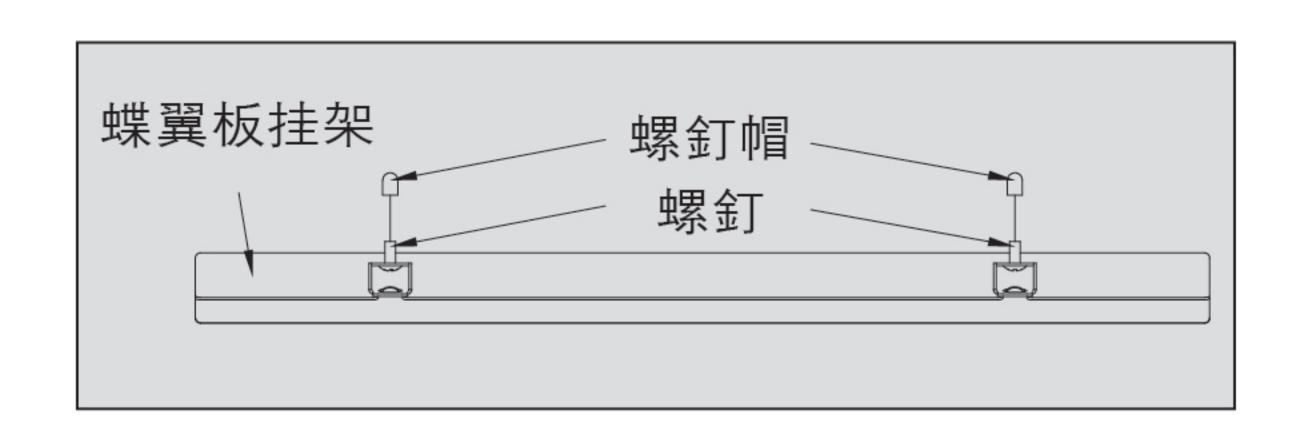


(3)用十字螺絲刀將蝶翼板挂架固定在油烟機底部。

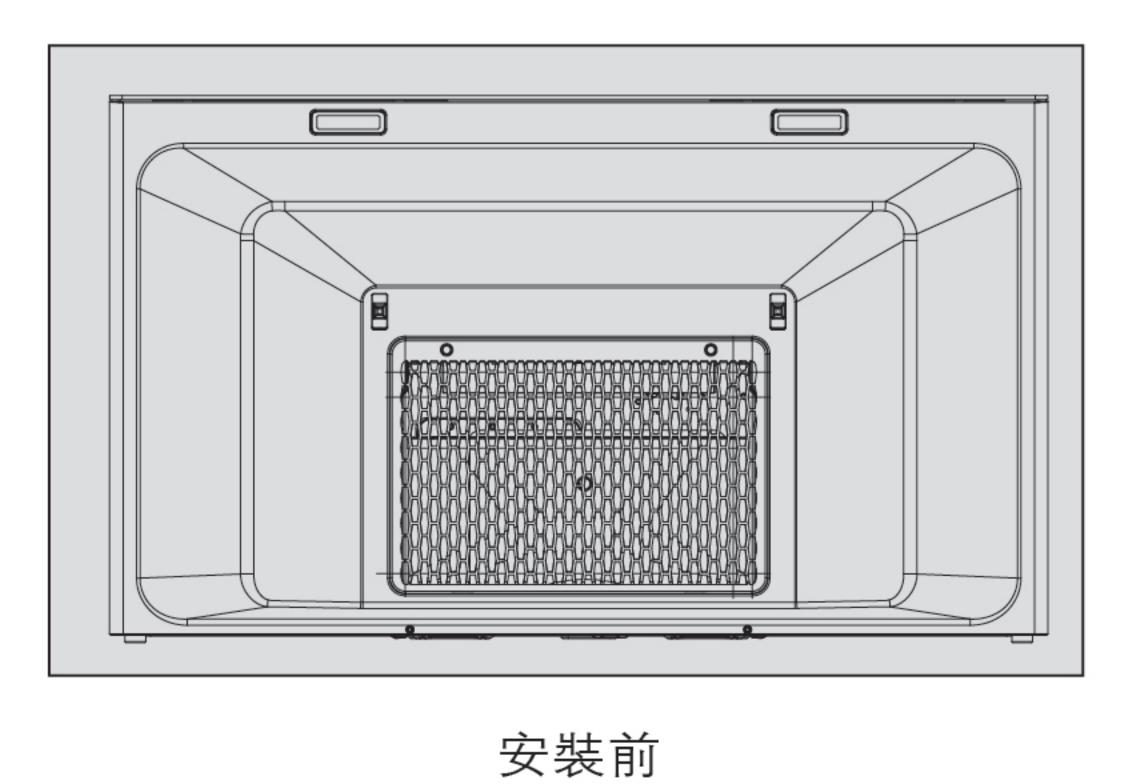


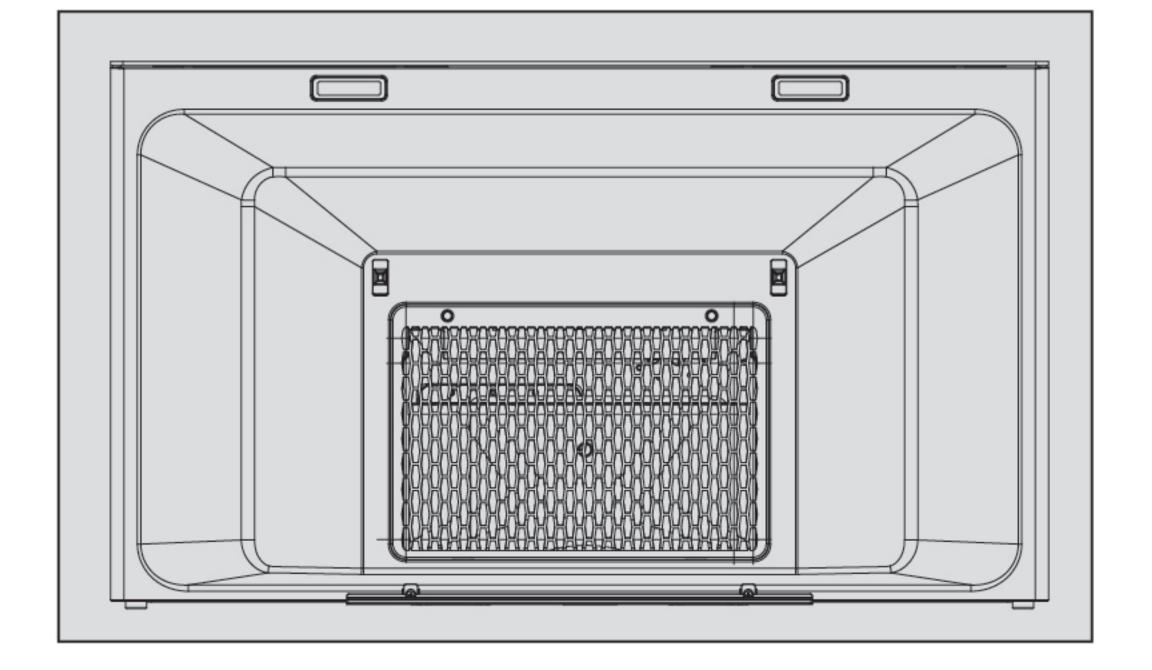


安裝后

- 10. 安裝蝶翼板:
 - (1)把蝶翼板表面保護膜撕掉;
 - (2)雙手緊握蝶翼板前側,將蝶翼板后側的左右挂鈎,放入集烟罩底部的挂鈎架内;
 - (3)雙手托住蝶翼板,使其向上旋轉,然后用力將蝶翼板卡扣卡入集烟罩的碰扣内。

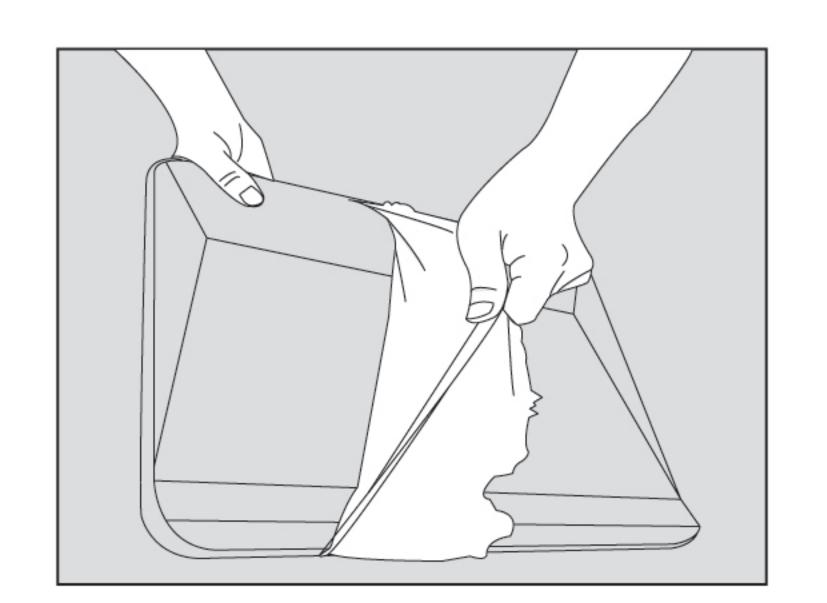

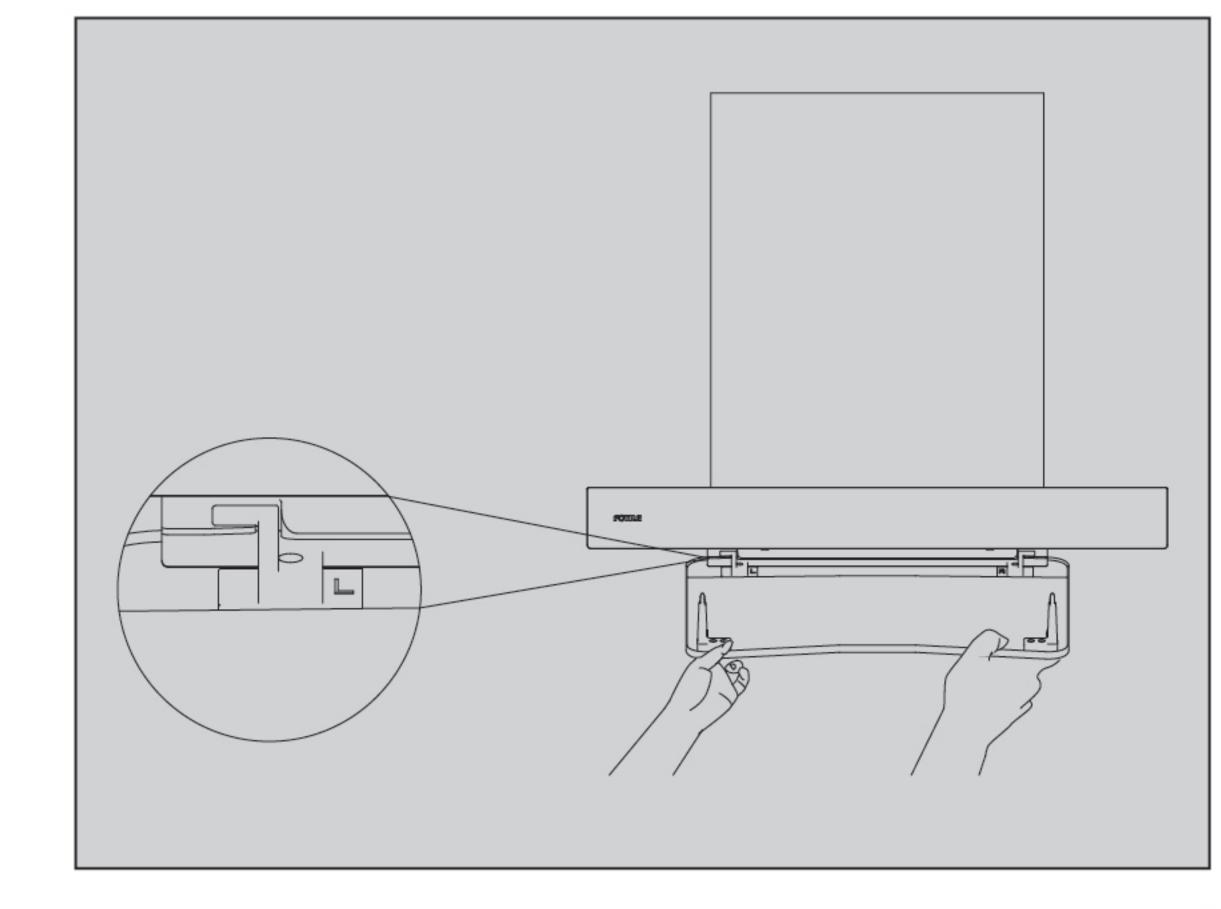

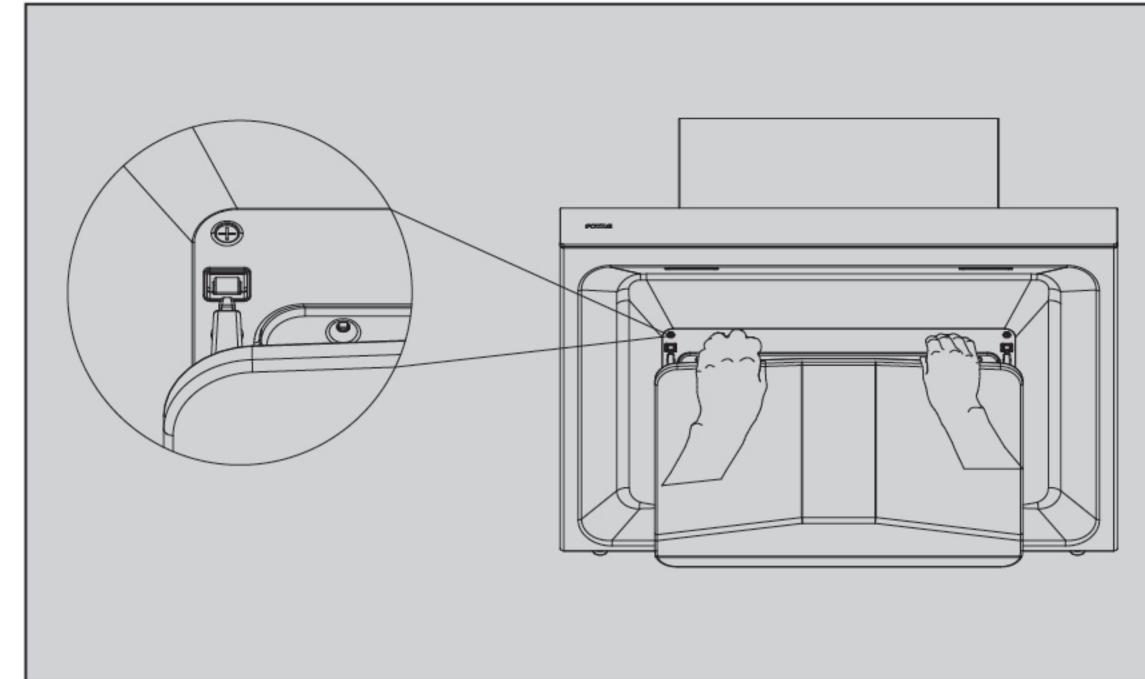



a.安裝前先取下風機外罩;

b.根據鑽孔地方的具體情况選定鑽頭。



禁止吸油烟機排出的氣體排到用于排出燃燒燃氣或其他燃料的烟霧使用的熱烟道中。

安裝后的調試

- 1. 輕觸電源/延時鍵,然后再輕觸高檔/超强檔鍵,檢測電機轉動是否正常,如出現下列异常情况,應立即切斷電源,停止運轉,并檢查是否爲安裝緣故。
 - (1) 機體震動劇烈

- (2) 葉輪不轉動
- (3) 葉輪轉動時明顯的摩擦聲
- (4) 電機出現异常聲響
- 2. 按照操作説明,檢查所有按鍵功能是否正常。
- (若確定吸油烟機發生故障,請致電方太授權的服務中心)

正確處理本產品



此標記表示本産品不應與其他家庭垃圾一起處理。爲防止不合理的廢品處理可能會對環境或人類健康造成危害,需要對本産品合理回收利用,以促進材料、資源的可持續利用發展。如您需要退回使用過的機器,請使用回收采集系統或聯系相關零售商,他們會把機器環保、安全的回收利用。

清洗保着

1. 清潔維護注意事項


爲了更加舒適地使用,請經常對吸油烟機表面進行清潔,這有利于吸油烟機的正常使用。

- 1. 只用中性皂或者中性洗滌劑進行清潔,清潔后用柔軟的布擦干機體表面。
- 2. 如果吸油烟機表面有污點,使用中性清潔劑清潔,并避免清潔劑接觸各按鍵。把清潔劑滴至污點處并短暫停留(清潔劑不要在機體上停留過長時間,那樣將造成損害),使用柔軟的抹布將污點擦去,用微濕的毛巾將清潔劑除去,然后再用柔軟的干毛巾將機體擦干。
- 3. 不要讓污漬在吸油烟機表面停留時間過長。
- 4. 如不小心將含鹽的溶液、消毒劑、漂白粉以及其他清潔劑沾到不銹鋼面板,應立即用濕布擦拭。




- a.如果不按説明書規定的方法清潔,吸油烟機有起火的危險。
- b.當清潔、維修吸油烟機前,務必先拔掉電源綫插頭,以免觸電。
- c.清潔時應防止電機、各控制鍵等電氣部件進水。
- d.當風機在使用時,禁止將手放入風機運行區域。
- e.切勿使用汽油、酸性物質、苯、溶劑或任何其他化學藥劑清洗吸油烟機。
- f.請不要使用清潔球、刷子以及粗布等粗糙物進行清潔,以防止劃傷機體表面。


Ⅱ. 常規清潔

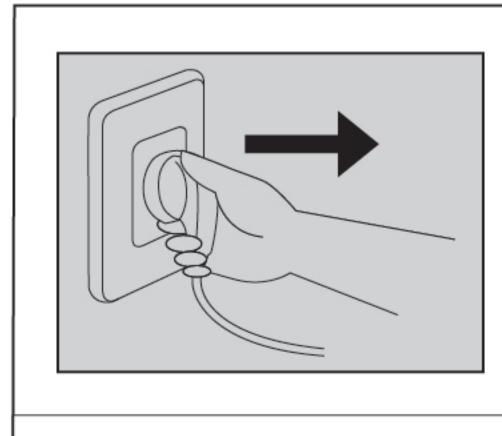

1.進行清潔之前斷開電源。

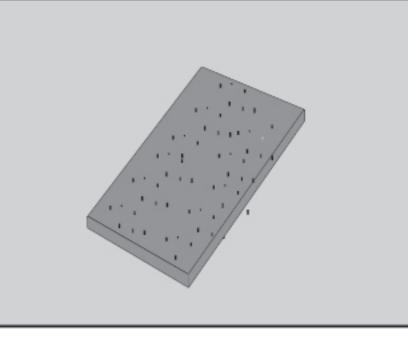

3.請勿使用粗糙材料(例如 鋼絲球、刷子或粗布等) 清潔產品表面。否則將 嚴重劃傷表面。

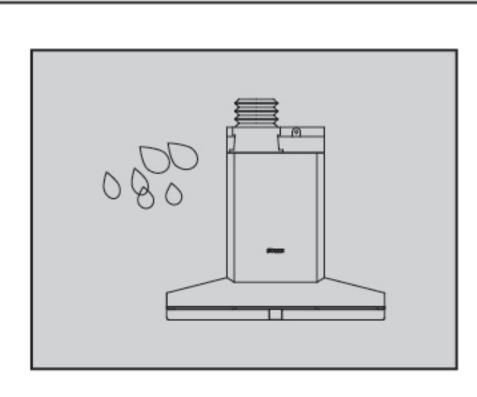

2.所有電子元件(包括電機和開關等)均需 遠離水源。




4.請勿使用汽油、酸性物質、苯、溶劑和其他化學試劑進行清潔。如需清潔產品,請使用中性清潔劑并在清潔后使用軟布將產品表面擦干。

FOTILE





濕布

5.如不銹鋼面板沾有含鹽液體、消毒劑、漂白粉和其他清潔劑, 請立即使用濕布將其擦净,然后使用干布將其擦干。

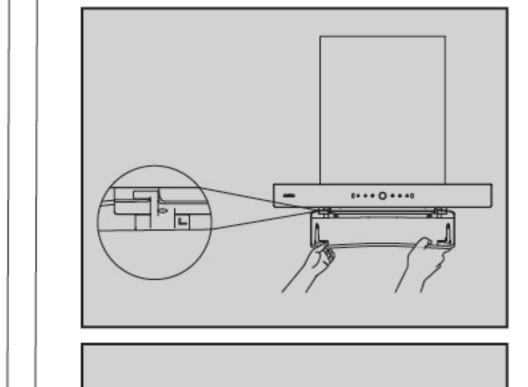

6.首先,用雙手抓住 蝶翼板前沿,向下 翻轉,使蝶翼板卡 爪脱離,然后向下 翻轉一定角度,最 后雙手平端着蝶翼 板向外取出。

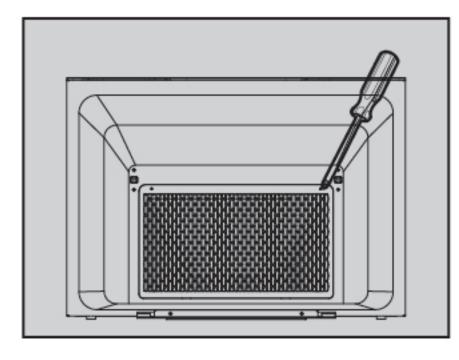

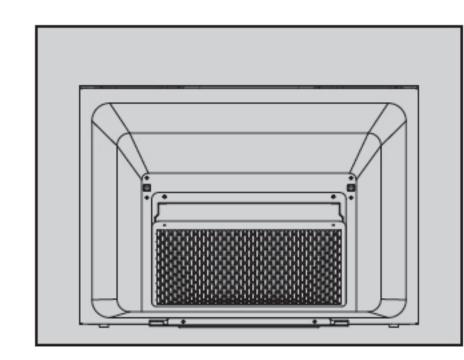

7.用左手拖住油網,右手用十字螺絲刀打開固定油網的兩顆螺釘,取下油網。



a.當清潔、維修吸油烟機前,務必先拔掉電源綫插頭,以免觸電。 b.每次使用吸油烟機后,請擦拭吸油烟機外表面并將擋烟板關閉。 c.所用燈爲LED燈:燈功率爲3W,電壓爲12V,燈尺寸爲寬度72mm/ 深度19mm/高度21mm。

使用方法

主要技術參數

電參數

| 型號 | 電壓/頻率 | 整機功率 | 電機功率 | LED燈功率 |
|--|---------------|------|------|--------|
| EMG6018/EMG6018-C EMG9008/EMG9008-C | 220~240V/50Hz | 300W | 294W | 3W×2 |


外排性能參數

| | EMG6018 | ÷- □ □ - | 595mm | (L)×522mm(W) | ×501mm(H) |
|-----------|-----------|---------------------|-------|--------------|-----------|
| 五八口去 | EMG6018-C | | 595mm | (L)×522mm(W) | ×505mm(H) |
| 型號 | EMG9008 | 産品尺寸 | 895mm | (L)×522mm(W) | ×501mm(H) |
| | EMG9008-C | | 895mm | (L)×522mm(W) | ×505mm(H) |
| 最大静壓值(Pa) | | | 82 | .0 | |
| | 檔位 | 超强檔 | 高檔 | 中檔 | 低檔 |
| 風量(m³/h) | | 1060 | 1010 | 820 | 460 |
| 噪音(dB(A)) | | 61 | 59 | 55 | 42 |



- a. 所示噪音值爲聲壓級噪音,對應聲功率級噪音爲:低檔54 dB(A) ,中檔61 dB(A) , 高檔71 dB(A) 和超强檔73 dB(A) 。
- b. 風量測試按照IEC 61591標准。噪音測試按照IEC 60704標准。


操作説明

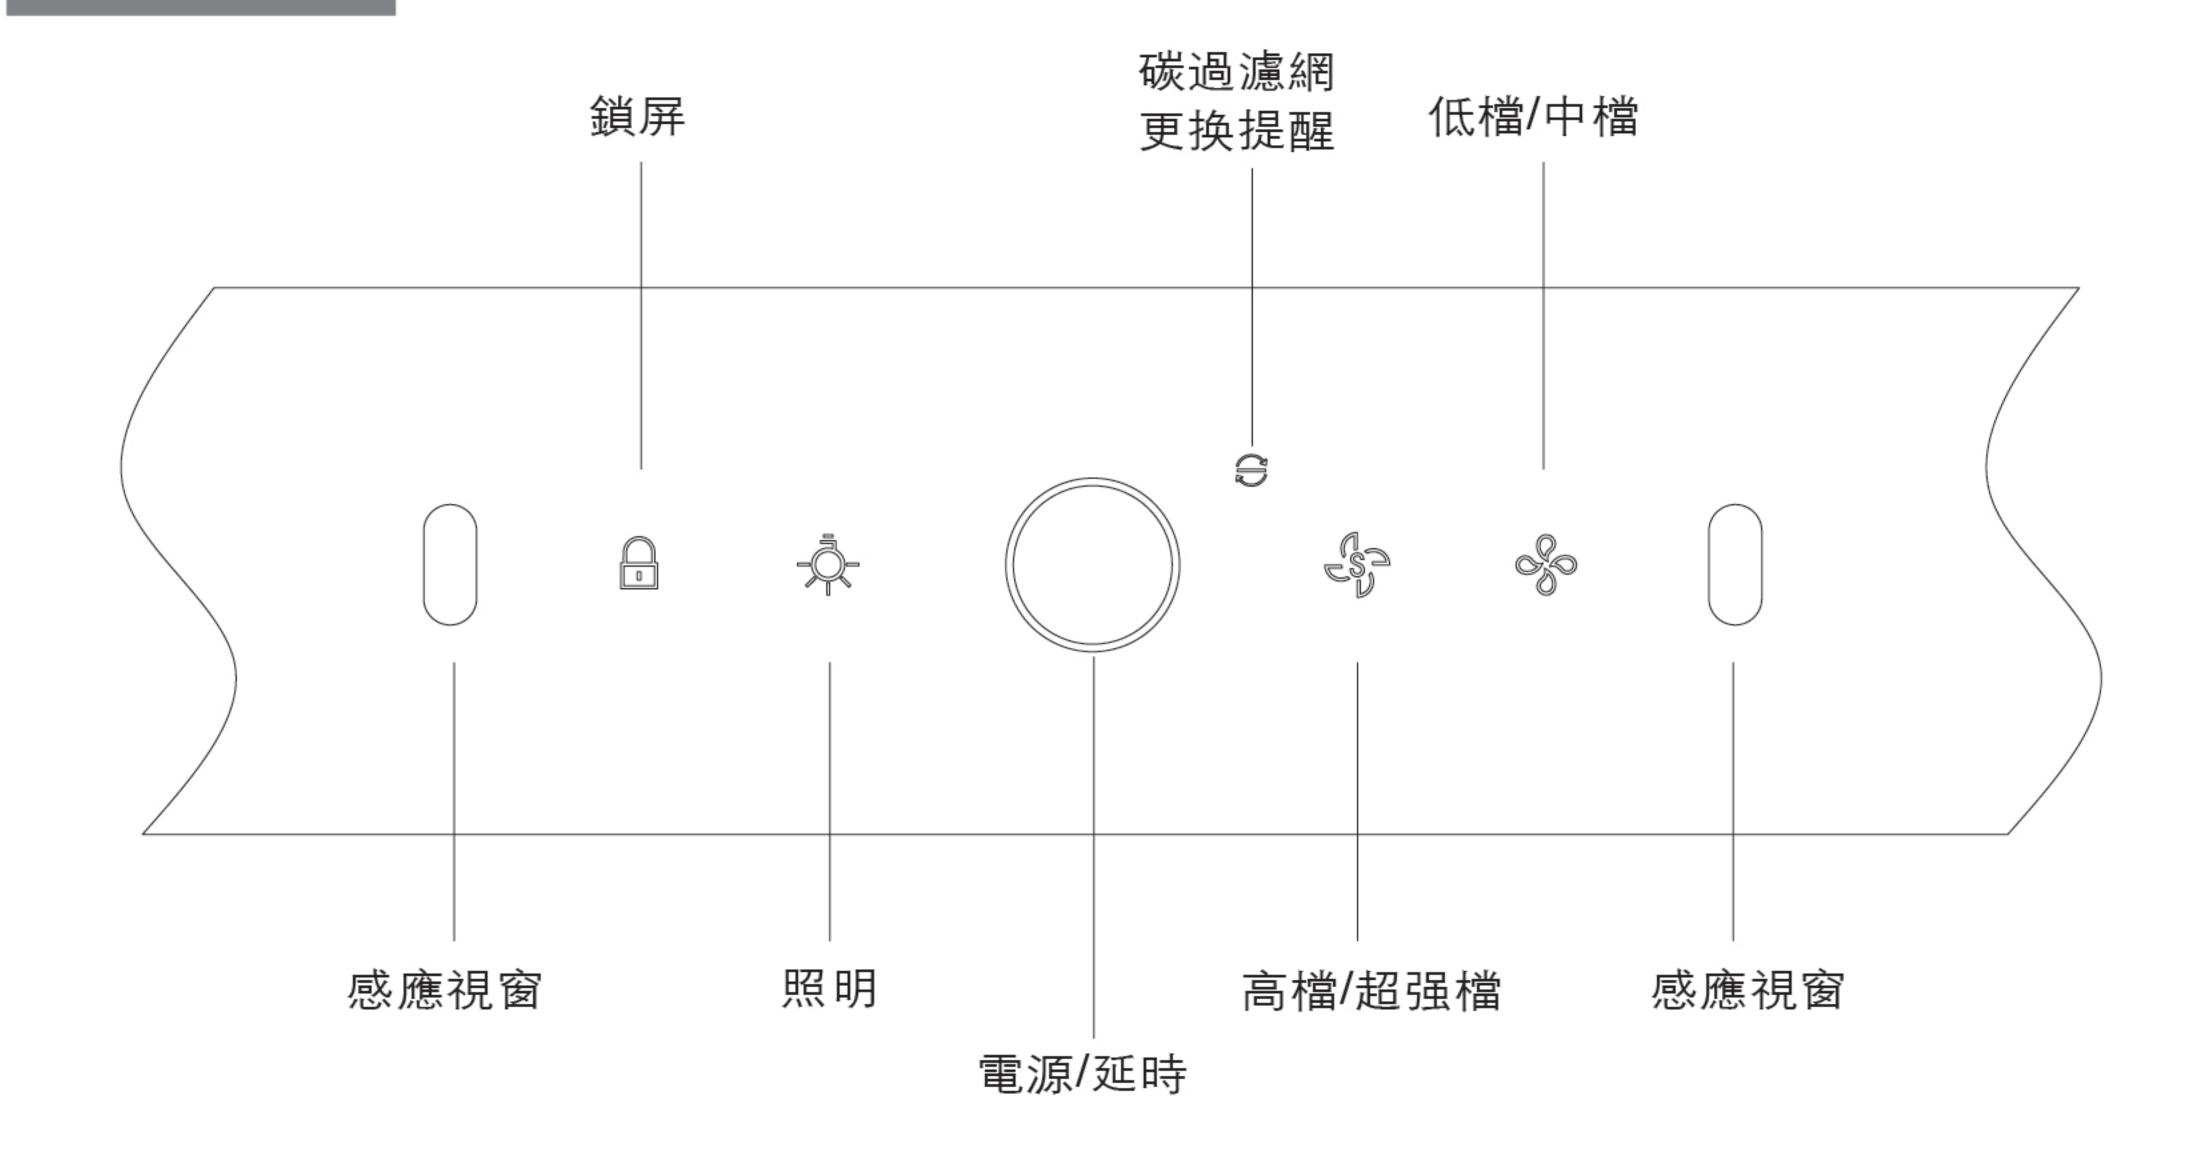

■ 手勢功能

在關機狀態下,揮手快速經過操作面板兩端感應窗口,油烟機啓動高檔運行,并打開照明燈;

再次揮手快速經過操作面板兩端感應窗口,電源/延時鍵 ① 指示燈閃爍,油烟機處于延時關機狀態,照明燈保持原先狀態,輕觸燈鍵可單獨關閉燈光,風機以當前狀態運行1分鐘后,切換到低檔運行4分鐘,然后進入關機狀態。在關機狀態下,同時按下照明燈鍵 ② 和低檔/中檔鍵 ③ 5秒,控制板上所有按鍵點亮1秒后熄滅,開啓/關閉手勢感應功能。

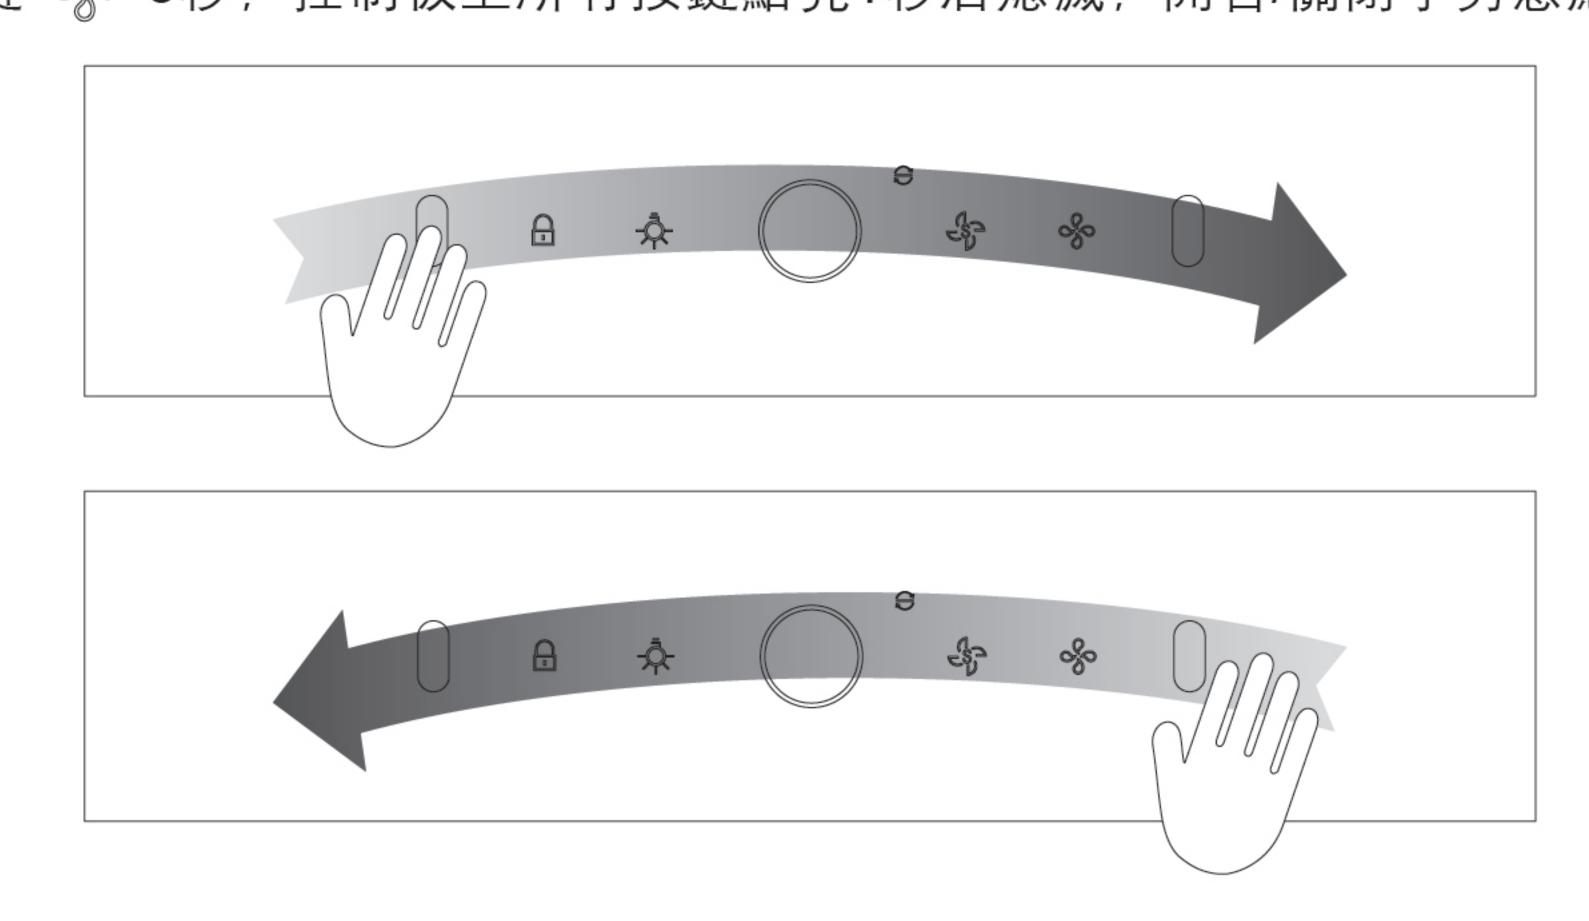



電源/延時鍵 〇

在關機狀態下輕觸一下電源/延時鍵,油烟機進入待機狀態,電源/延時鍵指示燈全亮,其他按鍵指示燈微亮,在工作狀態下,輕觸一下電源/延時鍵,電源/延時鍵指示燈閃爍,油烟機處于延時關機狀態,照明燈保持原先狀態,輕觸燈鍵可單獨關閉燈光,風機以當前狀態運行1分鐘后,切換到低檔運行4分鐘,然后進入關機狀態。

在待機狀態或延時關機狀態下,輕觸一下電源/延時鍵,所有按鍵燈熄滅,油烟機關機。

以下所有按鍵命令須在待機狀態下進行:

高檔/超强檔鍵 🦃

輕觸一下高檔/超强檔鍵,高檔/超强檔指示燈半亮,油烟機在高檔運行,再輕觸一下高檔/超强檔鍵,高檔/超强檔指示燈全亮且閃爍,油烟機在超强檔運行,100秒后油烟機回到高檔運行,高檔超强檔指示燈半亮。

油烟機在超强檔運行時,再輕觸一下高檔/超强檔鍵,高檔/超强檔指示燈微亮,油烟機停止運轉。

低檔/中檔鍵 💸

輕觸一下低檔/中檔鍵,低檔/中檔指示燈半亮,油烟機在低檔運行,再輕觸一下低檔/中檔鍵,低檔/中檔指示燈全亮,油烟機在中檔運行,再輕觸一下低檔/中檔鍵,低檔/中檔指示燈微亮,油烟機停止運轉。

照明燈鍵 🖧

輕觸一下照明燈鍵, 照明燈鍵全亮, 照明燈打開, 再輕觸一下照明燈鍵, 照明燈鍵微亮, 照明燈關閉。

鎖屏鍵 🔒

在油烟機不運行時,長按鎖屏鍵2秒鐘,機器"滴"響一聲后,鎖屏鍵指示燈全亮且閃爍,所有按鍵被鎖住,觸按無效,再長按鎖屏鍵2秒鐘,取消鎖屏功能。

在油烟機風機在運行時,鎖屏鍵無效,如果按下會發出滴、滴"報警聲。

碳過濾網更換提醒 🥰

默認處于關閉狀態,僅適用于另外購買和安裝了"碳過濾網"的用户。

在關機狀態下,同時長按照明燈鍵 、高檔/超强檔鍵 和低檔/中檔 30 3秒,聽到"滴"的一聲,碳過濾網更換提醒燈點亮1秒后熄滅,開啓碳過濾網更換提醒功能。在此功能開啓狀態下,同時長按照明燈鍵 、高檔/超强檔鍵 和低檔/中檔鍵 30 3秒,聽到"滴"的一聲,關閉碳過濾網更換提醒功能。



提示: 1.待機狀態下2分鐘没有操作,油烟機會自動關機;

2.建議蒸煮時開啓吸油烟機,保持厨房空氣清新,否則較多水蒸氣經過感應窗口可能會觸發手勢功能;

常見故障的識别和處理

| 故障現象 | 可能原因 | 檢修方法 |
|-------------|-------------------------|-----------------------------|
| 按開關,吸油烟機不 | 未接通電源 | 檢查電源插頭是否插好 |
| 工作,LED燈不亮 | | 檢查插座是否有電 |
| 電機轉動但LED燈不亮 | LED燈損壞 | 更换LED燈(本項必須由專業 人員進行) |
| 有機械振動噪聲 | 螺釘松動 | 檢查吸油烟機表面螺釘是否 擰緊 |
| | 吸油烟機與電面的安裝 距離太大 | 降低吸油烟機安裝高度(本項必 須由專業人員進行) |
| 吸力不强 | 吸油烟機周圍環境門窗通 風太多,對流太大 | 關閉部分門窗 |
| 噪聲太大 | 出風管表面凹陷變形 | 重新安裝出風管(本項必須由專業人員進行) |



- a.更换LED燈,請聯系方太授權的服務中心。
- b.上述故障排除后,吸油烟機仍不能正常工作,請聯系方太授權的服務中心。
- c.保修期内保修需提供以下信息:

1.購買日期 2.產品型號

3. 序列號 4. 購買相關憑證

- d.其他人員不得擅自維修吸油烟機,以免造成嚴重后果,而且產品將不享受保修服務。
- e.以下情况不提供保修服務:
- 1.用户搬運、安裝、使用、維護、保管不當而損壞的。
- 2.超出正常使用條件,强行使用本產品造成的故障和損傷(例如電壓超出264V或低于 189V而損壞的)。
- 3.自行或非方太指定服務人員或服務機構安裝和拆修的產品。
- 4.購買憑證和保修卡信息與產品不符的。
- 5.因不可抗拒力造成產品損壞的(如自然灾害、戰争等)。
- 6.不根據"使用説明書"的規定使用,造成產品故障或損傷的。

FOTILE

RANGE HOOD

User Manual | EMG6018/EMG6018-C EMG9008/EMG9008-C

Any needs, please contact FOTILE service center.

Some pictures in this manual are sketch map, only for reference. If there are some discrepancies, please subject to real object.


WWW.FOTILEGLOBAL.COM

Dear User, thank you for purchasing the Fotile Range Hood. At Fotile, we manufacture exquisite appliances that are expertly crafted with the finest materials. Before using the Fotile Range Hood, please take some time to read through this Product Manual (manual). It will familiarize you with important safety, operation and maintenance instructions, as well as help maximize your culinary experience.

Before using the Fotile Range Hood, you must follow the instructions, as specified in this manual. Any damage resulting from the improper operation and/or maintenance of the appliance may result in the loss of warranty. The warranty will become invalid, and your warranty application, whether direct or indirect, will not be accepted by authorized service center of Fotile. If you require warranty or post-warranty after-sale service, please contact the local authorized service center of Fotile nearest you.

Your satisfaction with the Fotile brand is important to us. Our after-sales service centers provide assistance in resolving issues with Fotile appliances.

If you need service, please provide the product model and serial number on the product nameplate. Refer to diagram A below to locate the nameplate on your product.

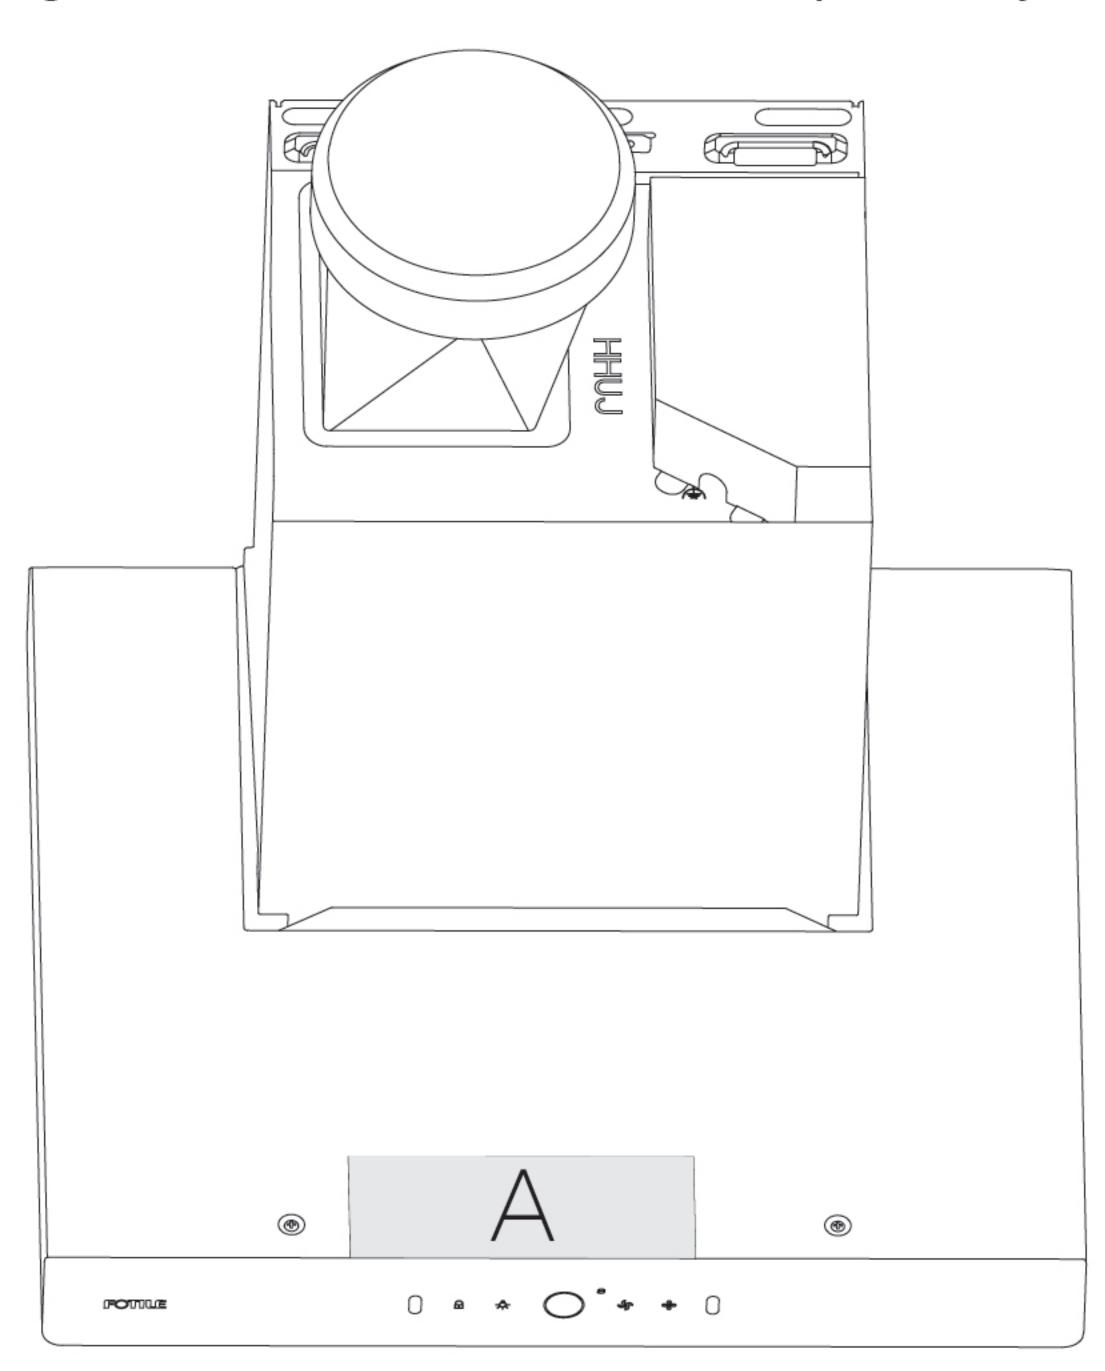

CONTENTS

| Warning and Safety Instructions | | |
|---|----|--|
| Installation | 5 | |
| Packing List | 5 | |
| Installation Warning | 6 | |
| Product Basic Conditions | 7 | |
| Installation Suggestions | 8 | |
| Installation Steps | 10 | |
| Debugging | 15 | |
| | | |
| Cleaning and Maintenance | 16 | |
| Usage | 18 | |
| Main Technical Specifications | 18 | |
| Operation Instruction | 18 | |
| Normal Malfunction and Trouble Shooting | 21 | |

Product features and specifications are subject to change, at any time, without notice and may be different from those in this material. Please visit our website at www.fotileglobal.com for the most up-to-date information.



Warning and Safety Instructions

Special version:

Please properly use the appliance, strictly complying with the user manual. FOTILE company will not bear responsibility for property loss and personal injury due to improper use.

riangle Warning:

This appliance is not intended for use by persons (including children) with reduced physical,sensory or mental capabilities, or lack of experience and konwledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

The appliance can be used by children aged from 8 years and above and persons with reduced physical.sensory or mental capabilities or lack of experience and konwledge if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved (only for EU market).

Children shall not play with appliance.

Cleaning and user maintenance shall not be made by children without supervison.

CAUTION: Accessible parts may become hot when used with cooking appliances.



- a. Pour out the gathering oil periodically; please wipe the range hood surface once after every using the range hood.
- b. Please frequently clean the range hood surface and oil cup.
- c. There is a fire risk if cleaning is not carried out in accordance with the instructions.

Strictly execute

| Ground Connection | The plug should be connected with reliable ground wire to ensure safety. The ground wire should not be connected with gas pipe, tap water pipe, lightening rod and telephone line. Bad ground connection may cause electric shock or other accidents. |
|--|---|
| | This appliance incorporates an earth connection for functional purposes only. |
| The state of the s | Because the installation procedure of the range hood is complex, and the weight is heavier, it should be installed by professional person according to the instructions. Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards. |
| | If the new range hood is damaged obviously before using, please don't install and contact FOTILE service center soon. |
| Safety Guideline | Please comply with the safety guideline provided by the heating equipment manufacturer priorly and safety regulations published by the fire authority simultaneously. |

| >30mm | The wall should be strong enough to support the range hood. As for hollow wall or hollow plate, the thickness of its solid part should be no less than 30mm. For drywalls, the range hood shall be fixed onto the wooden pillar at the back, mounting holes can be drilled directly into concrete walls. The range hood should be firmly fixed on the wall. |
|--|---|
| | When drilling on the roof or ceiling, please make sure not damage the electric wires and any other hidden devices. |
| | The range hood is for family use only, and don't use it in special environment (e.g. outdoor), and it also can't be used to exhaust dangerous or explosive substance or gas. Fotile assumes no responsibility if you use it in special environment. |
| | There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room). |
| ON COFF CONTRACTOR OF THE CONT | When the cooking pots catch fire, turn off the range hood immediately (It will stimulate the fire if the range hood is working). Effective fire extinguishing measures must be taken at once, such as covering the open flame with metal cover, turning off the general gas valve and keeping flammable substance away from the open flame, etc. |
| | Make sure the exhausting pipe can reach outdoors to avoid the fire and keep the fresh air in the room. Please don't make the waste gas stay indoor, loft, garage, etc. (This is only for ducted range hood) |
| T≤40°C | The working temperature should not be more than 40℃. |
| FAMILE HOOD FAMILE HOOD THE CONTROL OF THE CONTROL | Please clean the range hood according to the user manual, otherwise, it may catch fire or cause other dangers. |
| | Please clean the oil cup timely to avoid overflowing when the oil reaches the very scale in the oil cup. Please don't use the waste oil. |
| ON OFF CO. | Before install, clean or repair the range hood, please make sure cut off the power to avoid the electric shock. And wear protective golves to avoid your hands being hurt by range hood metal panel. |



| ON OFF | The plug shall be accessible after the appliance has been installed. Cut off the power if you are not going to use range hood for a long time. |
|--|---|
| | If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly persons in order to avoid a hazard. |
| ON CONTRACTOR ON | If there is abnormality, please turn off the range hood and cut off the main power supply, contact FOTILE service center to repair it. It will easily cause dangers like electric shock, fire, if the range hood still working under abnormal conditions. |
| | Please don't let children use range hood by themselves and don't place it where infants can touch, otherwise, it will cause burning injury, electric shock or other accidents. |
| | Please keep the product plastic package away from the infants, to avoid suffocation, etc. Children should be supervised to ensure that they do not play with the appliance. |

Forbidden

| | Please clean the range hood according to the user manual, otherwise, it may catch fire or cause other dangers. |
|----------|--|
| | Don't transform, stretch, tie, ballast or extrude the power cord, or it may cause electric shock or fire. |
| | Don't change the internal wiring by yourself, otherwise, it will cause possible abnormality and personal injury; and the improper repair leads to electric shock, fire or other dangers. |
| Hot Flue | The air must not be discharged into a flue that is used for exhaust- ing fumes from appliances burning gas or other fuels.Regulations concerning on the discharge of air have to be fulfilled. |
| | It is strictly forbidden to let the stove working without pot otherwise it will damage the above range hood. Do not flame under the range hood. |

| | Don't touch the bulb that is still working or finish working for a short while, to avoid scalding. | |
|----------|--|--|
| Impeller | Don't put your hands or other things into impeller when it is working to avoid hurting. | |
| | All electrical parts including motor, switch and connections, etc. should be away from water. Don't rinse range hood directly with water. Don't use the range hood when it is wet to prevent electric shock. | |
| Jos o | Never touch the power plug, power switch or other electric parts with wet hand, otherwise, it may cause electric shock. | |



- a. Services guaranteed under warranty must be performed by Fotile certified service provider or personnel. The warranty is not effective for products removed for repair without authorization.
- b. Adhere to the voltage and frequency settings listed in this manual to avoid possible damages to the range hood.
- c. When the range hood and appliances supplied with enegy other than electricity are simultaneously in operation, the negative pressure in the room must not exceed 4 Pa(4 x 10⁻⁵ bar) (only for GERMANY).
- d. Range hoods and other cooking fume extractors may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to back flow of combustion gases. These gases can potentially result in carbon monoxide poisoning. After installation of a range hood or other cooking fume extractor, the operation of flued gas appliances should be tested by a competent person to ensure that back flow of combustion gases does not occur.
- e. Tempered glass is applied to the products of the company and the tempering treatment of the glass determines the extremely little possibility of spontaneous explosion. If the occurrence of spontaneous explosion is not due to improper use, our company promises free replacement of the accessories. The possibility of tempered glass breaking can be significantly increased in the following situations, which should be avoided: For instance, hitting the glass, especially the corners of the glass, with cooking utensils or other hard objects; The glass is impacted when you open a cabinet door around the Range Hood; Put the glass in an extremely hot or cold environment or an environment where heat and cold are excessively alternated.



Installation

Packing List

| Main body (axonometric drawing) | 1 |
|---|---|
| Exhaust duct + | 1 |
| Sealing tape | 2 |
| Hook | 1 |
| Cross recessed countersunk head wood screw ST4.5×60 | 6 |
| Expansion pipeφ 10×60 | 6 |
| Screw for outlet housing M4×18mm | 8 |
| Screw for fan frame M4×6mm | 2 |
| Screw for exhaust duct ST3.9×9.5mm | 4 |
| Decorative cover screw ST2.9×19mm | 2 |

| Wing plate | 1 |
|---|---|
| Outlet housing | 1 |
| Upper gasket | 1 |
| Product instruction manual | 1 |
| Fan cover Only for EMG6018-C/EMG9008-C | 1 |
| Decorative cover Only for EMG6018-C/EMG9008-C | 1 |
| Decorative cover hook Only for EMG6018-C/EMG9008-C | 1 |
| Wing plate rack Only for EMG9008/EMG9008-C | 1 |

Installation Warning

Caution Caution



It is recommended to install a range hood after the kitchen decoration is completed.



If the gas stove needs to be moved before installing the Follow strictly range hood, please close the gas valve before moving.



Ensure that the wall on which the range hood is installed is flat and the range hood must be kept level.



After installing the range hood, please ensure that the machine Follow strictly can operate normally and carefully read and keep the Operation Instruction.



Packaging of new range hood: Please handle these packaging materials in an environmentally friendly manner to maintain a good environment. Do not allow children to play with plastic films and packing boxes, which may cause suffocation accidents. Therefore, please keep packaging materials away from children. Packaging materials are not toys!



To protect the environment, please dispose of old range Follow strictly hoods that cannot be used properly.



The range hood is heavy and the installation process is complex, Follow strictly so please contact professionals to install it according to the Instructions.



Wear qualified protective gloves to avoid scratches and bruises caused by metal plates and orifices inside the range hood when installing, cleaning or repairing the range hood on account that it may have very sharp edges.



Pay attention not to damage wires and other hidden equip-Follow strictly ment when excavating or drilling holes in walls or ceilings. Please cut off the power supply of the range hood during installation.



The special power socket shall be applied and grounded reliably.



The wall where the range hood is installed should have sufficient support strength, otherwise the range hood may fall off and be damaged.



The exhaust duct must ensure gas discharge into outside. Exhaust the waste gas outside to avoid fire accidents and keep the air fresh. Do not exhaust the waste gas into the wall, attic or garage. (Only applicable to range hoods with exhaust ducts)

Exhaust gases from this appliance should not be discharged into flues that are used to discharge exhaust gases generated from appliances burning gas or other fuels (this section does not apply to appliances returning gases to the room).




Wall Preparation


The wall should be strong enough to support the range hood. As for hollow wall or hollow $^{
m I}$ plate, the minimum thickness of the lumber should be 30mm. As for concrete wall, the installation can be directly operated. The range hood should be firmly fixed on the wall.

Product Basic Conditions

EMG6018




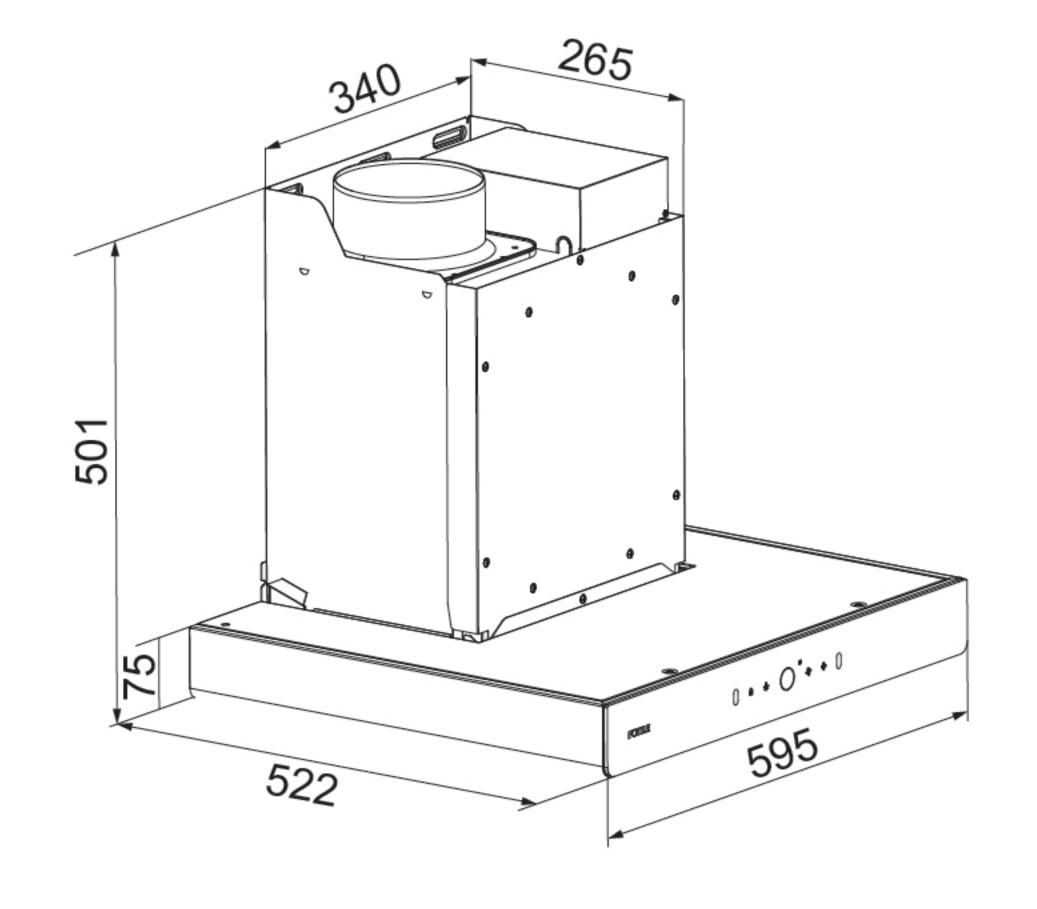

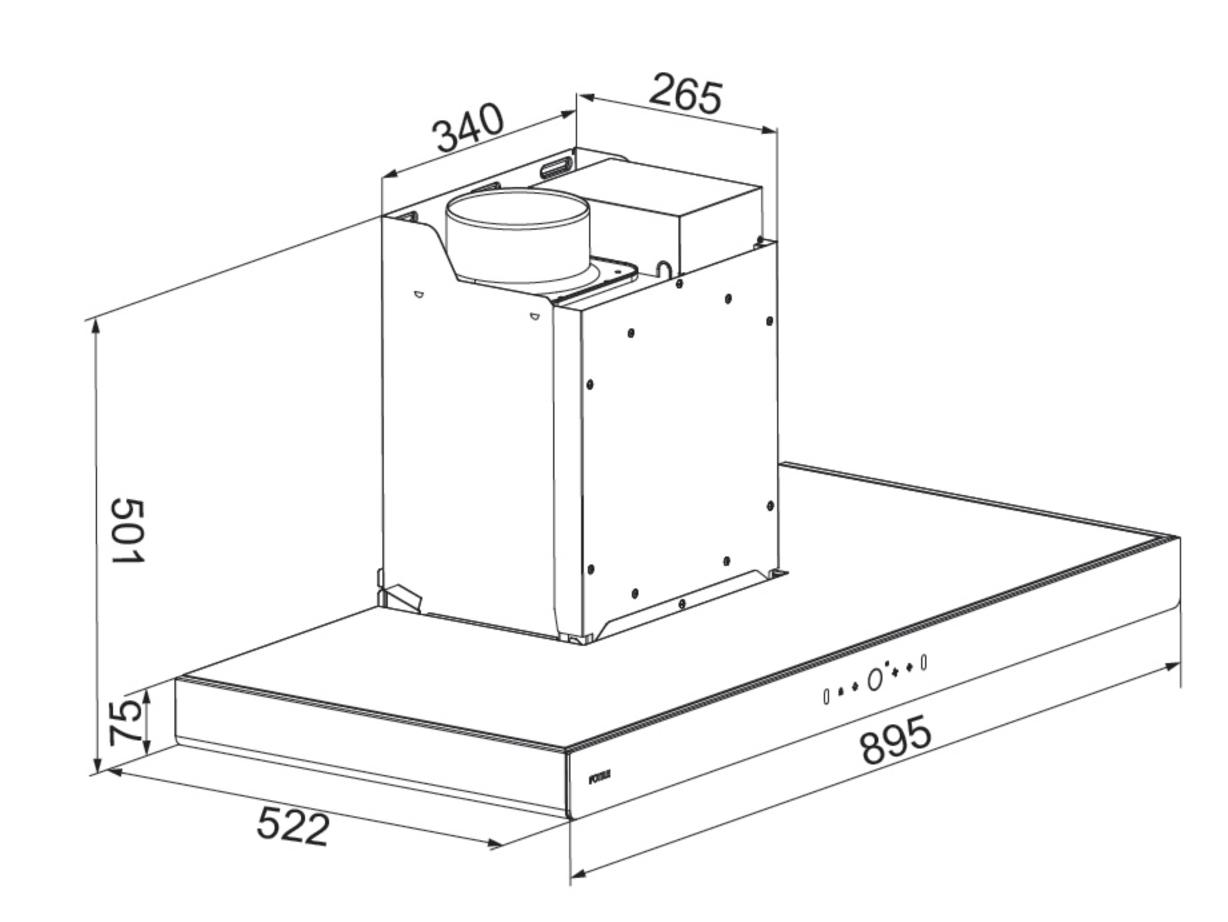

EMG6018-C

EMG9008-C

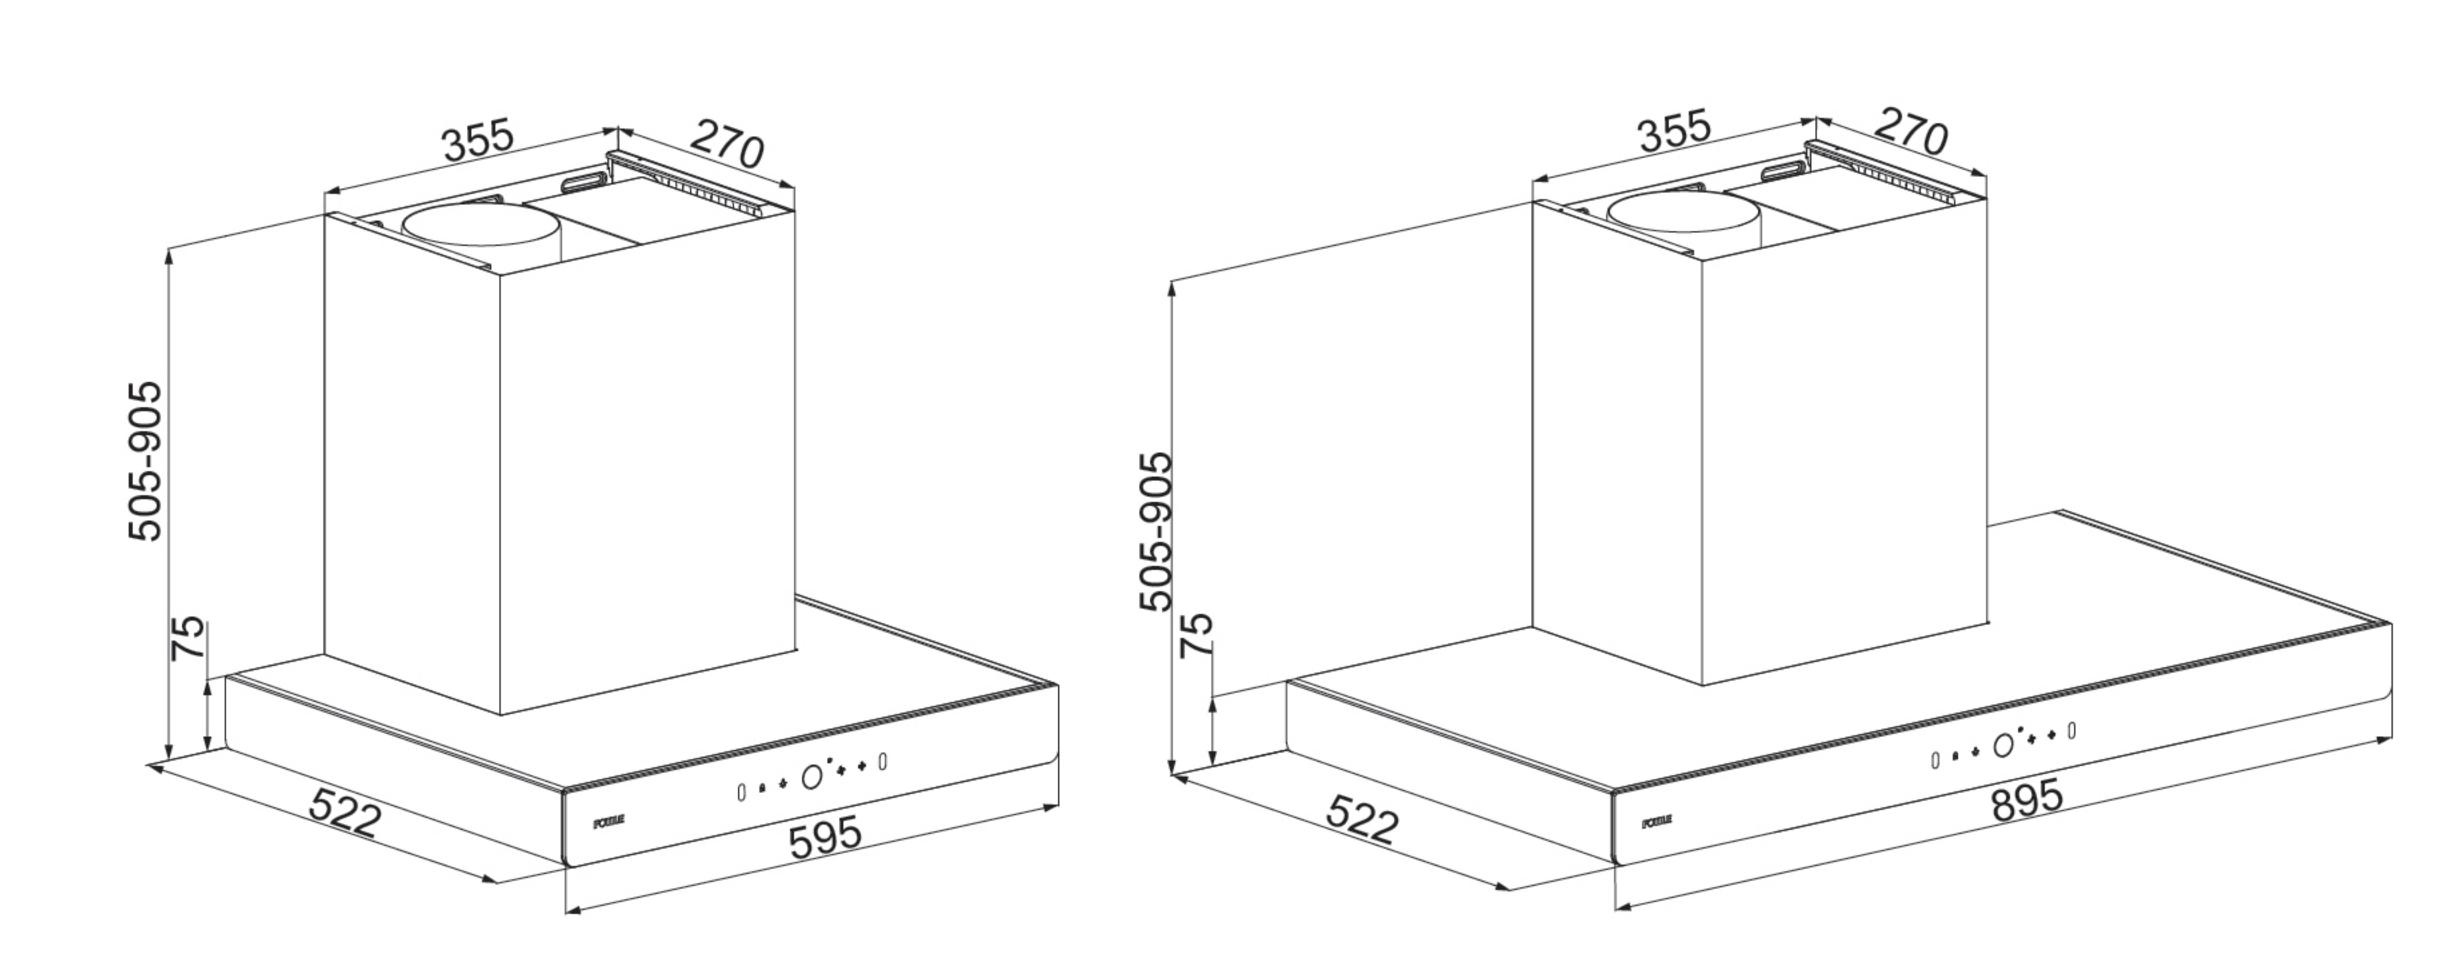

Product Basic Conditions(Unit:mm)

Installation Suggestions

Installation Position


- 1. The range hood is only for family use only; Please do not use the range hood under other conditions.
- 2. The range hood should be installed above the stove. Keep the appliance horizontal.
- 3. The temperature of the range hood should not be more than 40°C.
- 4. The wall should be none-flammable. Never install the range hood on the flammable wooden wall.


Installation Diagram of Hoods and Cabinets. (Unit: mm)


Hole size of ceiling or cabinet Installation diagram of Exhaust Type Range Hood

EMG6018/EMG6018-C


EMG9008/EMG9008-C

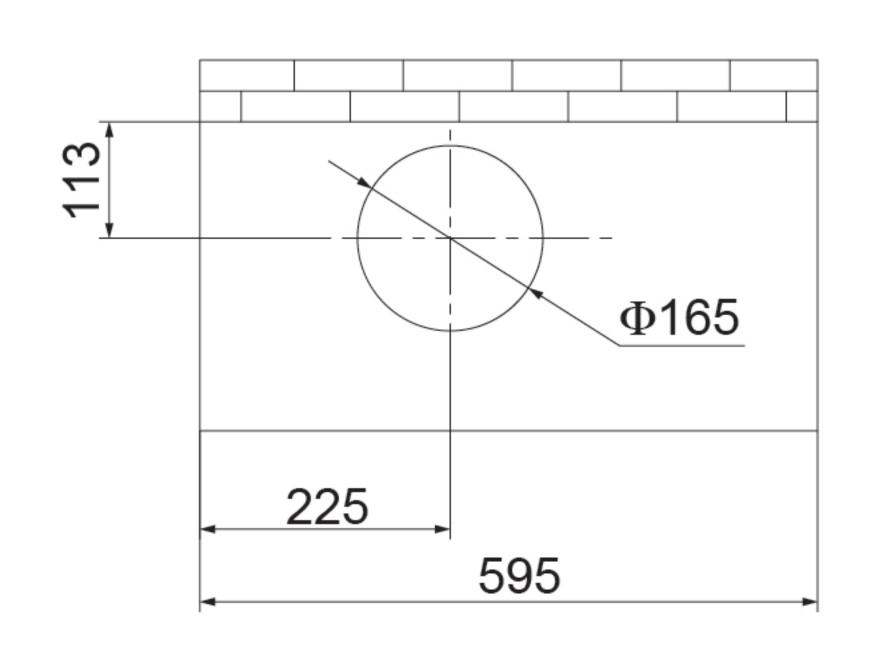


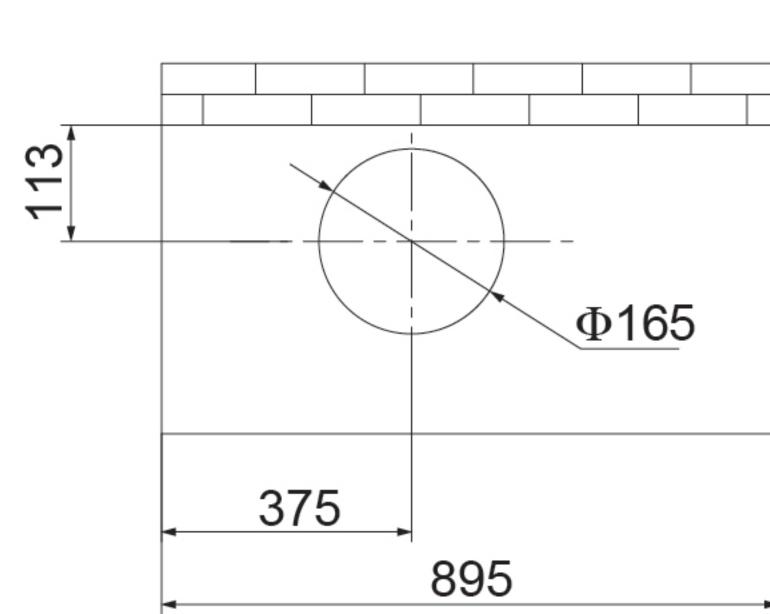

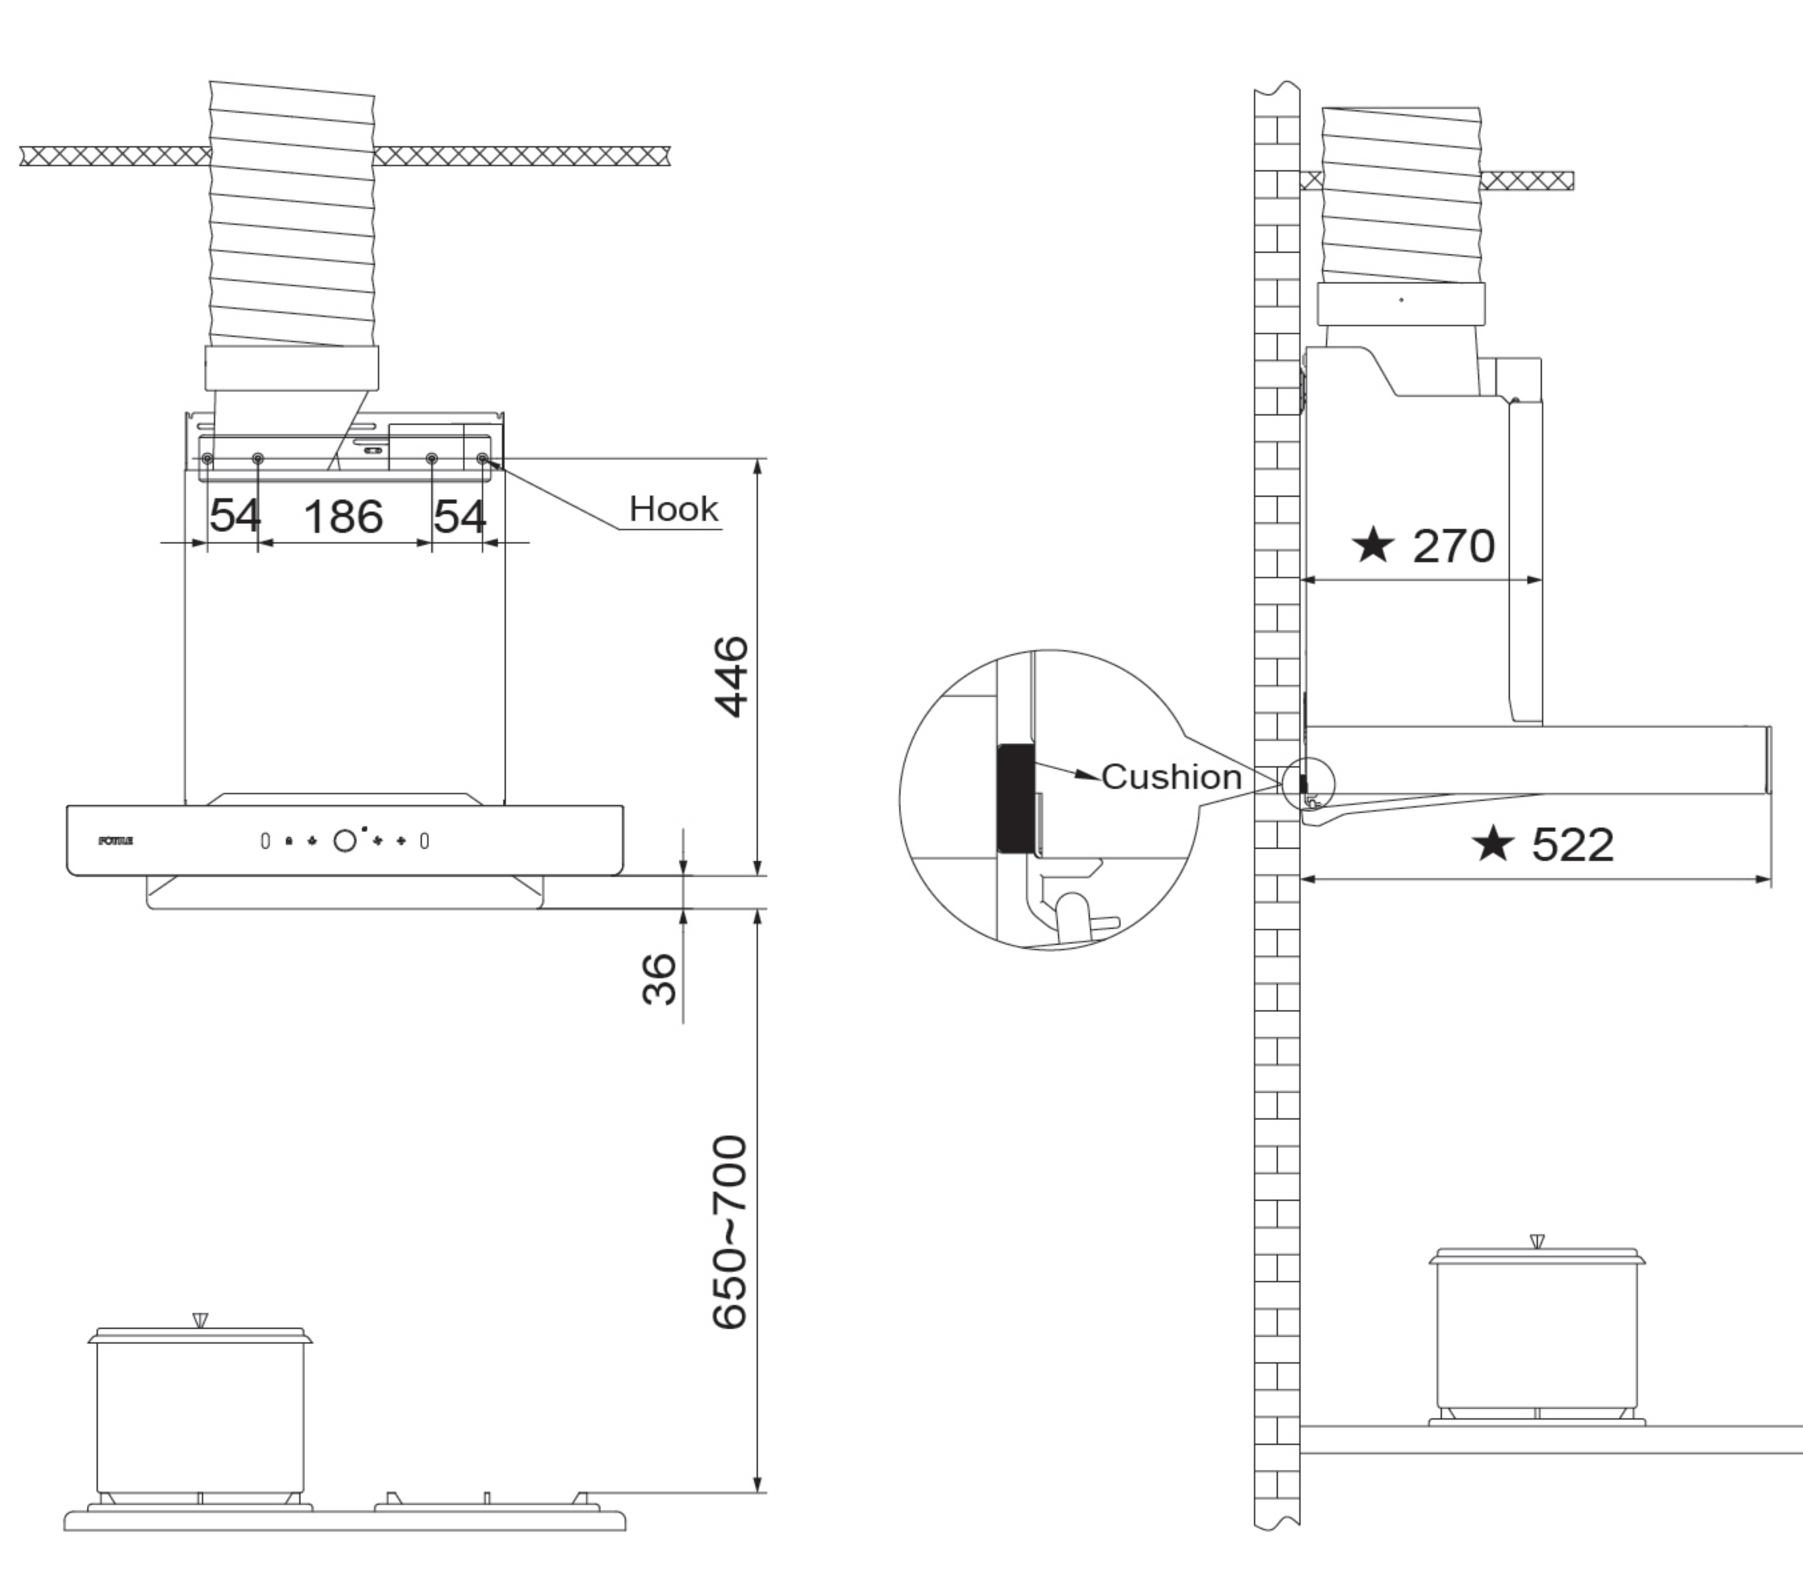

EMG6018/EMG9008 Installation diagram (★ is the distance from the wall)

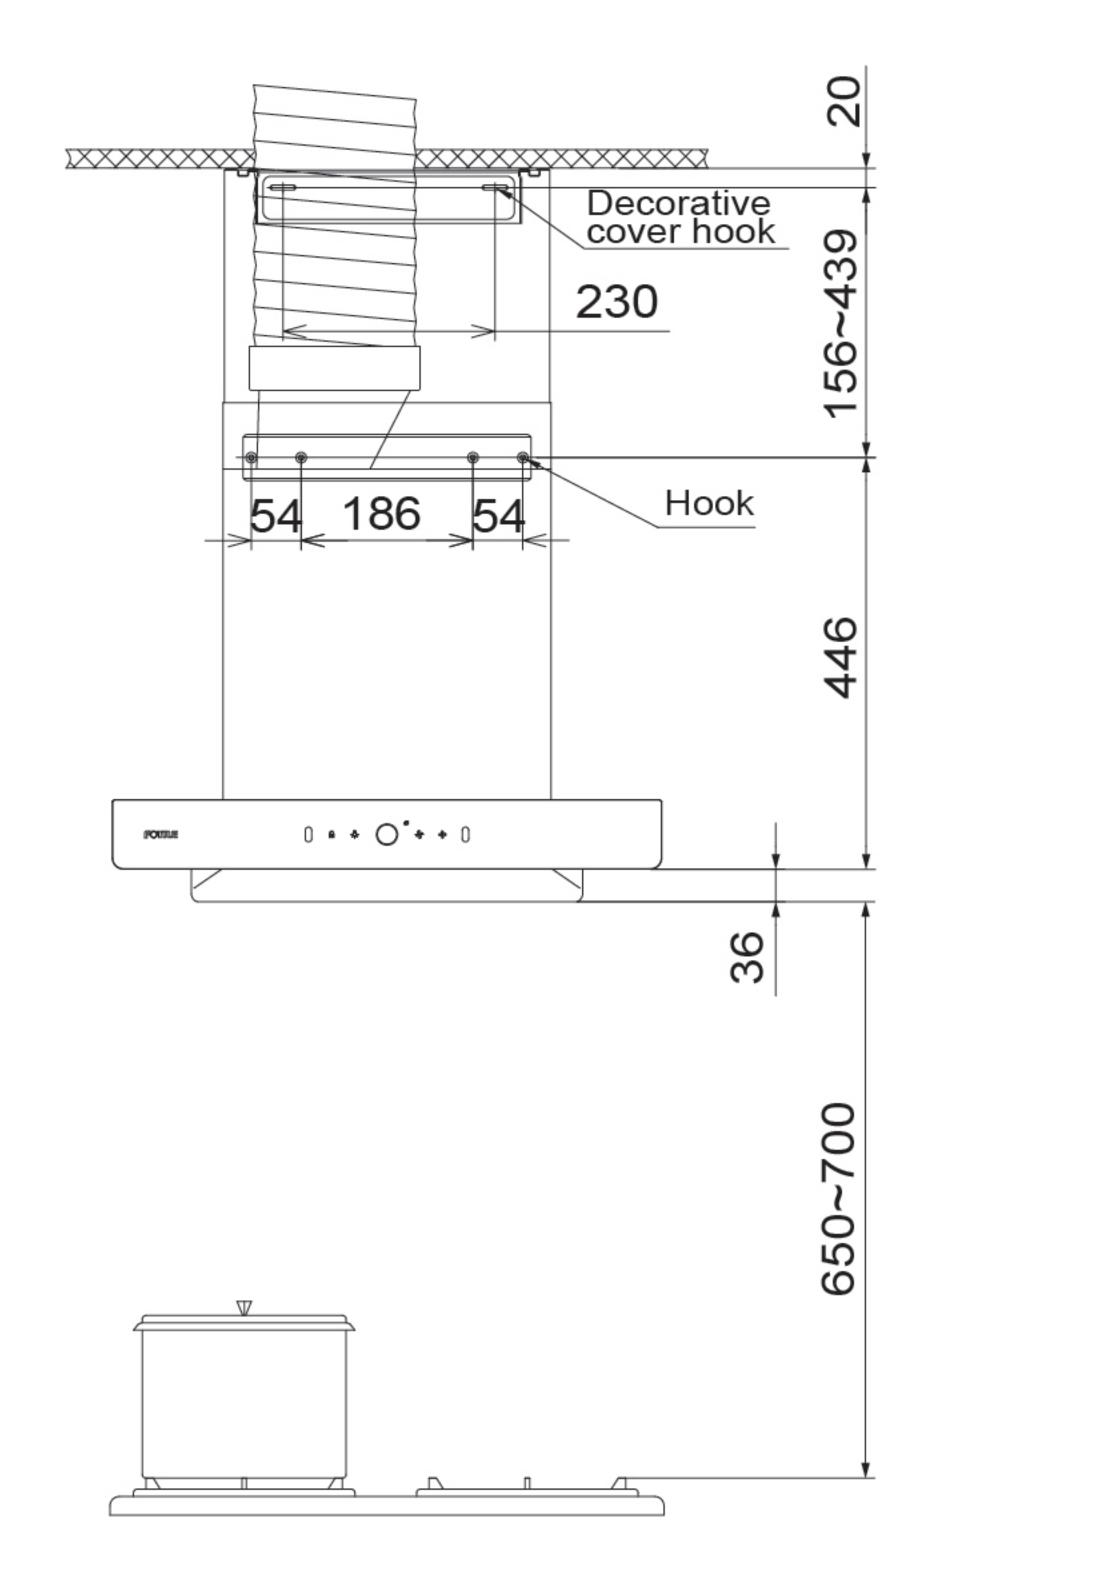

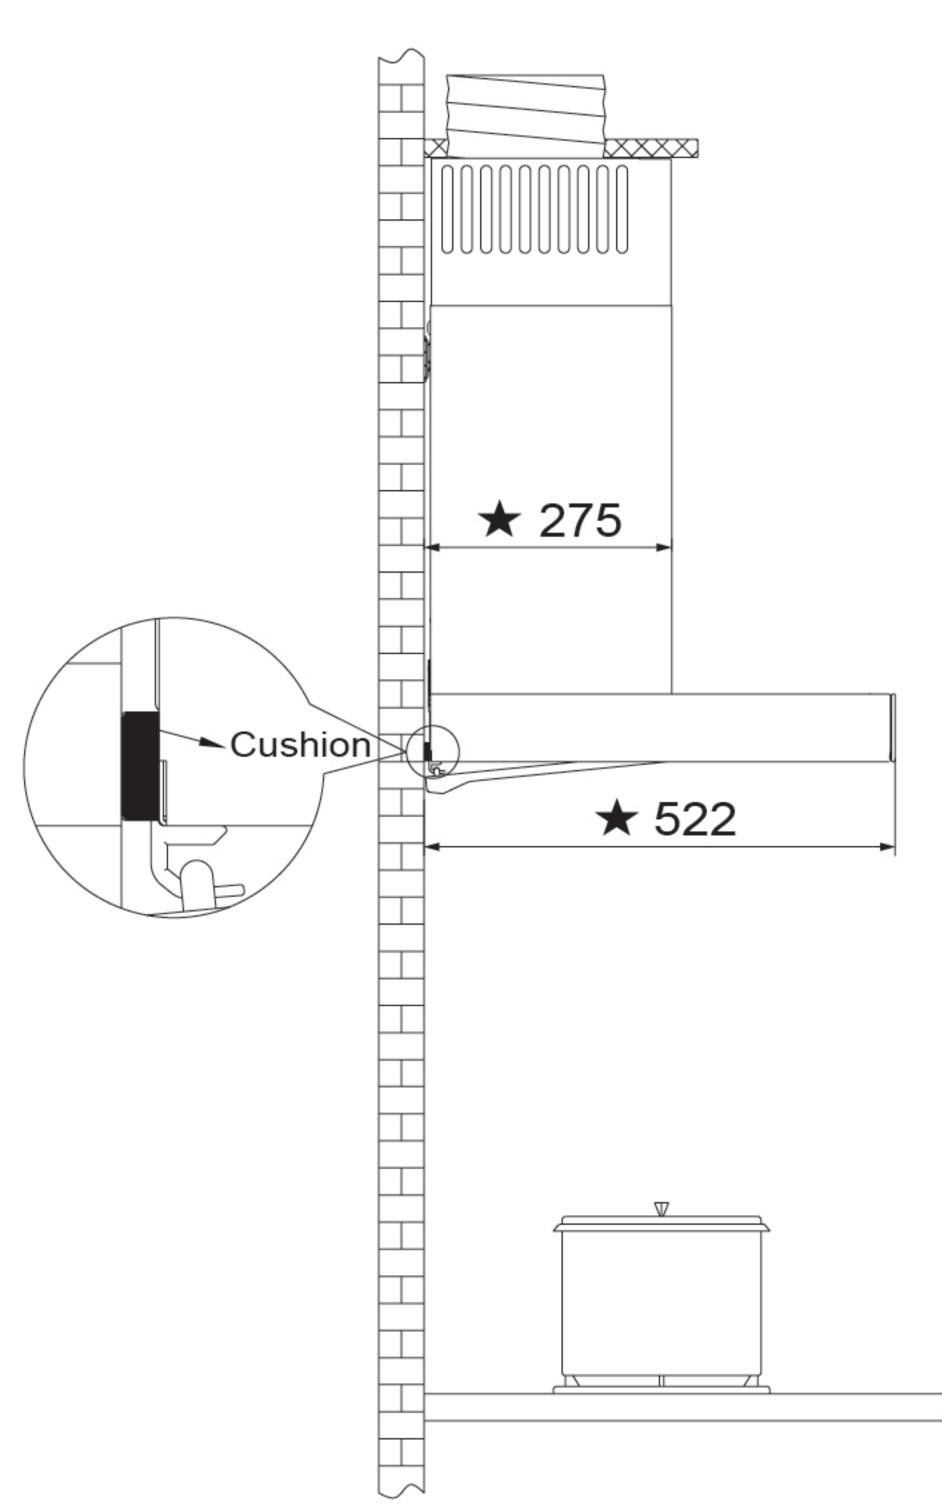

EMG6018-C/EMG9008-C(★ is the distance from the wall)



Notes

The height for installing the range hood (i.e. the distance between the bearing surface of cooking appliance on the stove and the lowest pa of the range hood) must not be less than 650mm.

This should be considered when the installation instructions for gas stove specify a large installation distance. In order to ensure the effect of oil fume suction, please install the range hood within the recommended height for installation. If the actual height for installation exceeds the recommended height, the product's oil fume suction effect may be affected to a certain extent. If relevant local laws specify the height for installation of range hood, it is recommended to comply with the laws accordingly.

Preparation before installation

- 1. Warning:
- (1) Please don't make sundries into exhaust pipe to avoid damaging the range hood. Estimate the exhaust pipe position.
- (2) Estimate the location between the range hood and the outdoor exhaust duct. Refer to the Installation Diagram.
- (3) A straight and short exhaust pipe makes smoke extraction more smooth.
- (4) A curving and long ducting run should be avoided, as it will lower the performance of the range hood.
- (5) The joint between exhaust pipe and wall hole should be sealed with tape, and ensure firm connection between exhaust pipe and exhaust cover.
- (6) Too small wall hole will affect smoke extraction, therefore, please broaden the wall hole to fit exhaust pipe size under safety condition.
- 2. Tool preparation

Please prepare the following tools before range hood installation (include but not limited to the following tools).


- (1) Impact electric drill (with drillbit of Φ 10mm)
- (2) Cross screwdriver


(3) Measuring tape

(4) Gradienter


Installation Steps


- 1.Open the packing box and remove the main body check the packing list; (see P5)
- 2.Remove the fan cover and decorative hood: remove the 2 screws that fix the fan cover behind the main body with a screwdriver, and then grab the fan cover and decorative hood with both hands to take them out upward. (Only for EMG6018-C/EMG9008-C)

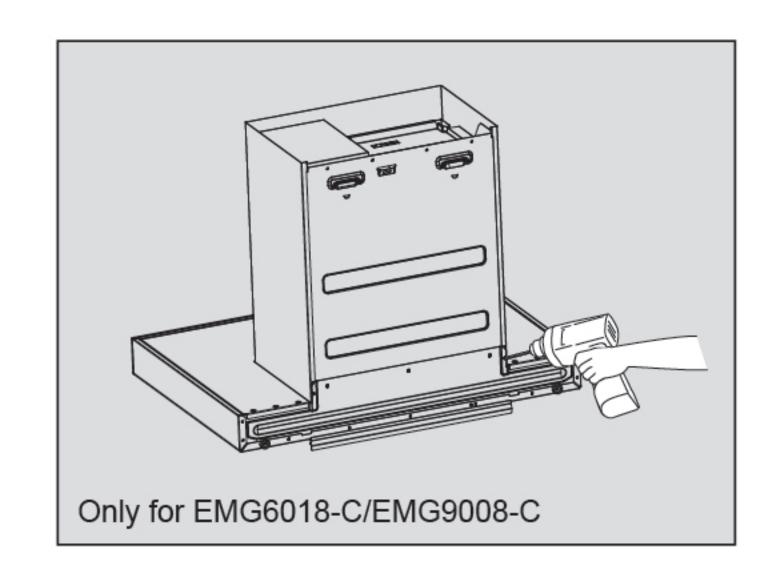

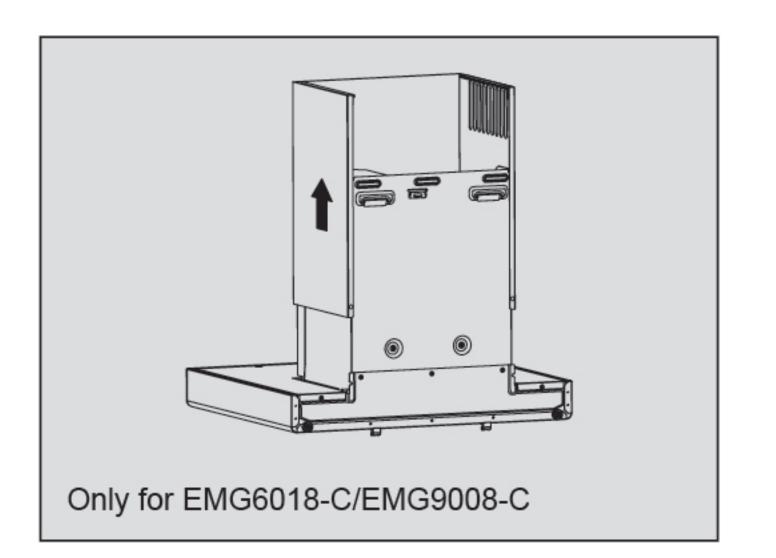


3.As shown in the installation diagram, drill ϕ 10mm hole at the drilling mark with an electric drill, then embed the ceramic tile expansion tube, fix the hook with the hook screw, and use a spirit level to make sure the hook is level. For the cover hook, two cover hook screws (ST2.9 × 19 mm) can be used to fix it to the ceiling.

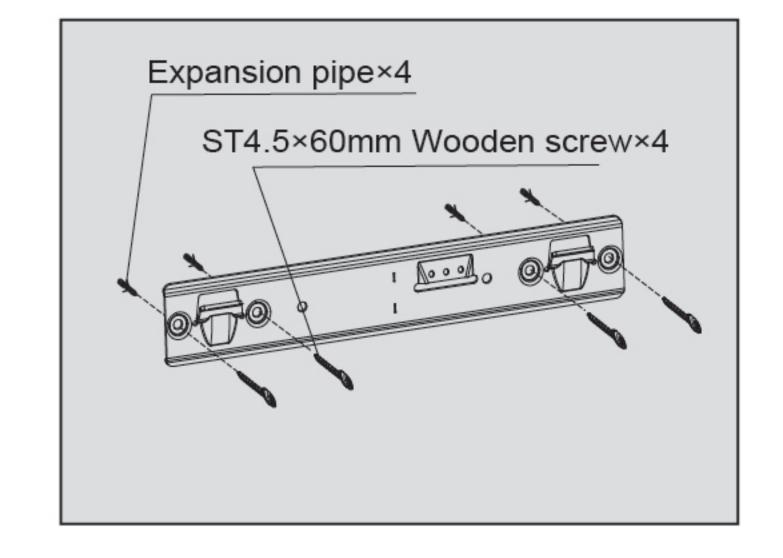

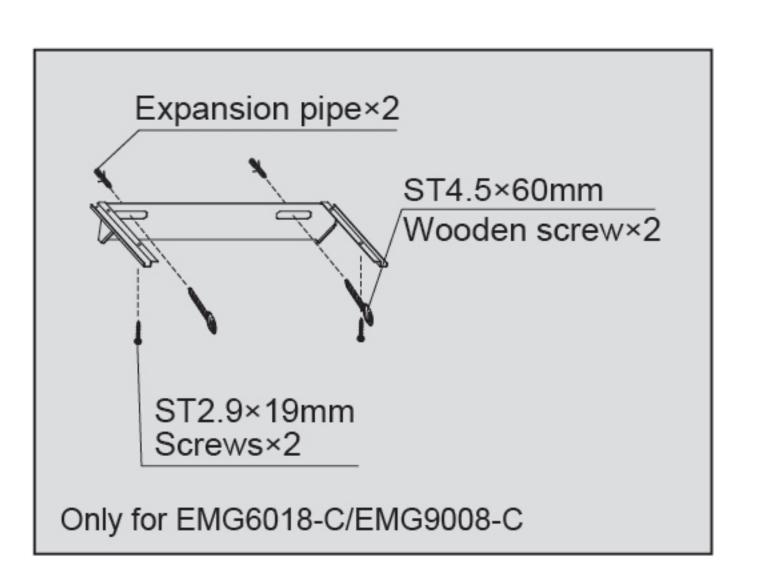


4.As shown in the figure below, use 8(M4×18mm) outlet housing screws to fix the outlet housing and sealing ring on the top of the main body.

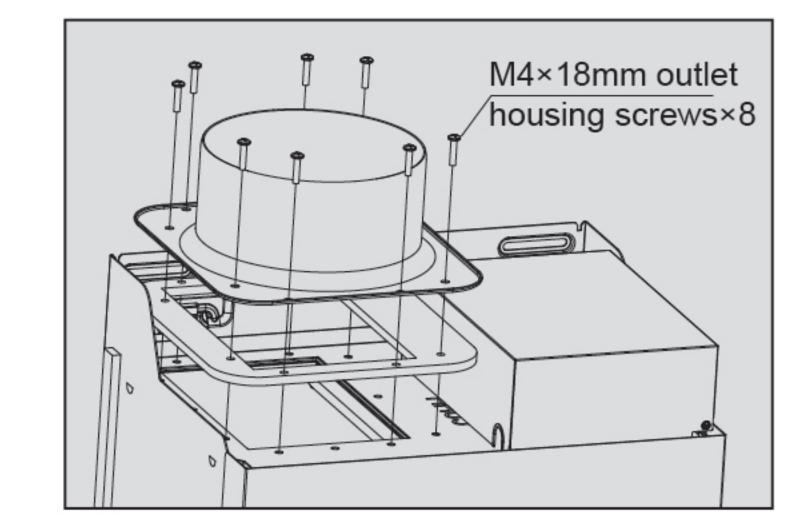


5.Arrange the exhaust duct: the aluminum foil exhaust duct and the reserved smoke tube or


wall hole shall be sealed tightly to prevent smoke leakage, the smoke tube shall be free from extrusion, deformation and small-angle elbow, the number of elbows shall not exceed 2, and the smoke tube shall be straightened and fixed.

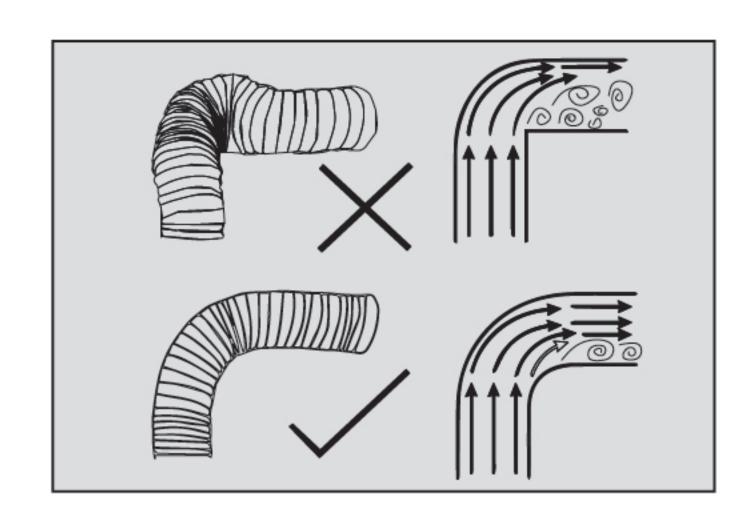

6.Lift the main body, hang the hook holes at the back into the hooks, use the level ruler to confirm that the main body is horizontal, and use the fan frame screws M4×6mm to fix the fan frame and the hooks.

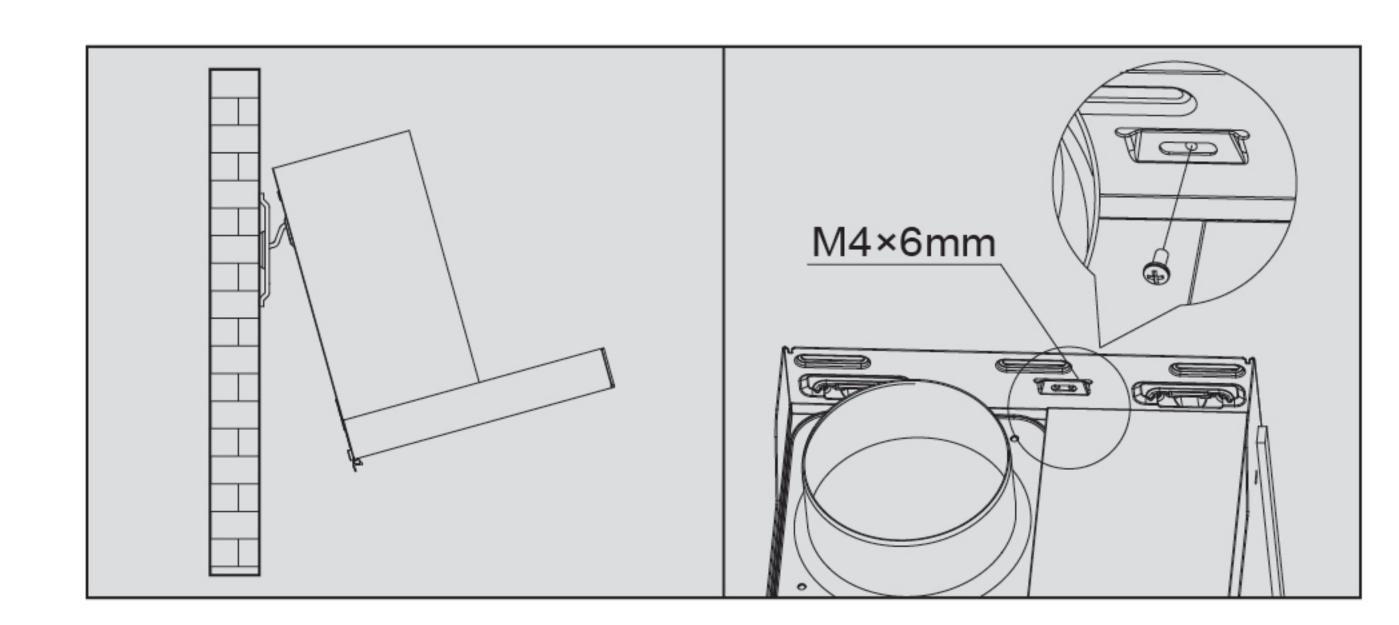



7.Connect the exhaust duct: cut off the redundant exhaust duct or connect the smoke tube according to the actual distance, put the smoke tube into the outlet housing connecting rings, and finally wrap it with Sealing tape for fixation and sealing; Plug the power cable of the range hood into the socket and turn on the fan to detect whether there is air leakage.

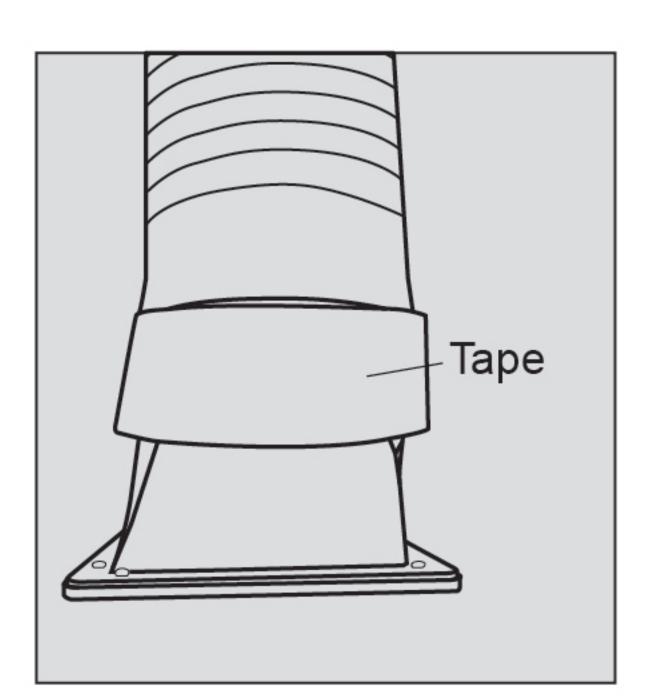



8.Installation of fan cover and decorative cover: (Only for EMG6018-C/EMG9008-C)

- (1) Tear off the protective films on the surfaces of the fan cover and decorative cover;
- (2) Place the decorative cover into the fan cover;
- (3) Pick up the fan cover and the decorative cover at the same time, first clip the decorative cover into the decorative cover hook, and then push the decorative cover and fan cover to the end along the decorative cover hook assembly at the same time.
- (4) After pushing the decorative cover and the fan cover to the end, the fan cover slowly slips down, clamp the fan cover locking tab into the fan frame, and then insert the fan cover into the gap between the top plate and the fan frame.

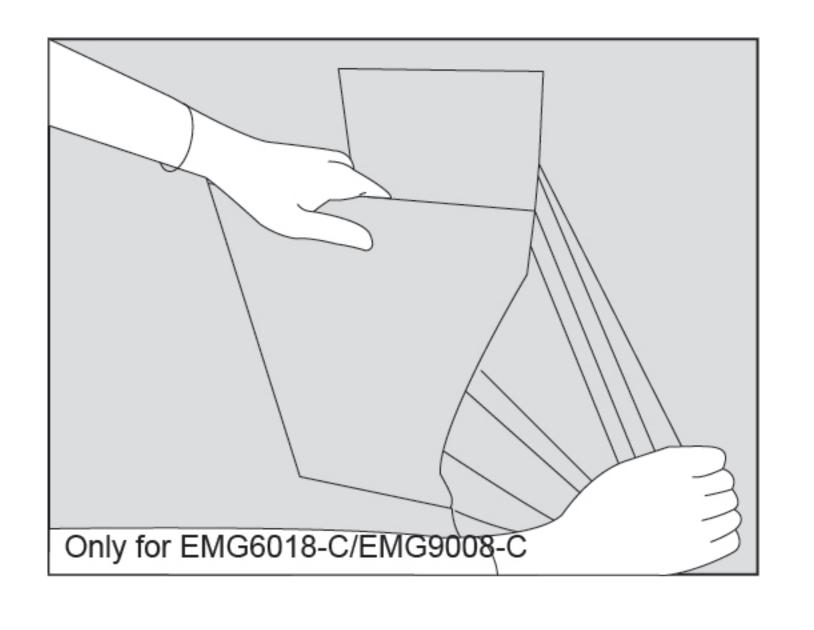

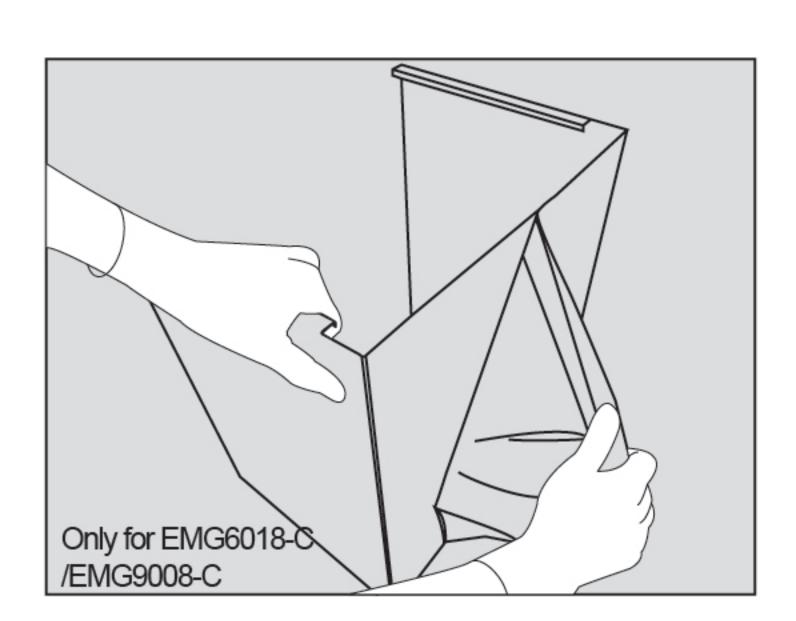


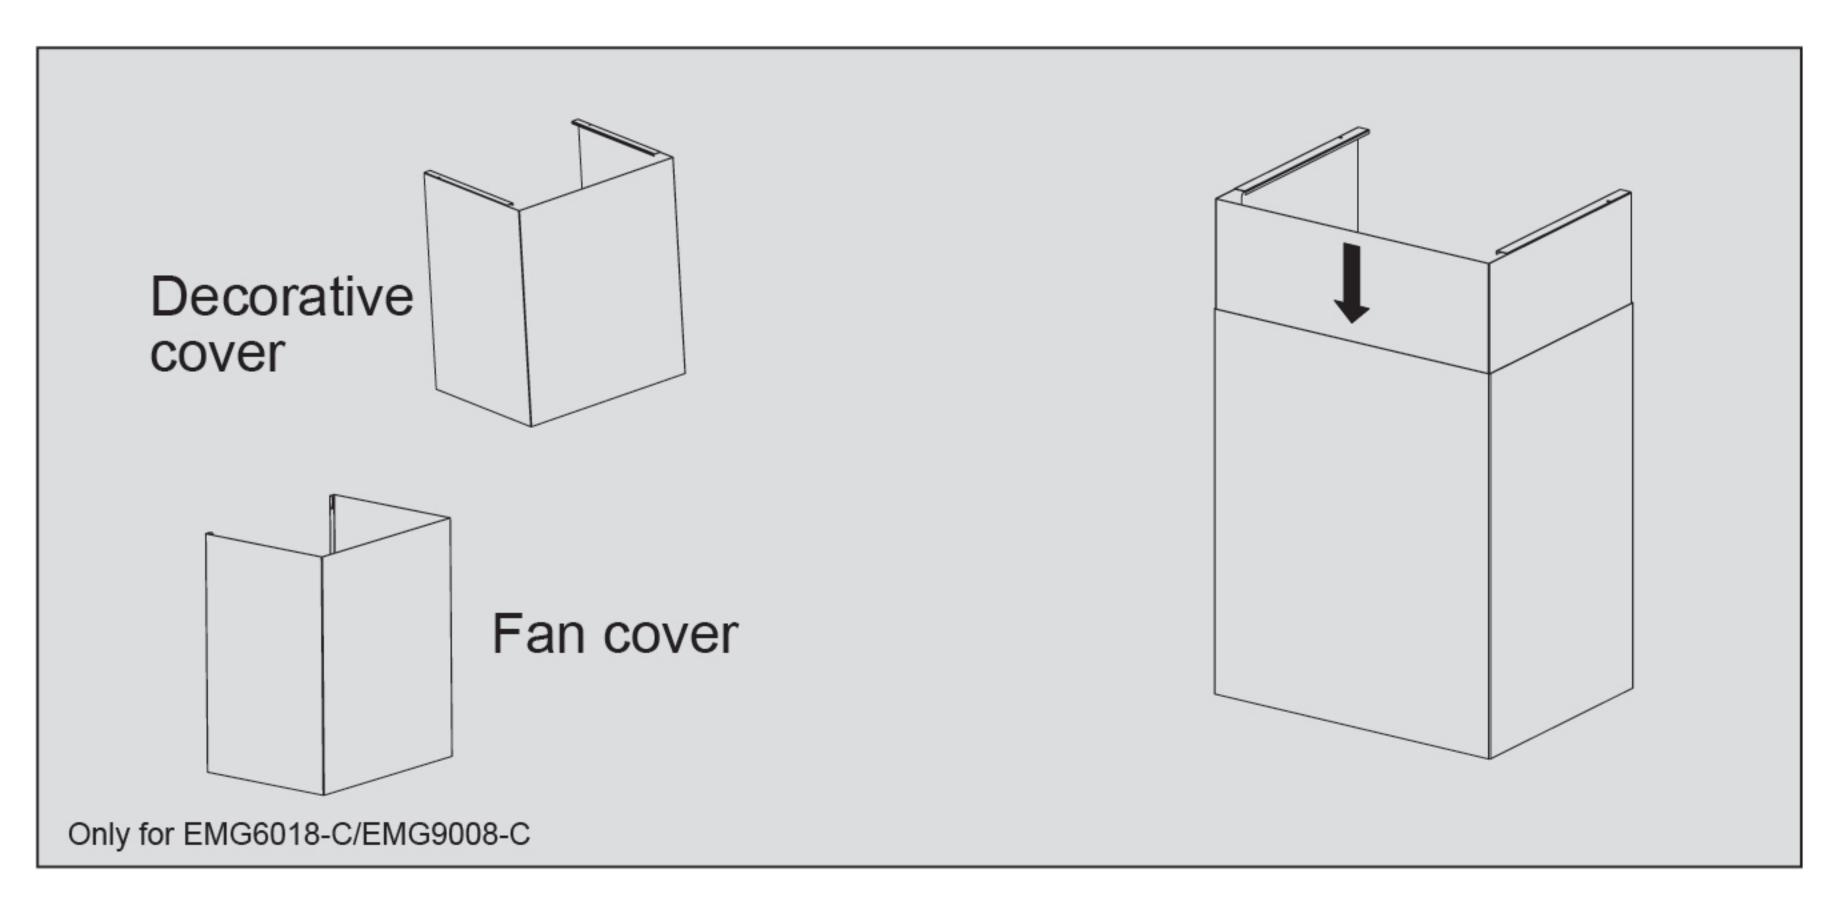

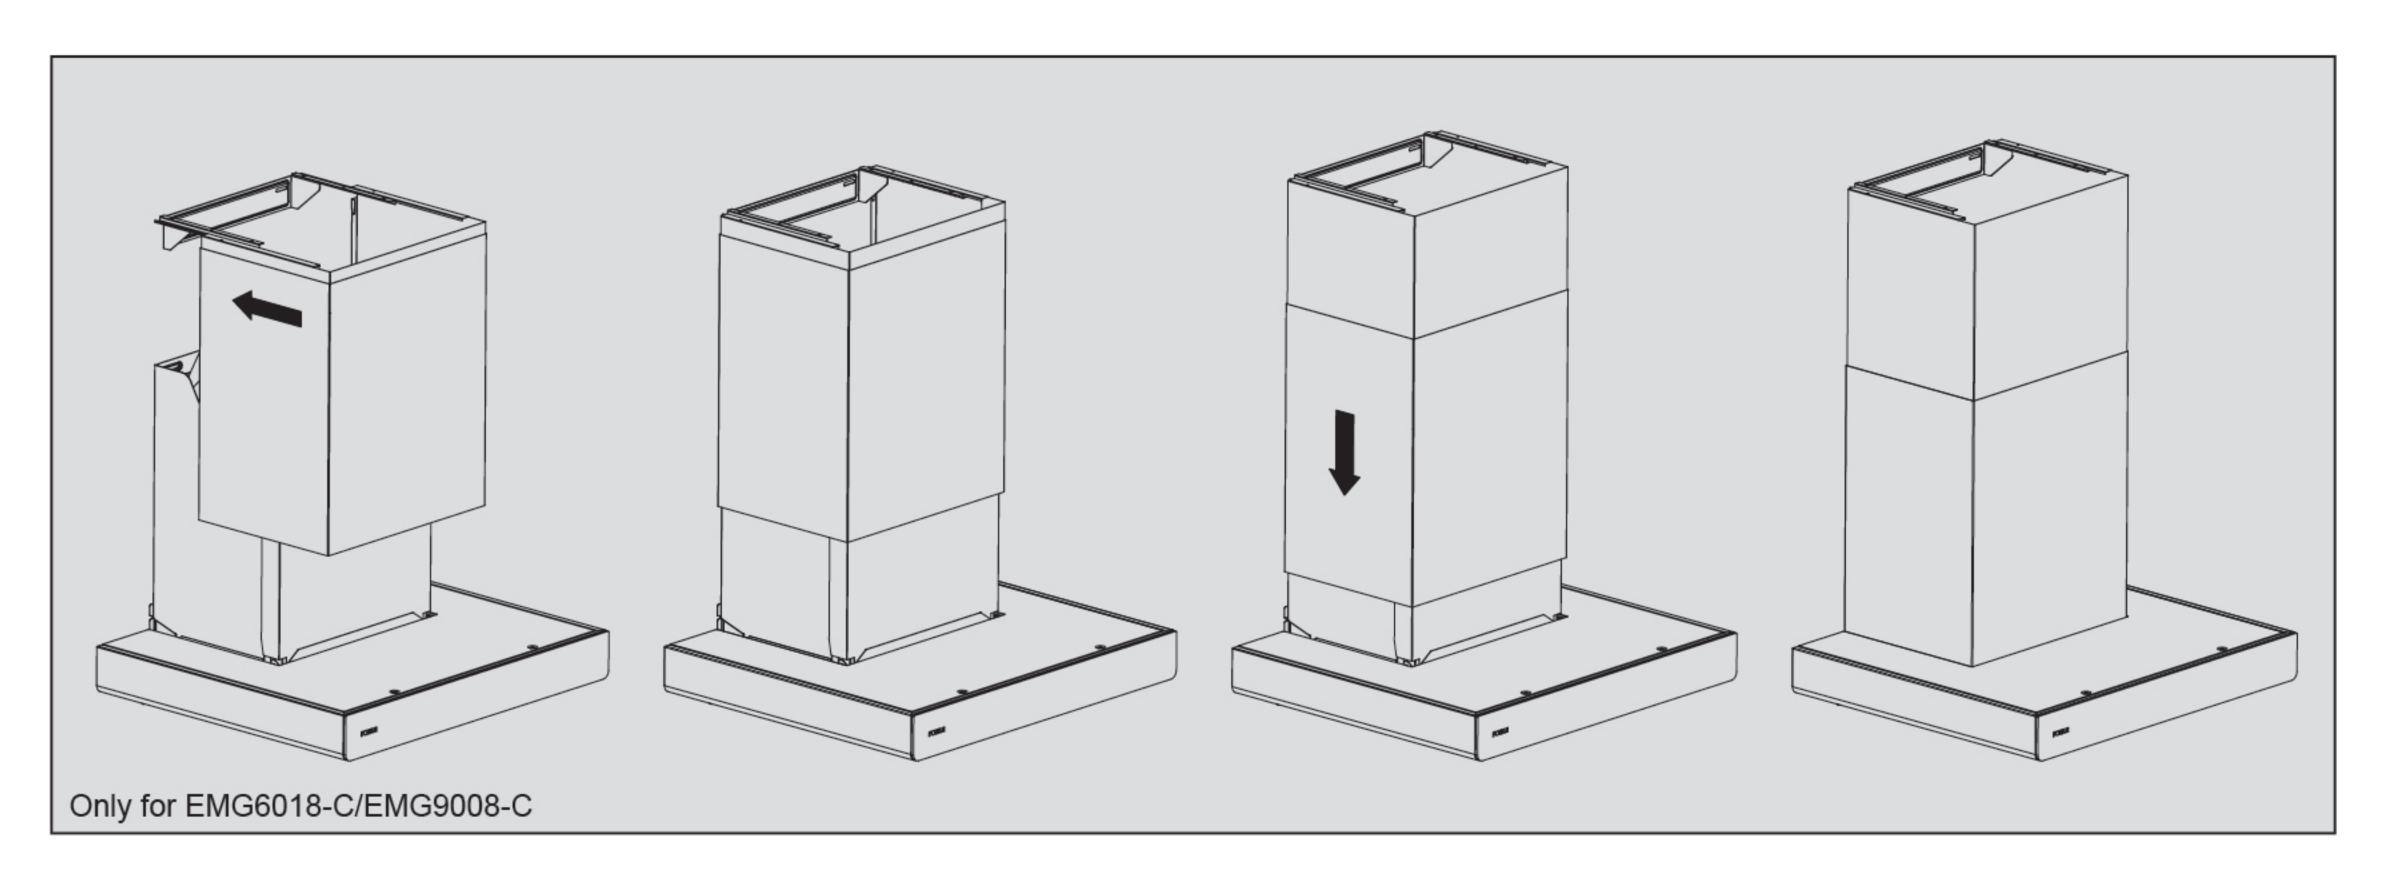


9.Installation the wing plate rack;


(1)Remove the components of the rack;

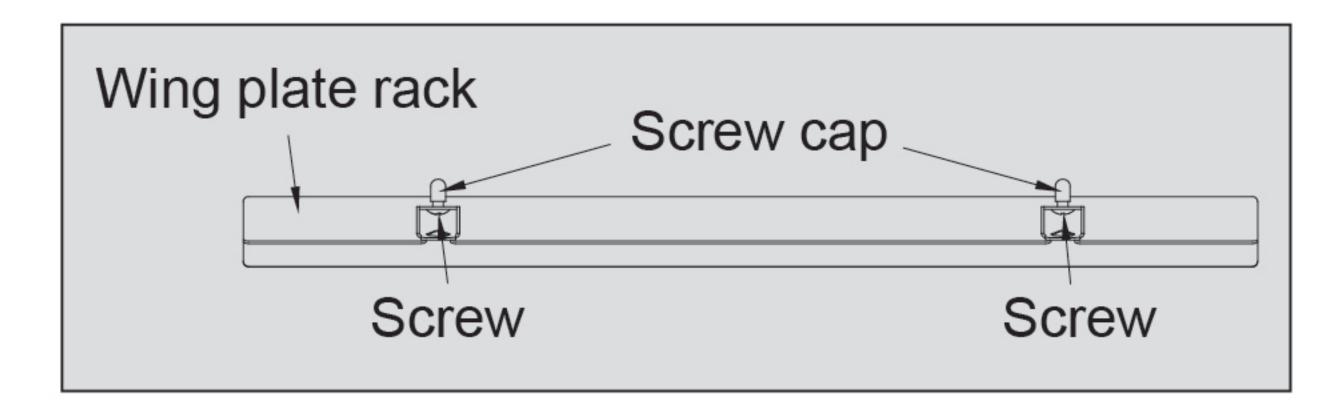


(2)Remove the screw cap;

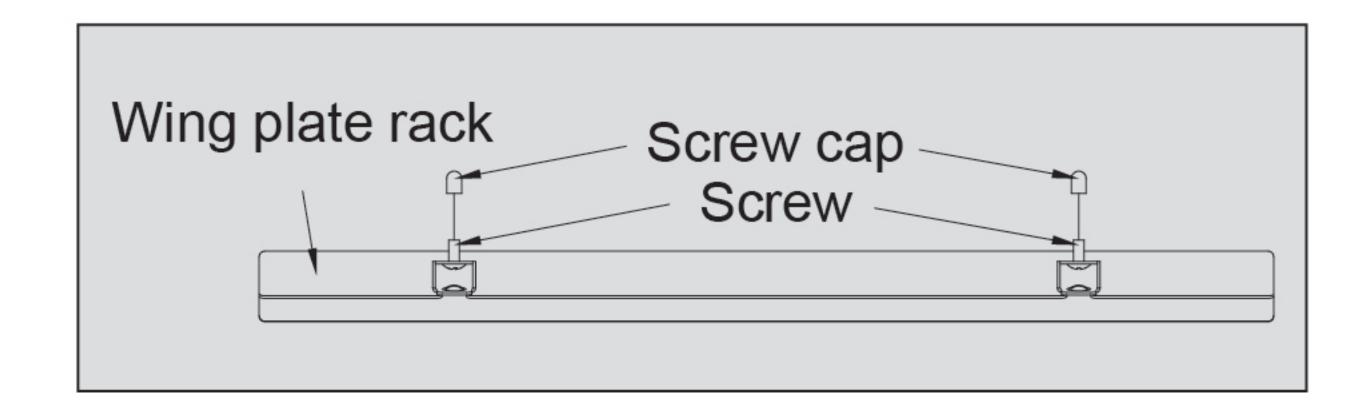

(3) Fix the components of the rack to the bottom of the range hood with a cross screwdriver.

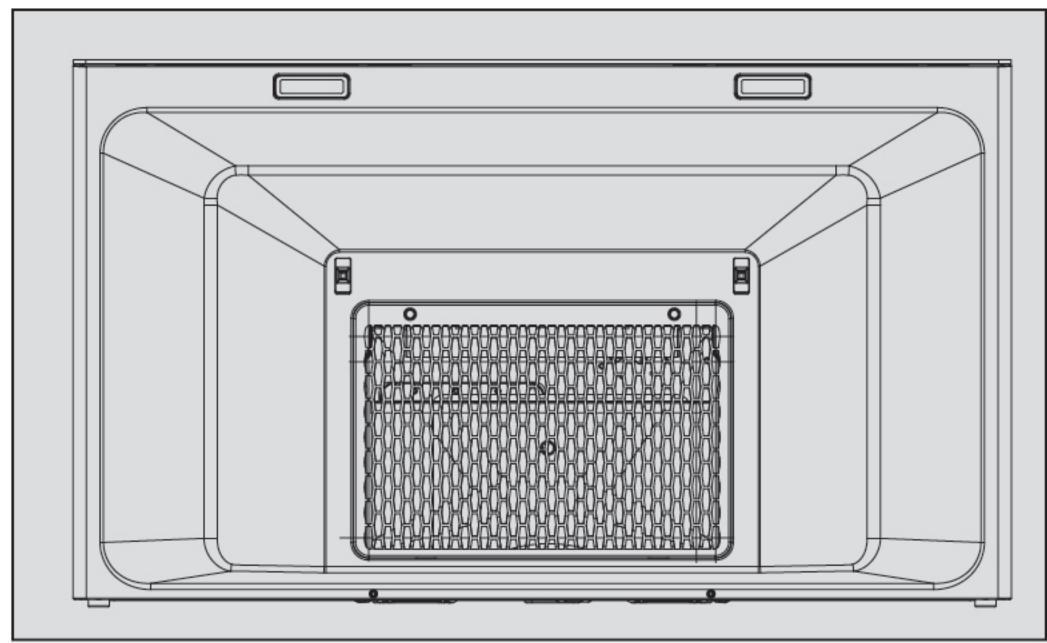

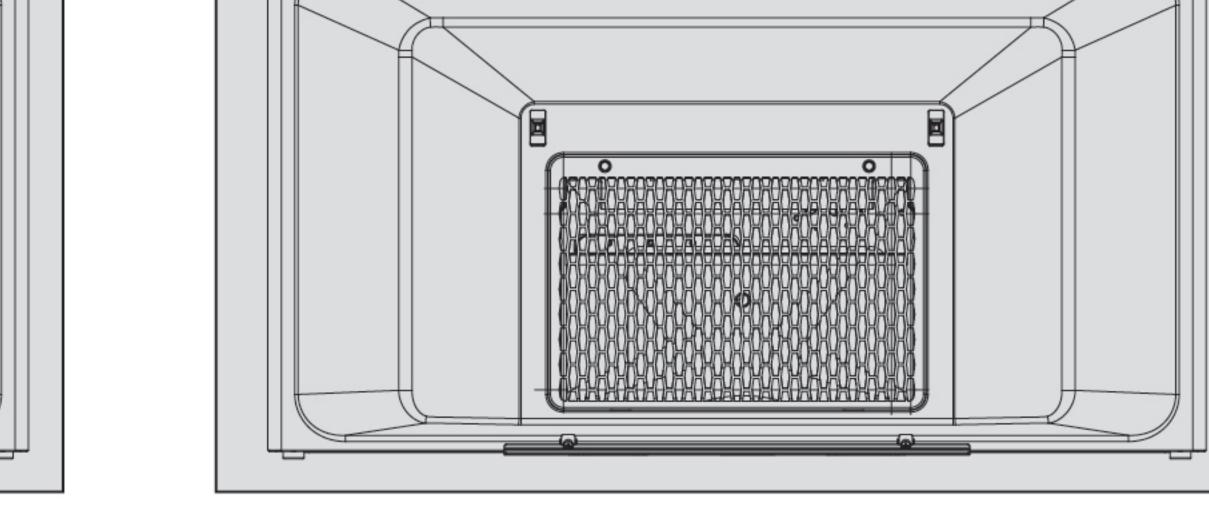



Before installation


After installation

10.Install the wing plate:

- (1) Tear off the protective films on the surface of the wing plate;
- (2) Hold the front side of the wing plate tightly with both hands, and put the left and right hooks on the rear side of the wing plate into the hook frame at the bottom of the fume hood;
- (3) Hold the wing plate with both hands, rotate it upward, and then clamp the wing plate locking tab into the touch tab in the fume hood.

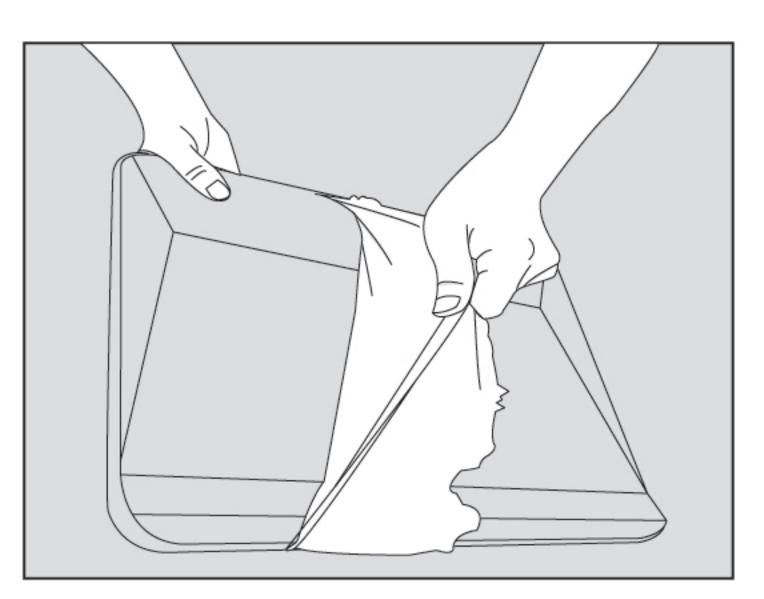

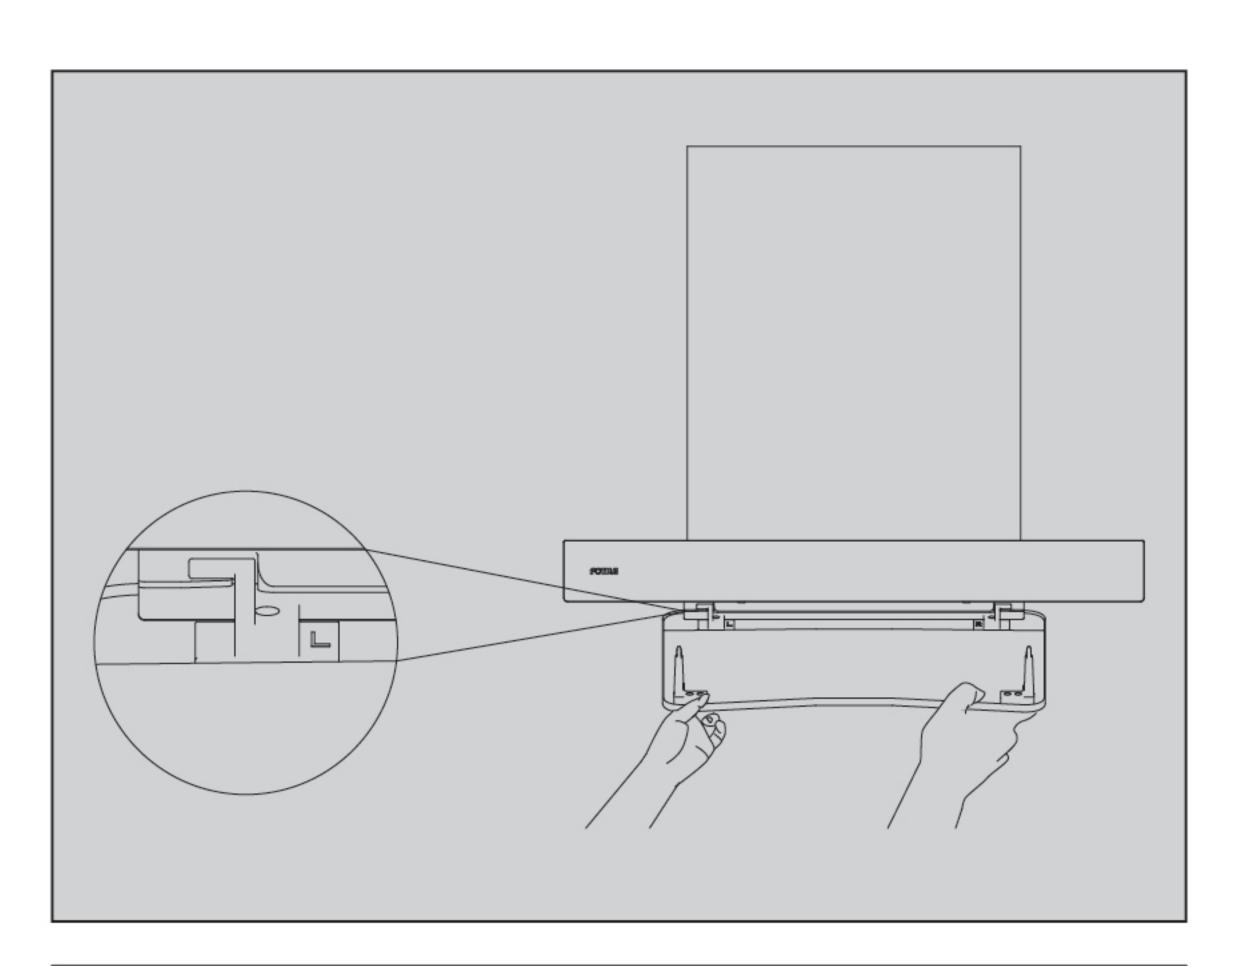

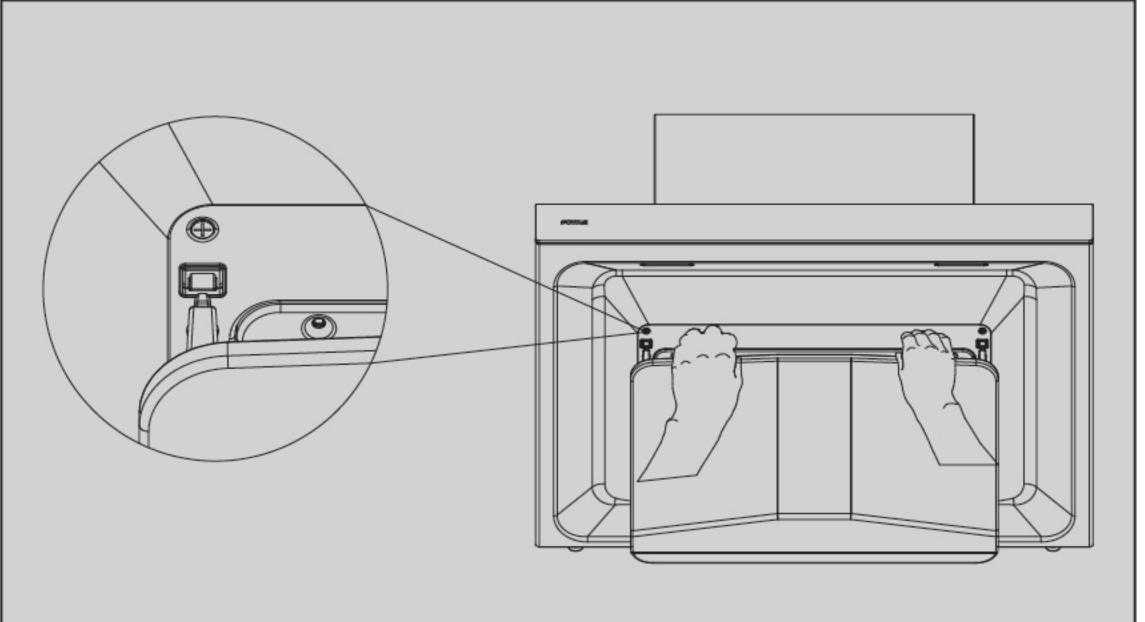



- a. First take down the fan cover prior to installation;b. Select the drill bit according to the specific conditions of the drilling place.

Don't exhaust the waste gas from the range hood to the hot flue for exhausting Warning combustion gas or smoke of other fuels.

Debugging

- 1. Press the power/delay button, then press the high-speed /turbo button to check whether the motor rotates normally. In case of the following abnormal conditions, cut off the power supply immediately, stop the operation, and check whether this is due to installation
 - (1) The body vibrates violently
 - (2) The blades not rotate
- (3) There is an obvious friction sound when the blades rotate
- (4) The motor makes an abnormal
- 2. Check whether all buttons are functioning normally according to the operation instructions

(If it is determined that the range hood is faulty, please call the Fotile authorized service center)

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Cleaning and Maintenance

I. Precautions for cleaning and maintenance


For convenient use, please clean the surface of the range hood frequently, which is good for the normal use of range hood.

- 1. Clean with neutral soap or neutral detergent, and dry the surface of machine body with a soft cloth after cleaning.
- 2. Clean the stains on the surface of range hood with neutral detergent, and keep the detergent away from all buttons. Drop the detergent to the stains and keep it there for a moment (the detergent should not be kept on the machine body for a long time, otherwise it will damage the machine), and wipe the stains with soft cleaning cloth; remove the detergent with a damp towel, and then wipe the machine body with a soft dry towel.
- 3. Do not allow stains to remain on the surface of the range hood for too long.
- 4. If the stainless steel panel is stained with salty liquor, disinfectant, bleaching powder and other cleanser, please wipe it by wet cloth at once and dry it by dry cloth.




- a. There is a fire risk if cleaning is not carried out in accordance with the instructions.
- b.Please cut off the power first before cleaning and replacing components so as not to get an electric shock.
- c.Prevent the electrical parts such as motor and all control buttons from water while cleaning.
- d.Do not put your hand into the impeller operating area during operation of the impeller.
- e.Please don't clean with gasoline, acidic substance, benzene, solvent and other chemical agents.
- f.Please don't clean the surface with rough material like steel wire ball, brush or coarse cloth, etc. It will greatly scratch the surface.


II. Routine Cleaning

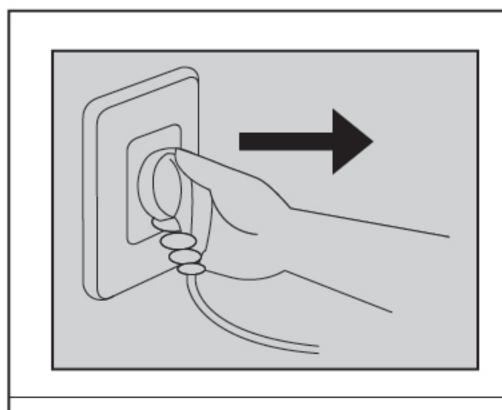


Cut off the power before cleaning.

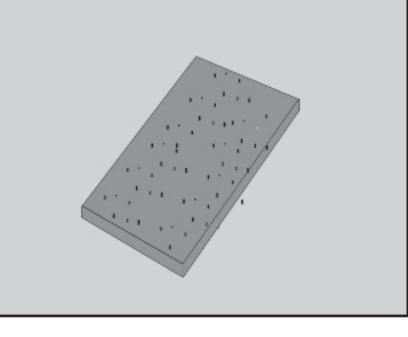

3. Please don't clean the surface with rough material like steel wire ball, brush or coarse cloth, etc. It will greatly scratch the surface.

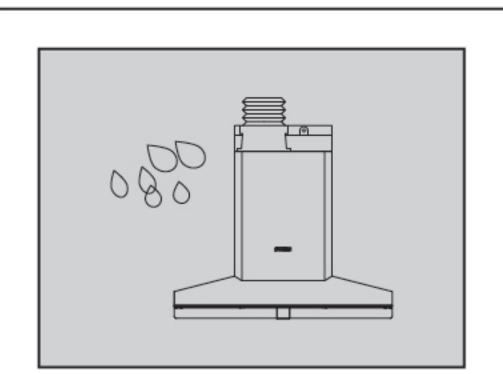

 All electric parts, include motor, switch, etc. should be away from water.

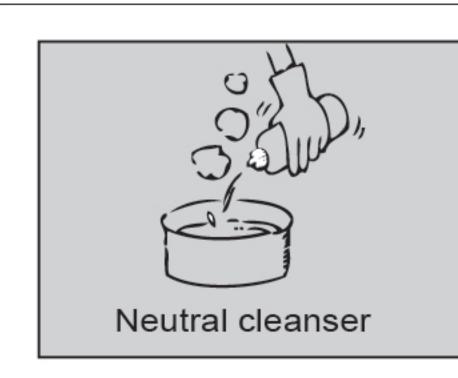



4. Please don't clean with gasoline, acidic substance, benzene, solvent and other chemical agents. If you need to clean, please use neutral cleanser, and wipe

dry the appliance surface by soft cloth after cleaning.





5. If the stainless steel panel is stained with salty liquor, disinfectant, bleaching powder and other cleanser, please wipe it by wet cloth at once and dry it by dry cloth.

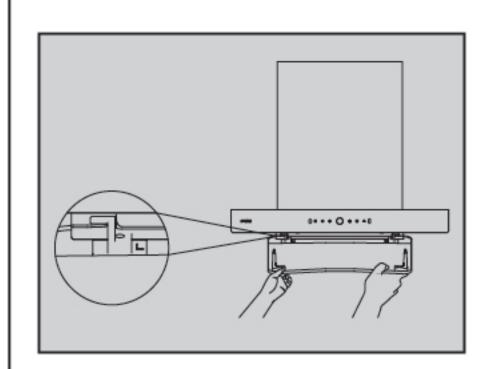

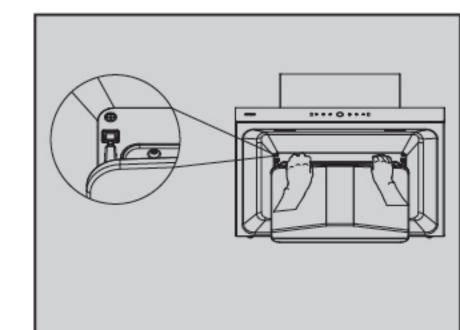

6. First, grasp the front edge of the wing plate with both hands, flip it downward to make the wing plate claw detach, then flip it downward by a certain angle, and finally take out the wing plate with both hands holding it smoothly.

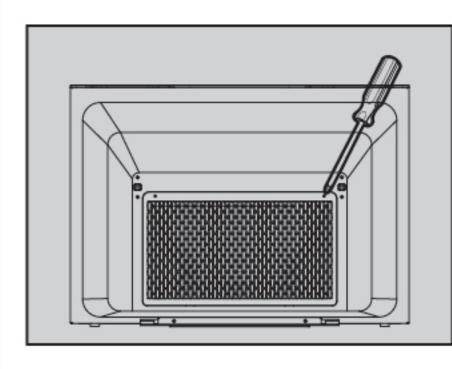

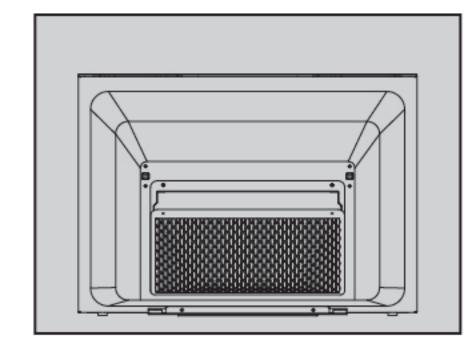

7. Drag the oil screen with the left hand and loosen the two screws that secure the oil screen with a Phillips screwdriver in the right hand to remove the oil screen.



- a.After cleaning, restore the smoke baffle shield before powering off.
- b.Please wipe surface of range hood and surface of air inlet net then close smoke baffle shield after using range hood every time.
- c.Use type lamp is self-ballasted flourescent reflector lamp-Interral induction type ballast.
 - 1.Max wattage:3W
- 2.Voltage range:12V
- 3.Dimensions:width 72mm/depth 19mm/height 21mm

Usage

Main Technical Specifications

Electrical parameter

| Model | Voltage/Frequency | Input Power | Motor Power | LED Light Power |
|--|-------------------|-------------|-------------|--------------------|
| EMG6018/EMG6018-C EMG9008/EMG9008-C | 220~240V/50Hz | 300W | 294W | 3W×2 |


Exhaust model (exhaust pipe)

| | EMG6018 | Product size | 595mm | (L)×522mm(W) | ×501mm(H) |
|-----------|----------------|--|----------------------------|----------------------------|-----------|
| Model | EMG6018-C | | 595mm(L)×522mm(W)×505mm(H) | | |
| | EMG9008 | | 895mm(L)×522mm(W)×501mm(H) | | |
| | EMG9008-C | | 895mm | 895mm(L)×522mm(W)×505mm(H) | |
| Max stati | c pressure(Pa) | | 820 | | |
| | Gear | Turbo mode High mode Middle mode Low m | | Low mode | |
| Air 1 | flow(m³/h) | 1060 | 1010 | 820 | 460 |
| Noi | se(dB(A)) | 61 | 59 | 55 | 42 |
| | | | | | |



- a. Noise shown in table is sound pressure level. The corresponding sound power level is: 54 dB(A) for low,61 dB(A) for high,71 dB(A) for middle and 73 dB(A) for turbo.
- b. The air flow in the table are tested in accordance with IEC 61591 standard. The noise in the table are tested in accordance with 60704 standard.

Operation Instruction

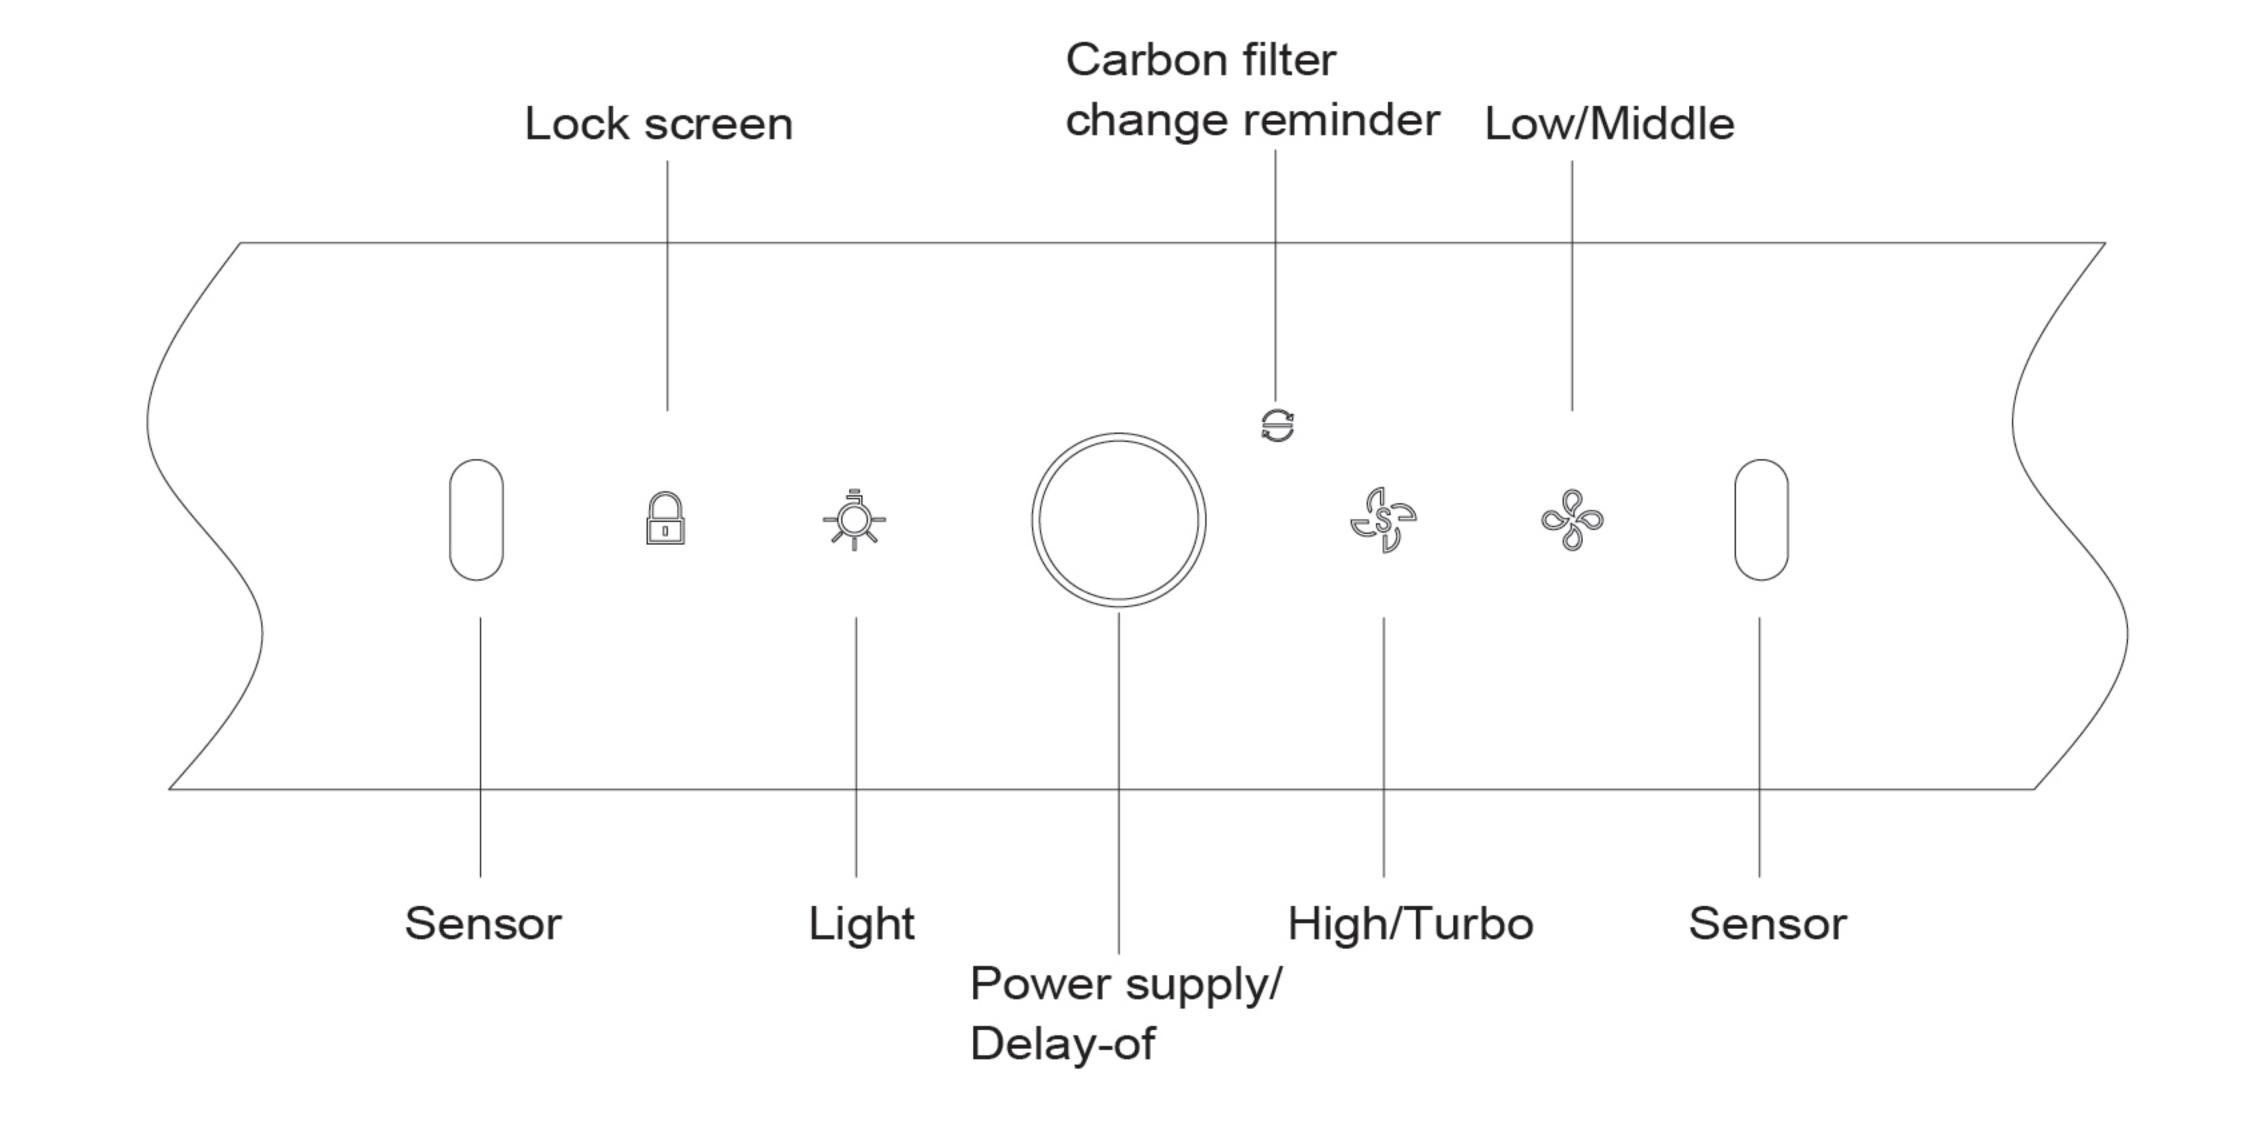




Gesture Function

In Off state, wave your hand and quickly pass by the induction windows on both ends of the operation panel. The range hood will start its high-speed operation and the LED lamp will be switched on. Wave your hand again and quickly pass by the induction windows on both ends of the operation panel, the power/delay \bigcirc indicator will flash and the range hood will be in the shutdown delay status. The LED lamp remains in its original state, and the light can be turned off by gently touching the lamp button.

After operating for 1 minute in its current state, the fan will switch to low-speed operation and operate for 4 minutes before shutting down.

In Off state, press the lighting button \Rightarrow and low-speed/middle-speed button \Rightarrow simultaneously for 5 seconds, all the buttons on the control panel will be lit for 1 second and then go out, the gesture induction function is enabled/disabled.

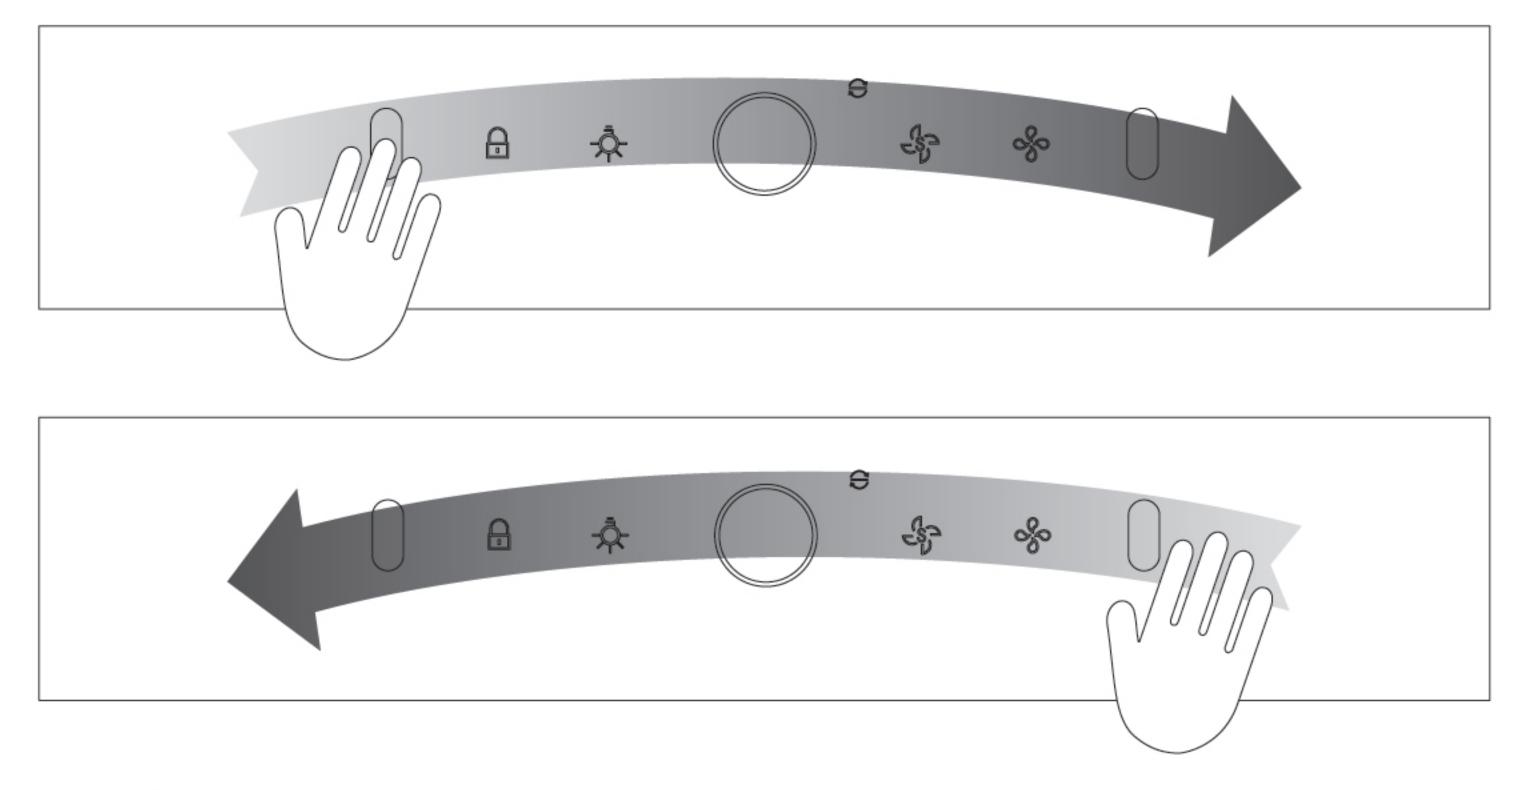

■ Power/Delay button ○

In Off state, gently touch the power/delay button once, the range hood will be in the standby state, the power/delay button indicator will be fully lit, and other button indicators will be slightly lit; in the operating state, gently touch the power/delay button, the power/delay button indicator will flash and the range hood will be in the shutdown delay state. The LED lamp remains in the original state, and the light can be turned off by gently touching the lamp button. After operating for 1 minute in the current state, the fan will switch to low-speed operation for 4 minutes before shutting down. In the standby state or delayed shutdown state, gently touch the power/delay button once. All the button indicators will go out and the range hood will then be powered off. All the following button commands will be carried out in standby mode:

High mode/Turbo mode

Gently touch the high mode/turbo mode. The high mode/turbo mode indicator will be half lit, and range hood will operate in high mode; gently touch the high mode/turbo mode again, the high mode/turbo mode indicator will be fully lit and flash, and the range hood will operate in turbo mode state. After 100 seconds, the range hood will return to high mode operation, and the high mode/turbo mode indicator will be half lit.

When the range hood is operating in turbo mode state, gently touch the high mode/turbo mode again, the high mode/turbo mode indicator will be lit slightly, and the range hood will stop operating.

Low mode/Middle mode button

Gently touch the low mode/middle mode button, the low mode/middle mode indicator will be half lit, and the range hood will operate in low mode state; gently touch the low mode/middle mode button again, the low mode/middle mode indicator will be fully lit, and the range hood will operate in middle mode state; gently touch the low mode/middle mode button again, the low mode/middle mode indicator will be lit slightly, and the range hood will stop operating.

Lighting button -

Gently touch the lighting button, the button will be fully lit and the LED lamp will be turned on. Gently touch the lighting button again, the button will be lit slightly and the LED lamp will be switched off.

Lock screen button 🔒

When the range hood is not in operation, press the lock screen button for 2 seconds. After the machine makes a clicking sound, the indicator of lock screen button will be fully lit and flash, all buttons will be locked. The screen locking function can be cancelled by long pressing the lock screen button again for 2 seconds. During operation of the range hood, the lock screen button is not active. If pressed, it will make a clicking sound.

Carbon filter change reminder =

It is off by default, and it is only applicable to users who have separately purchased and installed the "carbon filter".

In Off state, simultaneously hold down the lighting button high mode/turbo mode and low mode/middle mode button for 3 seconds, After hearing a clicking sound, the carbon filter change reminder lamp will be lit and then go out after 1 second. The carbon filter change reminder function is enabled. When this function is enabled, simultaneously holding down the lighting button high mode /turbo mode and low mode/middle mode button for 3 seconds will disable the carbon filter change reminder function, and a clicking sound will be heard.

When the carbon filter change reminder lights up, please promptly change the carbon filter in the range hood. After completing the change in Off state, simultaneously hold down the lighting button 2 and high mode/turbo mode 3 for 3 seconds, After hearing the clicking sound, the carbon filter change reminder lamp will go out, and the change process is finished.



Prompts: 1.In standby mode, if there is no operation for 2 minutes, the range hood will automatically shut down;

2.It is suggested to turn on the range hood when cooking to keep the kitchen air fresh, otherwise the gesture function may be triggered when more vapor passes by the induction window;

Normal Malfunction and Trouble Shooting

| Malfunctions | Possible reasons | How to check | |
|---|---|--|--|
| Range hood can't work, light can't lighten | Haven't connected with | Check whether the plug is well inserted or not | |
| | power supply | Check whether there is electricity or not in the plug | |
| Motor can working, but light can't lighten | LED light is damaged | Replace LED light (done by professional people) | |
| There is machinery shaking noise | Screw is loosed | check whether the surface screws are tightened or not | |
| Suction power is weak | Too long distance between range hood and stove | Lower the range hood installation height (done by professional people) | |
| | Too much ventilation near the range hood leads to strong convection | Close some doors and windows | |
| Noisy | Exhaust pipe surface is distorted | Reinstall exhaust pipe (done by professional people) | |



- a.Change the LED light: please contact FOTILE after-sale service center.
- b.If the range hood still can't work after getting rid of the above malfunctions, please contact FOTILE service center.
- c.The following information is required for the warranty period:
- 1.Date of purchase 2.Product model
- 3.Serial number 4.Relevant vouchers for purchase
- d.The ventilator shall be not allowed to be repaired by any party other than Fotile's appointed technicians.Otherwise it may cause serious consequences and exempt the product from warranty.
- e.The following circumstances do not fall into the scope of free warranty, and a fee will be charged for repair.
- 1.Damage resulting from improper handling, installation, use, maintenance and safekeeping conducted by customer.
- 2.Failure and damage caused by using the product beyond the normal operating conditions(damage caused in the case that the voltage is higher than 264V or lower than 189V).
- 3.The product installed, dismantled or repaired by customer or any party other than Fotile's appointed service staff or agency.
- 4.Discrepancy between the information on the purchase voucher and the warranty card and the product.
- 5. Product damage caused by force majeure (such as natural disaster and war, etc.).
- 6.Product failure or damage arising from use not in conformity with the "instructions".