

吸油烟機 使用安裝説明書 ZMG9057-Y

使用產品之前,請仔細閱讀本説明書。請妥善保管,以備參閱。


如有任何需要,請聯系方太授權的服務中心。本 説明書部分圖片爲示意圖,僅供參考,若圖片與 實物不符,以實物爲准。 WWW.FOTILEGLOBAL.COM 尊敬的用户, 您好! 感謝您選購方太公司爲您精心制造的方太系列產品,

使用前請通讀本《使用安裝説明書》(以下簡稱説明書),此説明書將有利于您熟悉油烟機安全信息、操作和保養維修等,并讓您享受到全新的下厨樂趣。

請您在使用前務必認真閱讀説明書,并遵從説明書要求進行使用。本説明書的操作説明對于維持產品的良好工作狀况十分重要,若因使用不當造成產品故障,您將失去免費保修的權利,任何直接或間接的免費保修申請將不被本公司各地授權的服務中心所接受。同時我們建議您在質量保修期內及保修期后,如有需要維修時請與方太公司當地授權的服務中心聯系,這對您和我們都是非常重要的。

我們授權的服務中心將爲您提供方太公司專業的零部件及技術支持,使您的產品得到優質快捷的維修保障,同時讓您得到最輕松細心的服務。

如果您需要服務,您將需要提供產品型號和序列號。

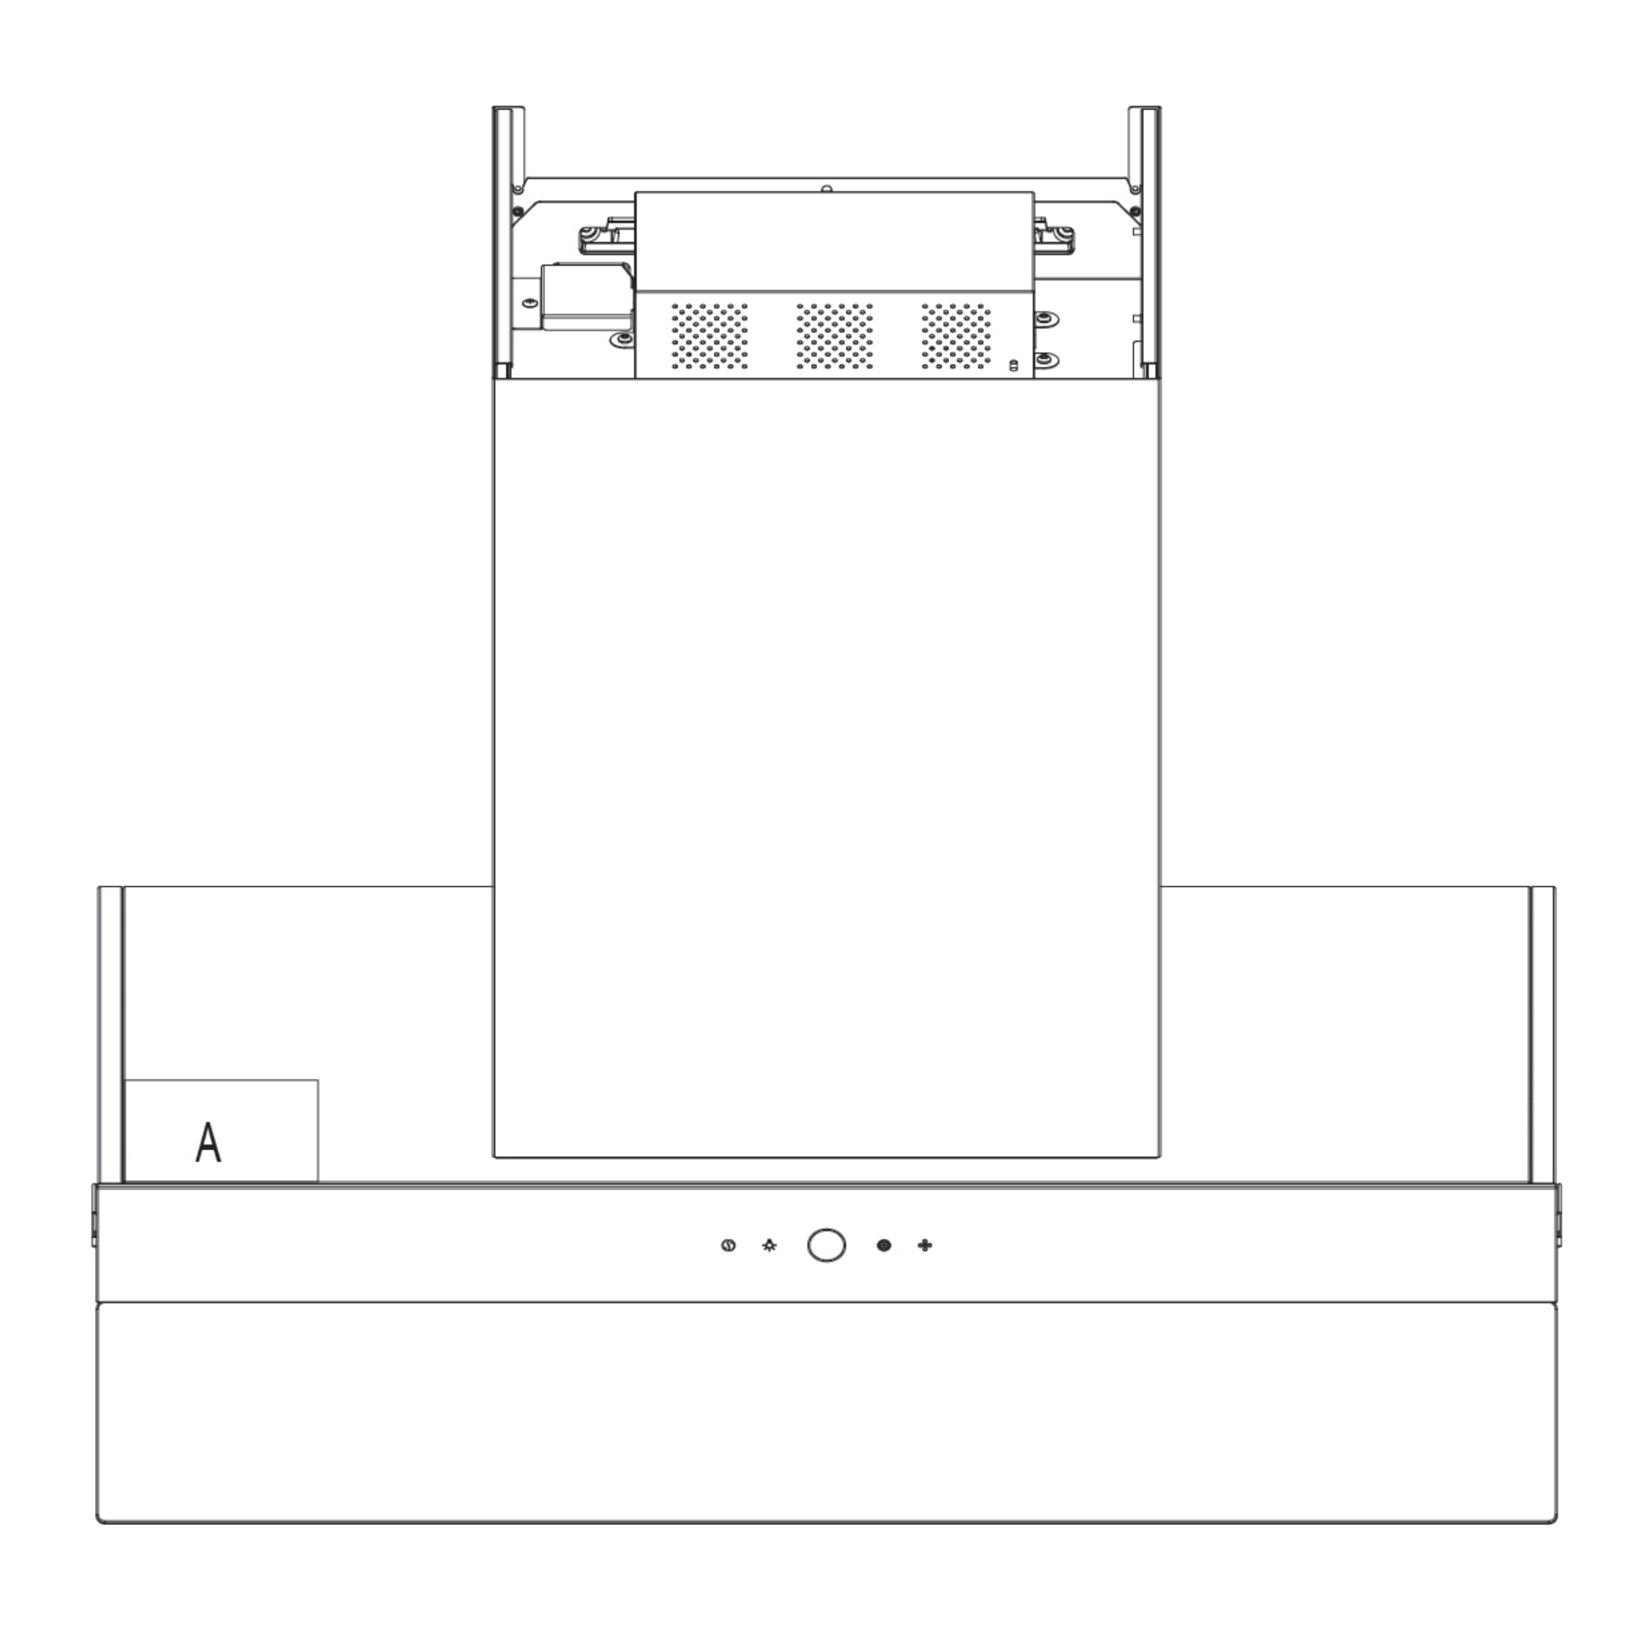

目錄

警告和安全説明1		
安裝	5	
	装箱單5	
	安裝警告6	
	産品尺寸圖7	
	安裝建議7	
	安裝步驟9	
	安裝后的調試 11	
清潔保養-	12	
使用方法-	13	
	主要技術參數 13	
	操作説明 13	
	關于吸油烟機與竈具一體控制的説明15	
常見故障的識别和處理16		

產品特征和參數會在無通知情况下隨時更改,并且可能與此説明書略有不同。 請訪問我們的官網www.fotileglobal.com,獲取最新信息。



警告和安全説明

特别説明:

請嚴格按照本説明書規定使用,由于本産品不當使用造成的任何財産損失、人身損害,本公 司不承擔責任。

⚠警告:

器具不打算由存在肢體、感官或精神能力缺陷或缺少使用經驗和知識的人(包括兒童)使用, 除非有負責他們安全的人對他們進行與器具使用有關的監督或指導。

此產品不適用于(包括8歲以下兒童)身體、感知或精神能力减弱或缺乏經驗或知識的人群, 除非在對其安全負責的人監督或指導如何安全使用此產品的情况下(針對歐盟市場)。 應照看好兒童,確保他們不玩耍本器具。

注意: 當使用烹飪器具時, 易觸及部件可能會發燙。



- a. 請定期倒去積油,每次使用吸油烟機后,請擦拭吸油烟機外表面。b. 爲了更加舒適地使用,請經常對吸油烟機外表面和油杯進行清潔。
 - c. 如果不按説明書規定的方法清洗,吸油烟機有起火的危險。

接 地	插頭必須插在合理安裝并接地的電源插座上,以確保安全。接地綫不得與煤氣管、自來水管、避雷針、電話綫等連接。接地不良可能會引起觸電或其他事故。
	本器具含有僅用于實現功能用途的接地連接。
The Market of the second of th	由于本吸油烟機的安裝程序比較復雜,且重量較重,應由專業安裝維修人員按照説明書進行安裝。未按説明書要求安裝螺釘或固定裝置可能會導致觸電、脱落、起火等危險。
	使用此新產品之前請開封檢查此產品是否受損,如果發現此產品有明顯的損壞,請勿安裝使用,請您立即聯系方太授權的服務中心。
Safety Guideline	請遵照加熱設備廠家的安全指南,同時要遵照消防等管理 部門頒布的安全標准進行。


>30mm	安裝吸油烟機的墻壁要有足够的支撑强度,對于中空墻壁,中空板實心層的厚度必須大于30mm以上,對于混凝土墻壁可直接打安裝孔。整機必須牢固安裝在墻壁上。
	當在墻壁、天花板上進行切割或者鑽孔時,請注意不要損壞電綫以及其他隱藏的設備。
	本産品僅供家庭日常使用,請不要用于商業用途或在其 它特殊環境中使用(例如:室外);也不能用來排出有 危險的或者容易爆炸的物質或者氣體。如您在特殊環境 中使用本産品,方太將不承擔責任。
	當吸油烟機與燃燒燃氣或其他燃料的器具同時使用時,房間必須通風良好(該條不適用于把氣體排回室内的器具)。
ON CONTRACTOR OFFE CONTRACTOR	油鍋着火時,請立即關閉吸油烟機(吸油烟機的運行會助燃火勢)。采用有效的滅火方法滅火。例如,用金屬的蓋子將明火蓋住,立即關閉燃氣總閥門,并使易燃物遠離明火。
	出風管必須確保排到室外。爲了避免火灾的發生并保持空 氣清新,請將廢氣排到室外。請不要將廢氣排到墻內、閣 樓、車庫中(只適用于有出風管的吸油烟機)。
T≤40°C	吸油烟機使用環境的温度不能超過40℃。
WARREN BOOK OF THE PROPERTY OF	請按照本説明書規定的方法清洗油烟機,否則吸油烟機有起火的危險。
	當油杯內的儲油達到油杯容積的三分之二時,請及時清理,防止溢出。油杯中所收集的廢油請勿食用!
ON OFF CO.	在移動吸油烟機進行安裝、清潔或者修理前,務必切斷電源,以免觸電;在進行安裝、清潔或修理時,應佩戴防護手套,以防被吸油烟機内金屬板快口傷手。






禁止



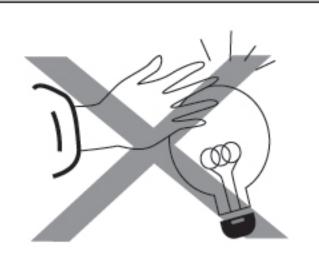


請勿觸摸已經開啓或者剛關閉不久的燈泡,以免燙傷。

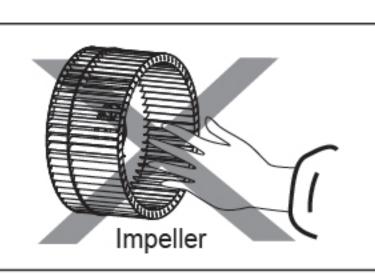

吸油烟機運行時不要將手或其他物品伸入葉輪中以免造成傷害。





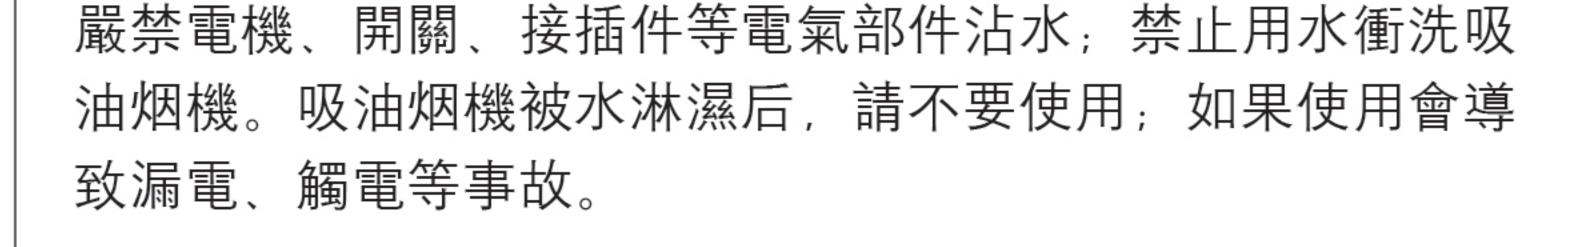



請不要用潮濕的手觸摸電源插頭、電器部件以及操作電源開關, 否則易發生觸電事故。



- a. 保修服務須由方太公司授權的服務機構或人員執行。如私自拆機維修,產品將不享受保修。
- b. 爲避免任何可能對產品的損害,請確保實際電壓和頻率與本説明書中闡明的一致
- c. 當吸油烟機與使用非電能的設備同時使用時,室内負壓不得超過4Pa(4x10-5bar)(針對德國市場)。
- d. 其他燃燒器具產生的燃燒氣體可能由于回流會對安全產生不利影響,這些氣體可能導致一氧化碳中毒,因此在安裝抽油烟機后,應由專業人員測試烟管,以確保燃燒氣體不會回流(針對澳洲市場)。
- e. 本公司產品上使用了鋼化玻璃,玻璃的鋼化機理决定這種玻璃存在極小概率的自爆。一旦發生非使用不當的自爆,我公司承諾免費提供該配件。鋼化玻璃在以下情况,發生破裂的幾率可能會大大提高,請避免發生:例如用炊具或其他硬物敲擊玻璃,特別是敲擊玻璃四個角部;打開油烟機周圍橱櫃門時撞擊到玻璃;玻璃處于過冷和過熱、冷熱交替嚴重的環境等情况。

安裝

裝箱單

	主機器	1		出風罩	1
+	密封膠帶	2	+	密封墊	1
	出風管	1		挂鈎	1
FARMAR TURNS FA	産品使用 説明書	1		排烟管螺釘 ST3.9×9.5mm	4
	挂鈎螺釘 ST4.5×60mm	6		膨脹管 φ10×60mm	6
	風機架螺釘 M4×6mm	2		油杯	1
	出風罩螺釘 M4×18mm	8			

以下配件須另外單獨購買 (請聯系方太授權網點)

外罩組件清單				
風機外罩	1		裝飾罩	1
裝飾罩挂鈎	1		挂鈎螺釘 ST4.5×60mm	2
膨脹管 φ10×60mm	2		墊條	2
裝飾罩螺釘 ST2.9×19mm	2		十字槽盤頭螺釘 M4×8mm	2

安裝警告

<u></u>注



建議厨房裝修完成后再安裝

吸油烟機。



如果安裝吸油烟機前需要移 動燃氣電,請在移動前關閉 燃氣閥門。



確保吸油烟機安裝的墻面平整, 吸油烟機必須保持水平。



安裝吸油烟機后,請確保機 器能够正常運行,并仔細閱讀 和保存好產品使用説明書。



新油烟機的包裝:請以環保的 方式處置這些包裝材料, 保持 一個良好的環境。請勿讓兒童 玩耍塑料薄膜和包裝箱,這可 能會產生窒息事故, 所以請讓 包裝材料遠離兒童, 包裝材料 不是玩具。



爲了保護環境,請妥善處理 不能使用的舊油烟機。



吸油烟機較重,且安裝過程復 雜,因此請聯系專業人員按照 產品使用説明書安裝。



吸油烟機可能有非常鋒利的 邊,在進行安裝、清潔或修 理時,請佩戴合格的防護手 套, 謹防被吸油烟機内金屬 板快口等劃傷和擦傷。



在墻上或天花板上開鑿或鑽孔 時,請注意不要損壞電綫和其 他隱藏的設備。安裝時請切斷 吸油烟機電源。



嚴格執行

請使用專用電源插座,并且專 用電源插座應有可靠接地。



安裝吸油烟機的墻壁要有足够 的支撑强度,否則吸油烟機可 能掉落損壞。




出風管必須確保排到室外。 爲了避免火灾的發生并保持 空氣清新,請將廢氣排到室外。 請不要將廢氣排到墻內、閣樓、 車庫中。(只適用于有出風管的 吸油烟機)器具排出的氣體不 應排到用于排出從燃燒燃氣 或其他燃料的器具中産生的 烟氣的烟道中(該條不適用于 把氣體排回室内的器具)。



安裝吸油烟機的墻壁要有足够的支撑强度,對于中空墻壁,中空板實心層的厚度「 必須大于30mm以上,對于混凝土墻壁可直接打安裝孔。整機必須牢固安裝在墻




產品尺寸圖

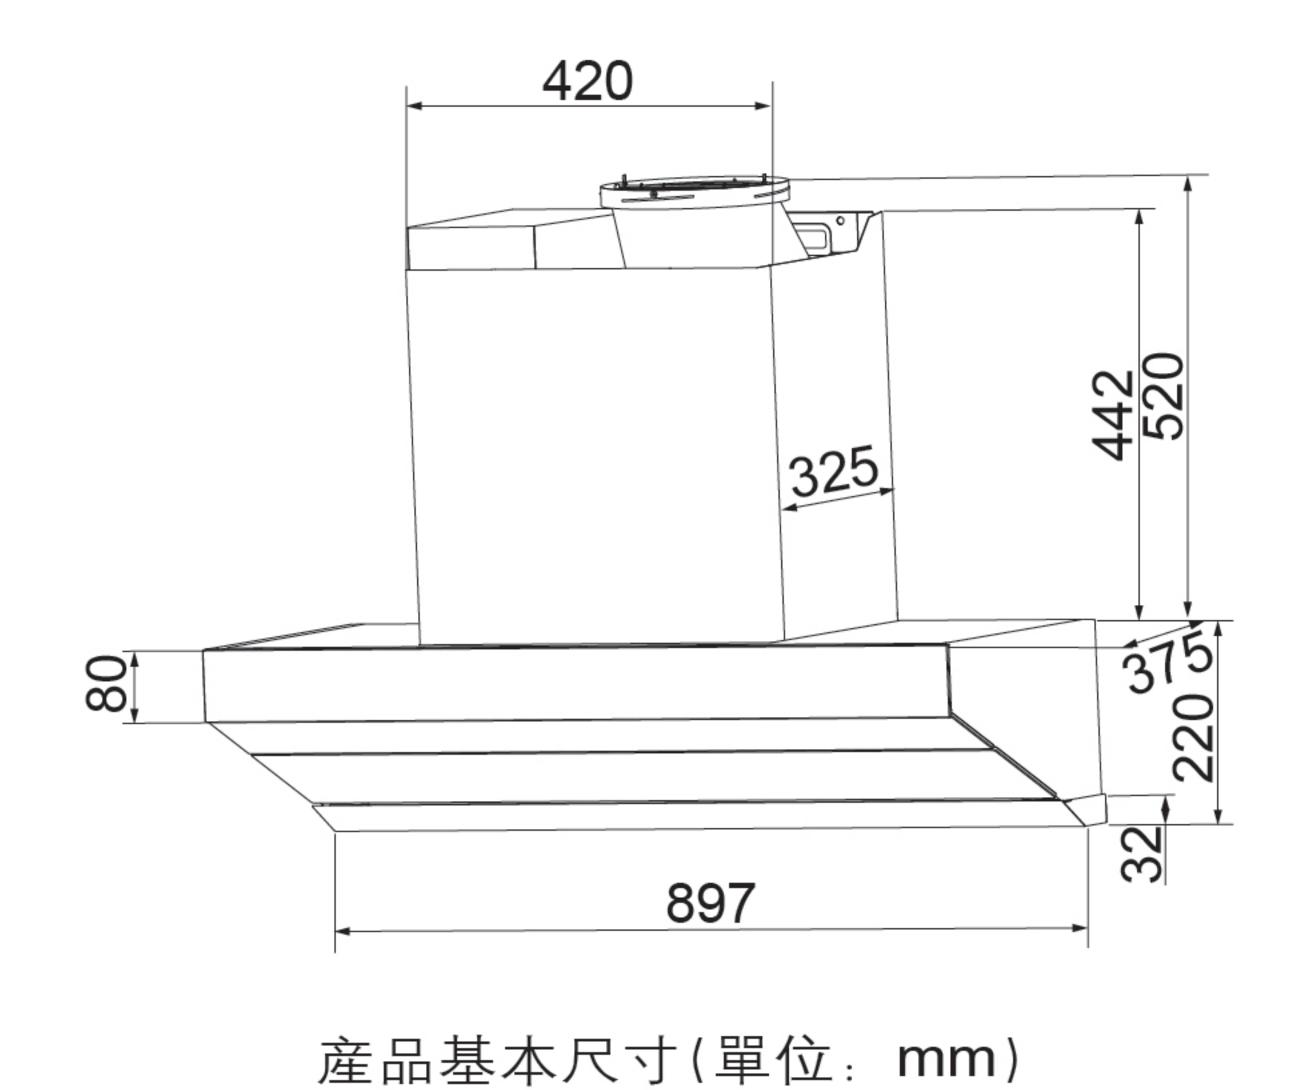



安裝建議

■ 安裝位置

- 1. 該吸油烟機只能安裝于家庭厨房;請勿在其他場合使用該吸油烟機。
- 2. 吸油烟機必須安裝在爐竈的上方, 吸油烟機必須保持水平。
- 3. 吸油烟機周圍環境的温度不能超過40°C。
- 4. 安裝墻面應爲不可燃物,嚴禁安裝在木質等易燃的墻面上。
- 吸油烟機與橱櫃安裝示意圖(單位: mm) 吊頂或橱櫃開孔尺寸

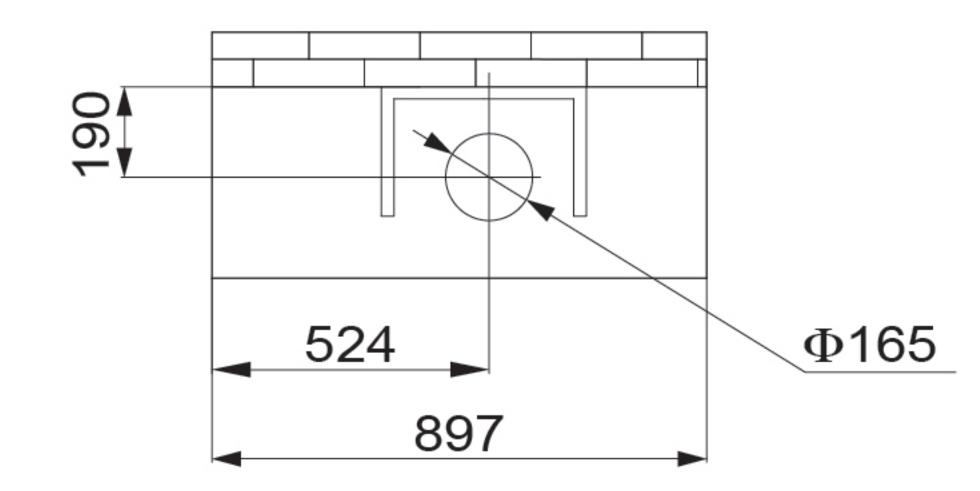

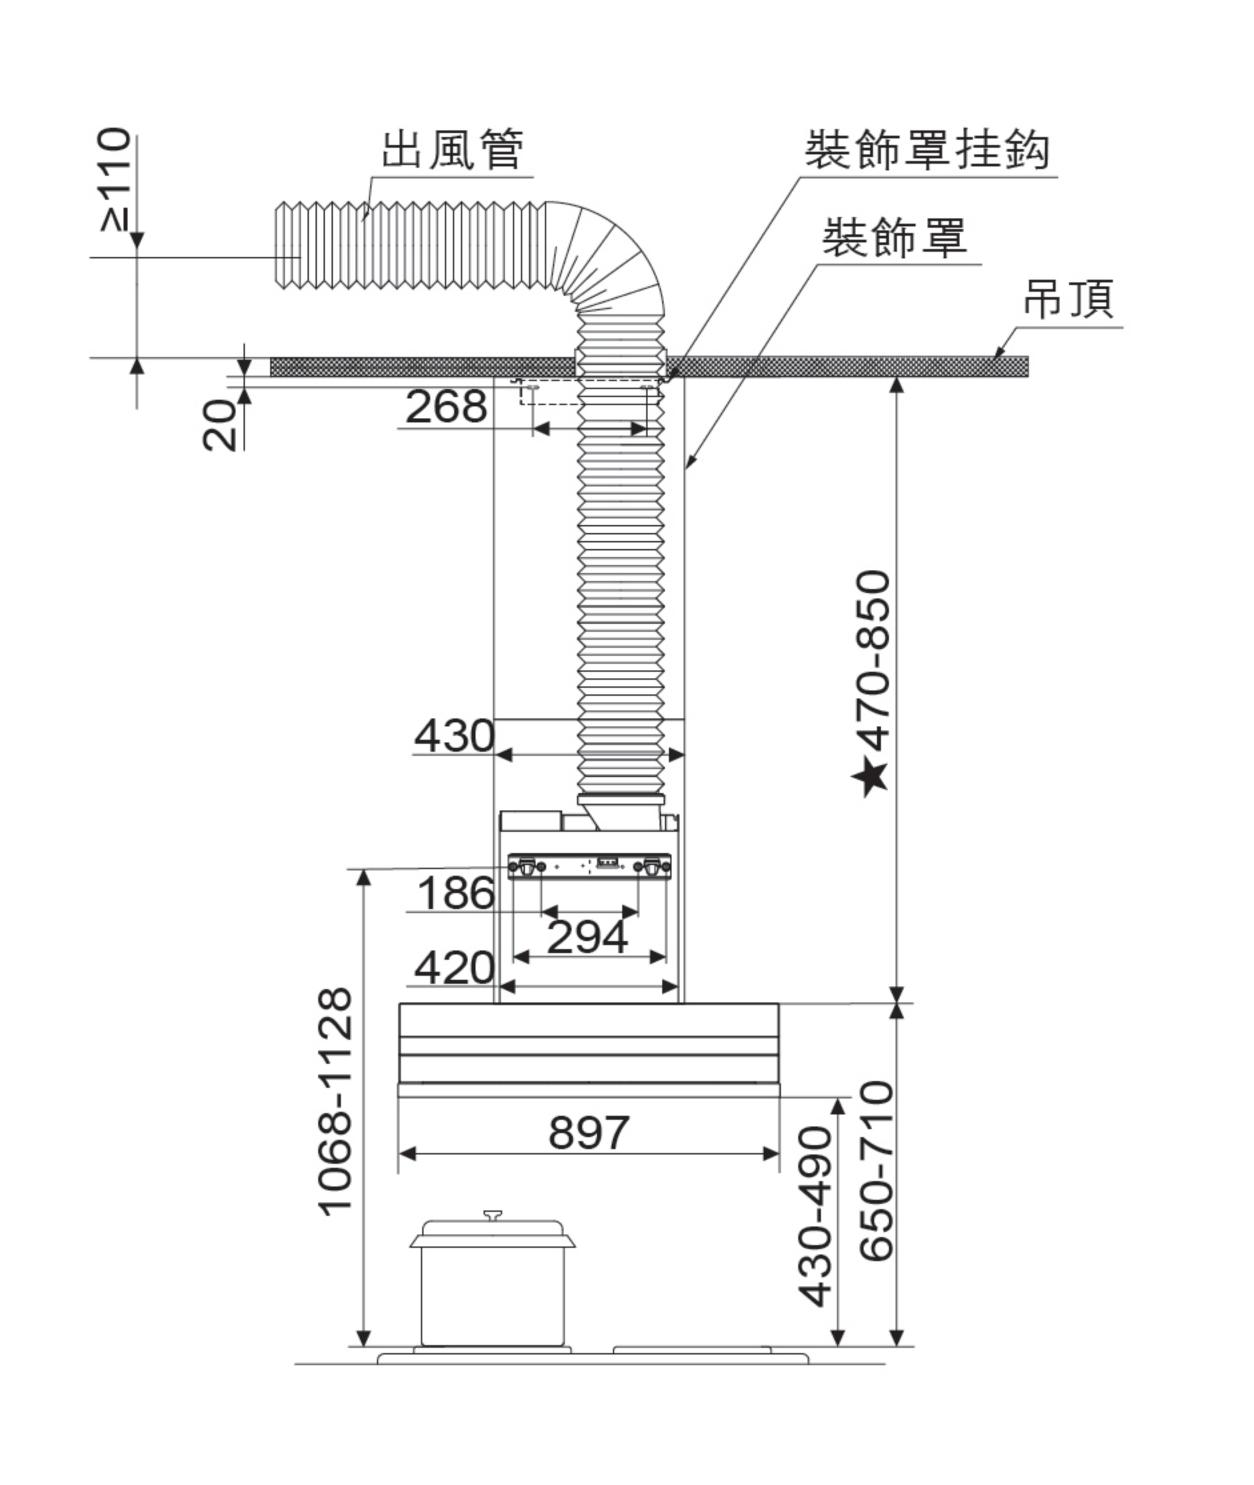

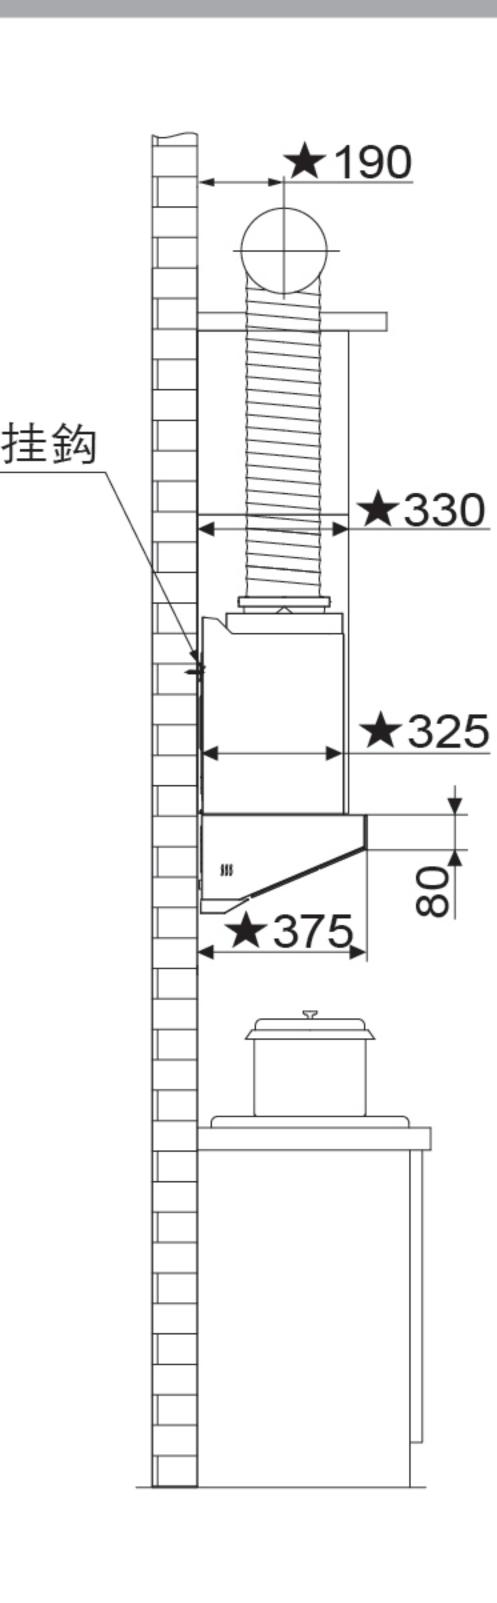

安裝示意圖 (★表示到墻的距離)



注意:

- 1. 吸油烟機的安裝高度爲推薦值(安裝高度是指爐竈上烹飪設備支撑表面與吸油烟機最底部之間的距離),可根據用户身高調整安裝高度;
- 2. 安裝或者拆卸前,應注意吸油烟機箱體與兩側橱櫃之間的間隙;
- 3. 此安裝高度只適用于電電,如果吸油烟機安裝在燃氣爐電上方,爐電上烹調器具的支承面與吸油烟機最低部位的最小距離應至少爲650mm。如燃氣爐電安裝 説明規定了較大的安裝距離則對此應予考慮。吸油烟機的安裝高度爲推薦值,圖示橱櫃與吸油烟機搭配示意僅供參考,當本產品的安裝高度(即爐電上烹飪器具的支承面與吸油烟機最低部位的距離)低于650mm時,低于650mm部分的所有部件均爲吸油烟機的不易燃部件或工作在安全特低電壓下的部件,且這些部件變形時,不會影響對觸及帶電部件的防護。爲保證吸油烟效果,請在推薦安裝高度內安裝吸油烟機。若實際安裝高度超過推薦安裝高度,則產品的吸油烟效果可能會受到一定影響。如所屬地區有相關法律規定油烟機安裝高度,建議遵守相關法律。

■ 安裝前的准備工作

- 1. 警告:
- (1) 爲了不對吸油烟機造成損害,請確保不要讓雜物等進入排風口。
- (2) 估算吸油烟機通到室外的出風管的位置,參見安裝示意圖。
- (3) 一個直綫的、較短的出風管將使得吸油烟機的排烟更加順暢。
- (4) 出風管與墻孔的連接處使用管道膠帶嚴格進行密封。必須確保出風管與出風罩連接牢固。
- (5) 墙洞過小會影響排烟效果,在保證安全的前提下,建議擴孔至出風管尺寸。
- 2. 工具准備

安裝本吸油烟機應具備以下工具(包括并不限于以下工具)

(1) 衝擊電鑽 (帶鑽頭ϕ10)

(2) 十字螺絲刀

(3) 卷尺


(4) 水平尺


安裝步驟

- 1. 打開包裝箱拿出主機,清點裝箱清單;
- 2. 確認固定主機挂鈎的位置:


確定油烟機安裝位置,畫一條中心綫,然后以爐臺烹飪器具的支承面爲基准點在墻壁上准確確定主機挂鈎和裝飾罩挂鈎的安裝位置并做好打孔標志。


爐竈上烹飪器具的支撑面到臺面距離

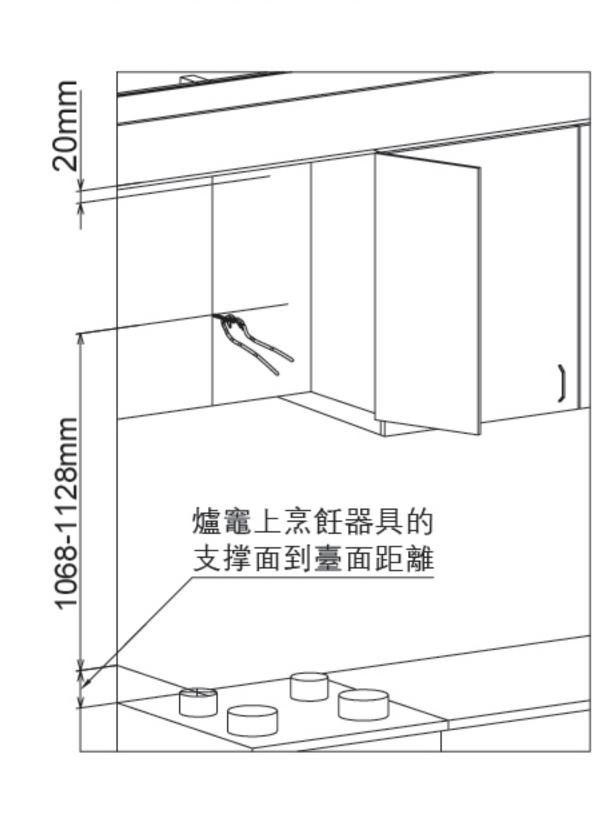

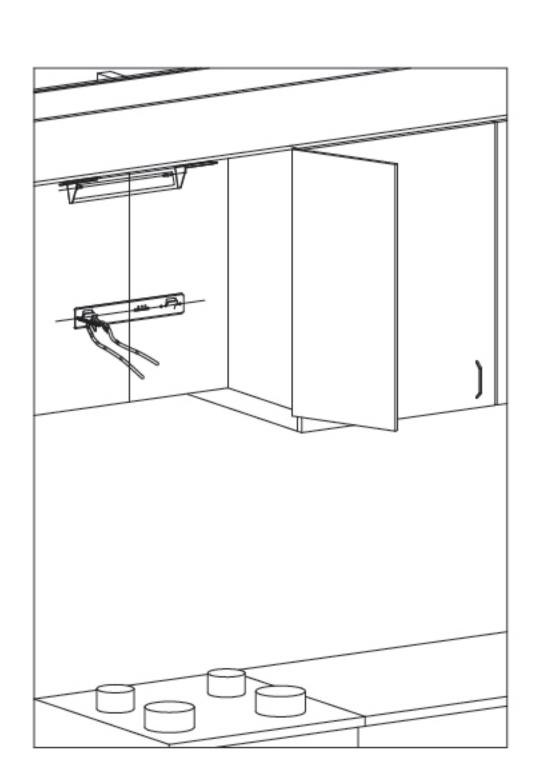


- 3. 固定挂鈎:
- 1) 在打孔標識處用電鑽打φ10mm孔,并埋設瓷磚膨管(10×60mm) ,用挂鈎螺釘(ST4.5×60mm)固定挂鈎。 并用水平尺確保挂鈎水平;

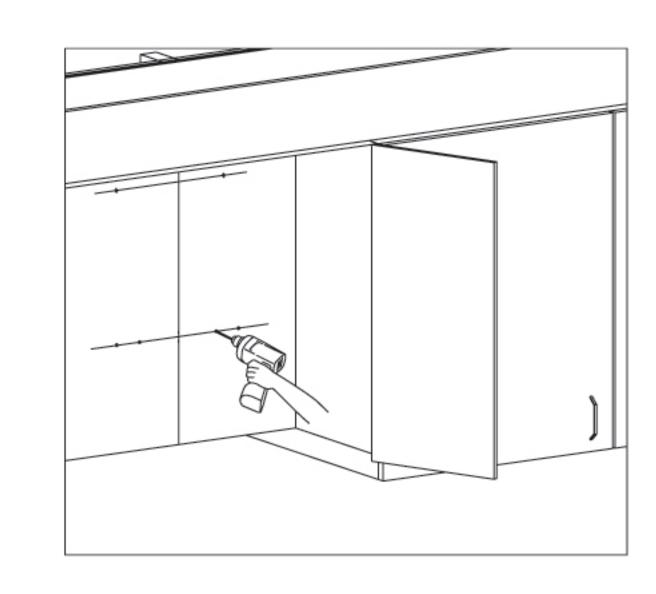


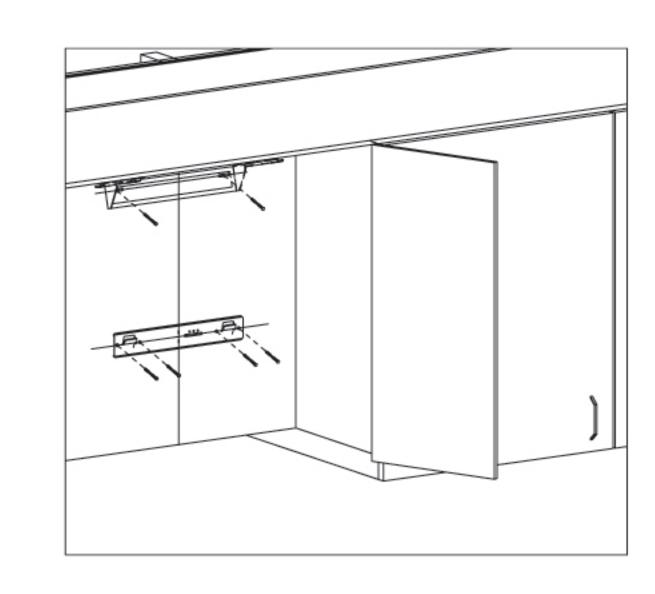


2) 裝飾罩挂鈎可以用2顆裝飾罩挂鈎螺釘(ST2.9×19mm)固定到吊頂上。(僅限已購買 裝飾罩組件)

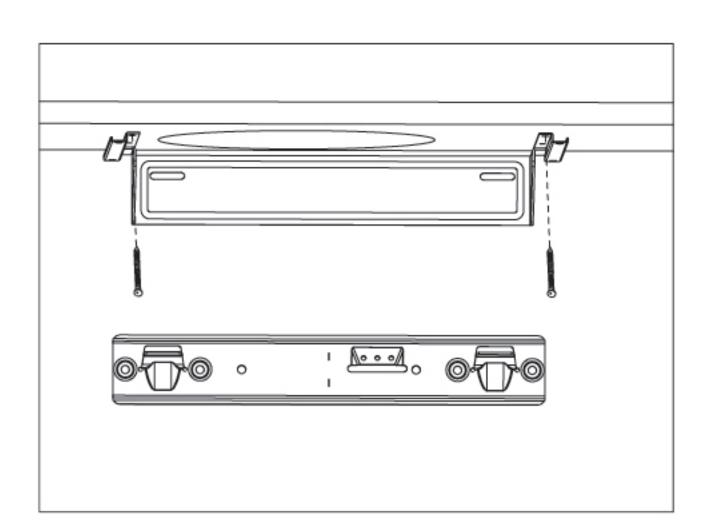



- 4. 安裝出風罩:
 - 包裝箱裏抬出整機。
 - 將出風罩及密封圈放在主機出風口處,用8顆出風罩螺釘(M4×18mm)固定好。

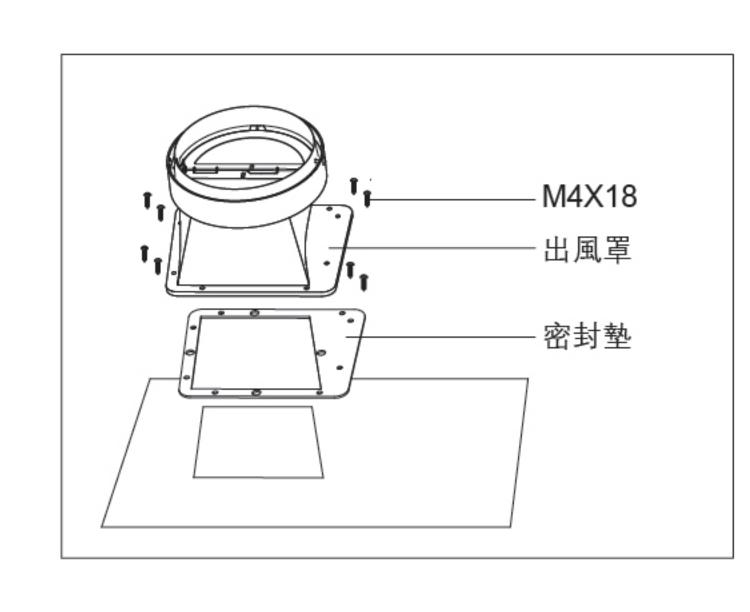


5. 布置出風管: 鋁箔出風管與預留的烟管或墻孔間須密以防漏烟,烟管不能壓變形、小角度轉響、轉彎數量不超過2個,烟管須拉直并固定。

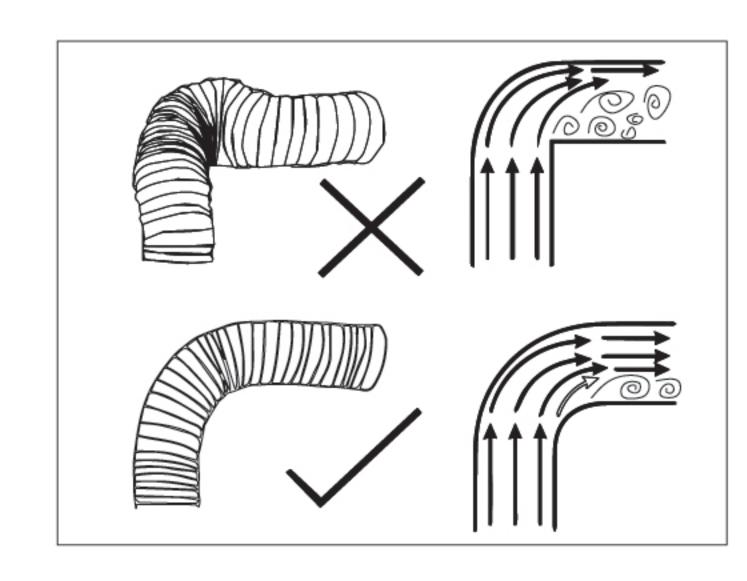


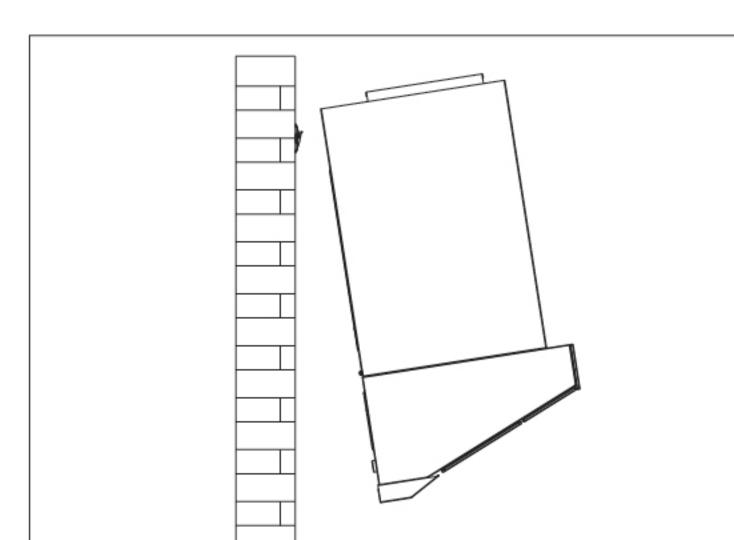

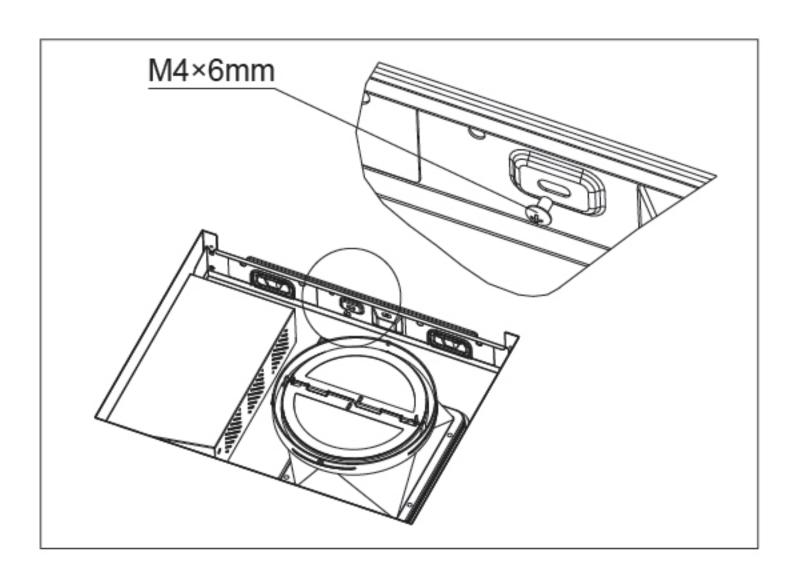



- 6. 挂機:
- 抬起主機.將油烟機背上部挂鈎孔挂入挂鈎.用水平尺確認油烟機水平,并用風機架螺釘 (M4×6mm)將風機架與挂鈎固定:
- 7. 連接出風管:根據實際距離剪去多余出風管或補接烟管,把烟管套進出風罩,然后用2顆出風管螺釘(ST3.9×9.5)將出風管預固定,最后用密封膠帶固定密封好。
- 8. 將油烟機電源綫插頭插入電源插座,啓動油烟機檢查出風管各連接處是否密封完好。
- 9. 撕膜:撕掉風機外罩和裝飾罩的保護膜:注意:帶上防護手套。(僅限已購買裝飾罩組件)

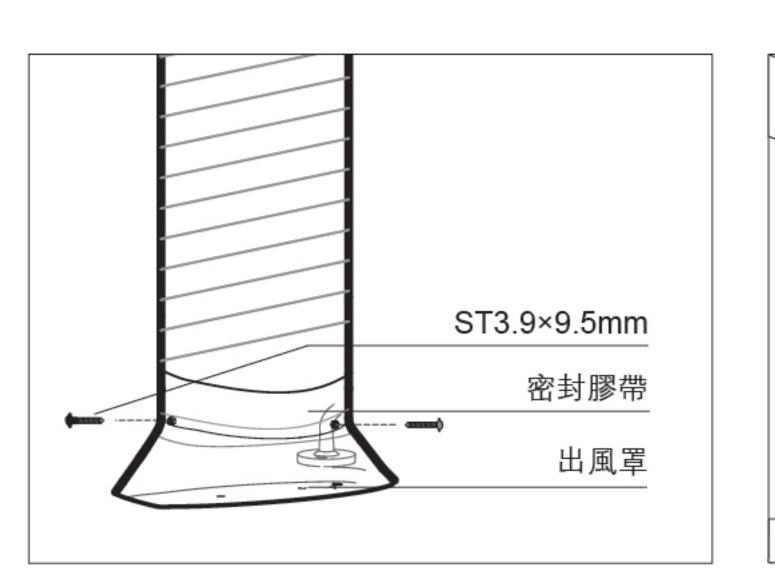

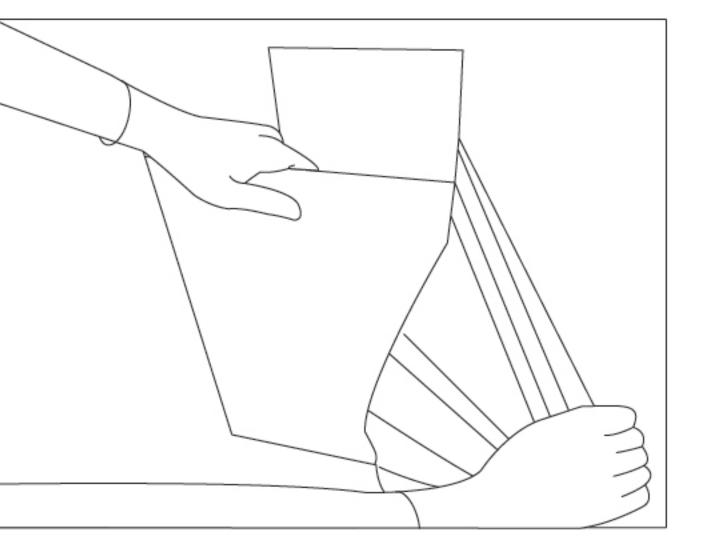

 10. 安裝風機外罩和裝飾罩: (僅限已購買裝飾罩組件) 把裝飾罩放入外罩裹并同時拿起, 先把裝飾罩挂在 裝飾罩挂鈎上, 然后同時將裝飾罩、風機外罩沿裝飾 罩挂鈎推入, 風機外罩緩緩滑下, 將風機外罩上部 卡扣卡入風機架,下沿插入頂板與風機架的間隙内。



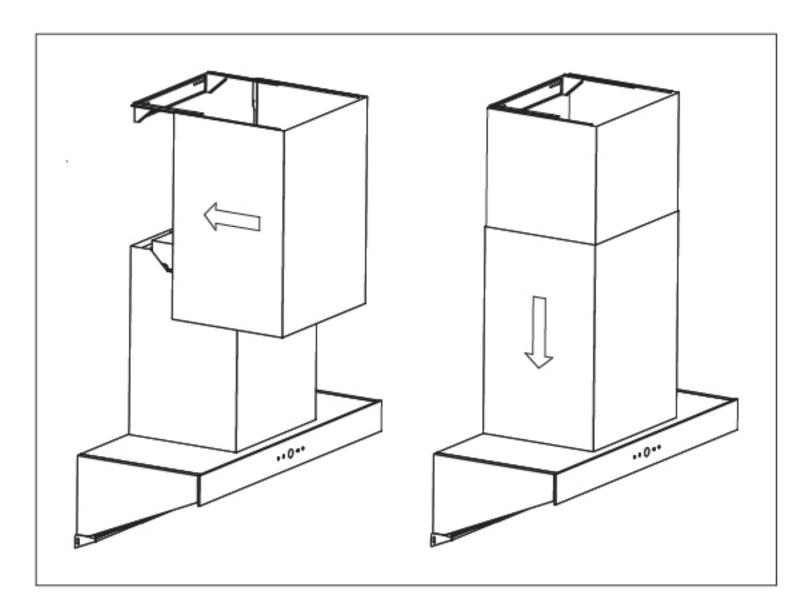

注意:

- 1. 出風管要伸出户外或伸入共用吸冷風烟道,出風管與出風罩及墻孔接口處均要用膠帶密封;
- 2. 爲保證排烟效果,出風管出口處切勿變形,以免减少出風面積;
- 3. 電源插座要可靠接地。電源綫總長度1.3m,請設計插座位置時對此予以考慮。



禁止吸油烟機排出的氣體排到用于排出燃燒燃氣或其他燃料的烟霧使用的熱烟道中。

安裝后的調試

- 1. 輕觸 ◎ 鍵,檢查吸油烟機是否開啓,再輕觸 ☆ 鍵,檢查照明是否正常工作。
- 2. 再輕觸 \ointig 鍵或 \ointig 鍵,檢測電機轉動是否正常,如出現下列异常情况,應立即切斷電源, 停止運轉,并檢查是否安裝緣故(若確定吸油烟機發生故障,請致電方太授權的服務中心)。
 - (1) 機體震動劇烈
- (2) 膨脹管松動
- (3) 葉輪不轉動

- (4) 葉輪轉動時明顯的摩擦聲
- (5) 電機出現异常聲響
- 3. 輕觸 鍵, 風機維持當前檔位運行, 兩分鐘后關機, 如果再輕觸 鍵則直接關機。

正確處理本產品



此標記表示本産品不應與其他家庭垃圾一起處理。爲防止不合理的廢品處理可能會對環境或人類健康造成危害,需要對本産品合理回收利用,以促進材料、資源的可持續利用發展。如您需要退回使用過的機器,請使用回收采集系統或聯系相關零售商,他們會把機器環保、安全的回收利用。

清洗保養

1. 清潔維護注意事項

爲了更加舒適地使用,請經常對吸油烟機表面進行清潔,這有利于吸油烟機的正常使用。


- 1. 只用中性皂或者中性洗滌劑進行清潔,清潔后用柔軟的布擦干機體表面。
- 2. 如果吸油烟機表面有污點,使用中性清潔劑清潔,并避免清潔劑接觸各按鍵。把清潔劑滴至污點處并短暫停留(清潔劑不要在機體上停留過長時間,那樣將造成損害),使用柔軟的抹布將污點擦去, 用微濕的毛巾將清潔劑除去,然后再用柔軟的干毛巾將機體擦干。
- 3. 不要讓污漬在吸油烟機表面停留時間過長。
- 4. 如不小心將含鹽的溶液、消毒劑、漂白粉以及其他清潔劑沾到不銹鋼面板,應立即用濕布擦拭。




- a.如果不按説明書規定的方法清潔,吸油烟機有起火的危險。
- b.當清潔、維修吸油烟機前,務必先拔掉電源綫插頭,以免觸電。
- c.清潔時應防止電機、各控制鍵等電氣部件進水。
- d.當風機在使用時,禁止將手放入風機運行區域。
- e.切勿使用汽油、酸性物質、苯、溶劑或任何其他化學藥劑清洗吸油烟機。
- f.請不要使用清潔球、刷子以及粗布等粗糙物進行清潔,以防止劃傷機體表面。


Ⅱ. 清洗油杯及格栅網

1. 用雙手托住油杯兩端,保持水平向正面移出,倒去積油。

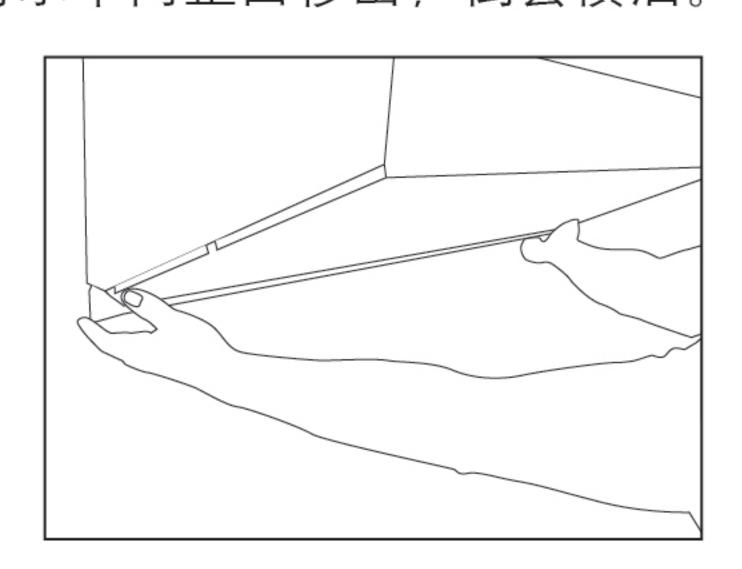

2. 輕觸電源鍵,再輕觸一下照明鍵,待隔烟屏打開到位后,拔掉電源。 雙手抓住格栅網上端,向下拉開卡扣,即可拆下格栅網。 將油杯、格栅網放入加有中性洗滌劑的温水中浸泡,用軟刷進行清潔。 清潔完畢后,按上述相反步驟安裝油杯、格栅網。

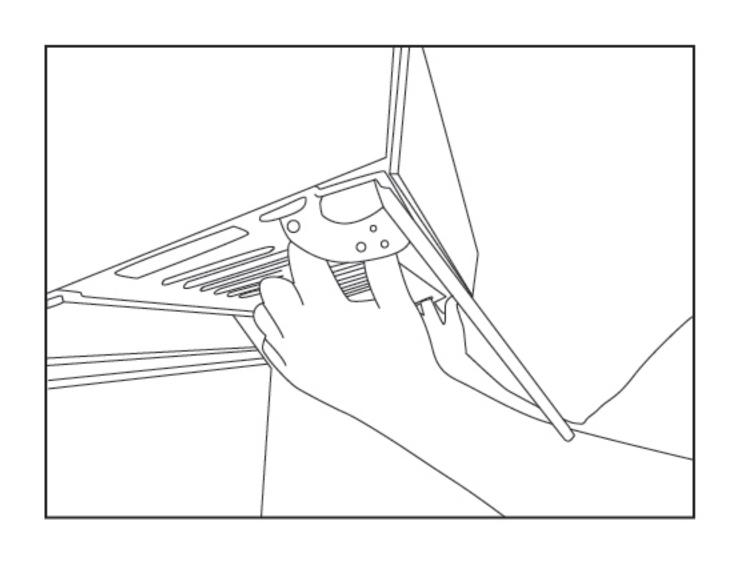

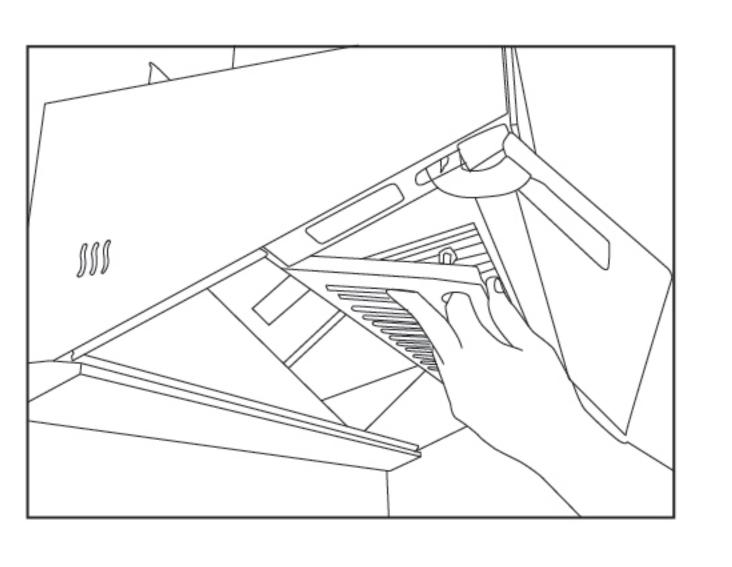



- a.使用吸油烟機后,請注意經常清潔表面。
- b.日常使用時,注意油杯内存油。 定期清理,避免油液溢出。
- c.每三個月清洗格栅網一次。
- d.所用燈爲LED燈:燈功率1.5W,電壓範圍爲9-10V,燈尺寸爲寬度2 13/16"(70mm)/深度1 1/8"(28mm)/高度11/16"(17mm)。



使用方法

主要技術參數

電參數

型號	電壓/頻率	整機功率	電機功率	LED燈功率
ZMG9057-Y	220-240V/50Hz	361W	358W	3W

外排性能參數


型號	ZMG9057-Y	産品尺寸	897mm(L)×375mr	m(W)×740mm(H)
	最大静壓值(Pa)		1140	
	檔位	自動檔※	高檔	低檔
	風量(m³/h)	1260	990	710
	噪音(dB)	56	52	43



- a. ※: 自動檔內置自動巡航增壓模式,所示風量值、噪音值爲該模式下的最大風量值、 噪音值。
- b. 所示噪音值爲聲壓級噪音,對應聲功率級噪音爲:弱檔56dB(A)、强檔65dB(A)、自動 檔69dB(A)。
- c. 風量測試按照IEC 61591標准。噪音測試按照IEC 60704-3標准。

操作説明

室 控制界面

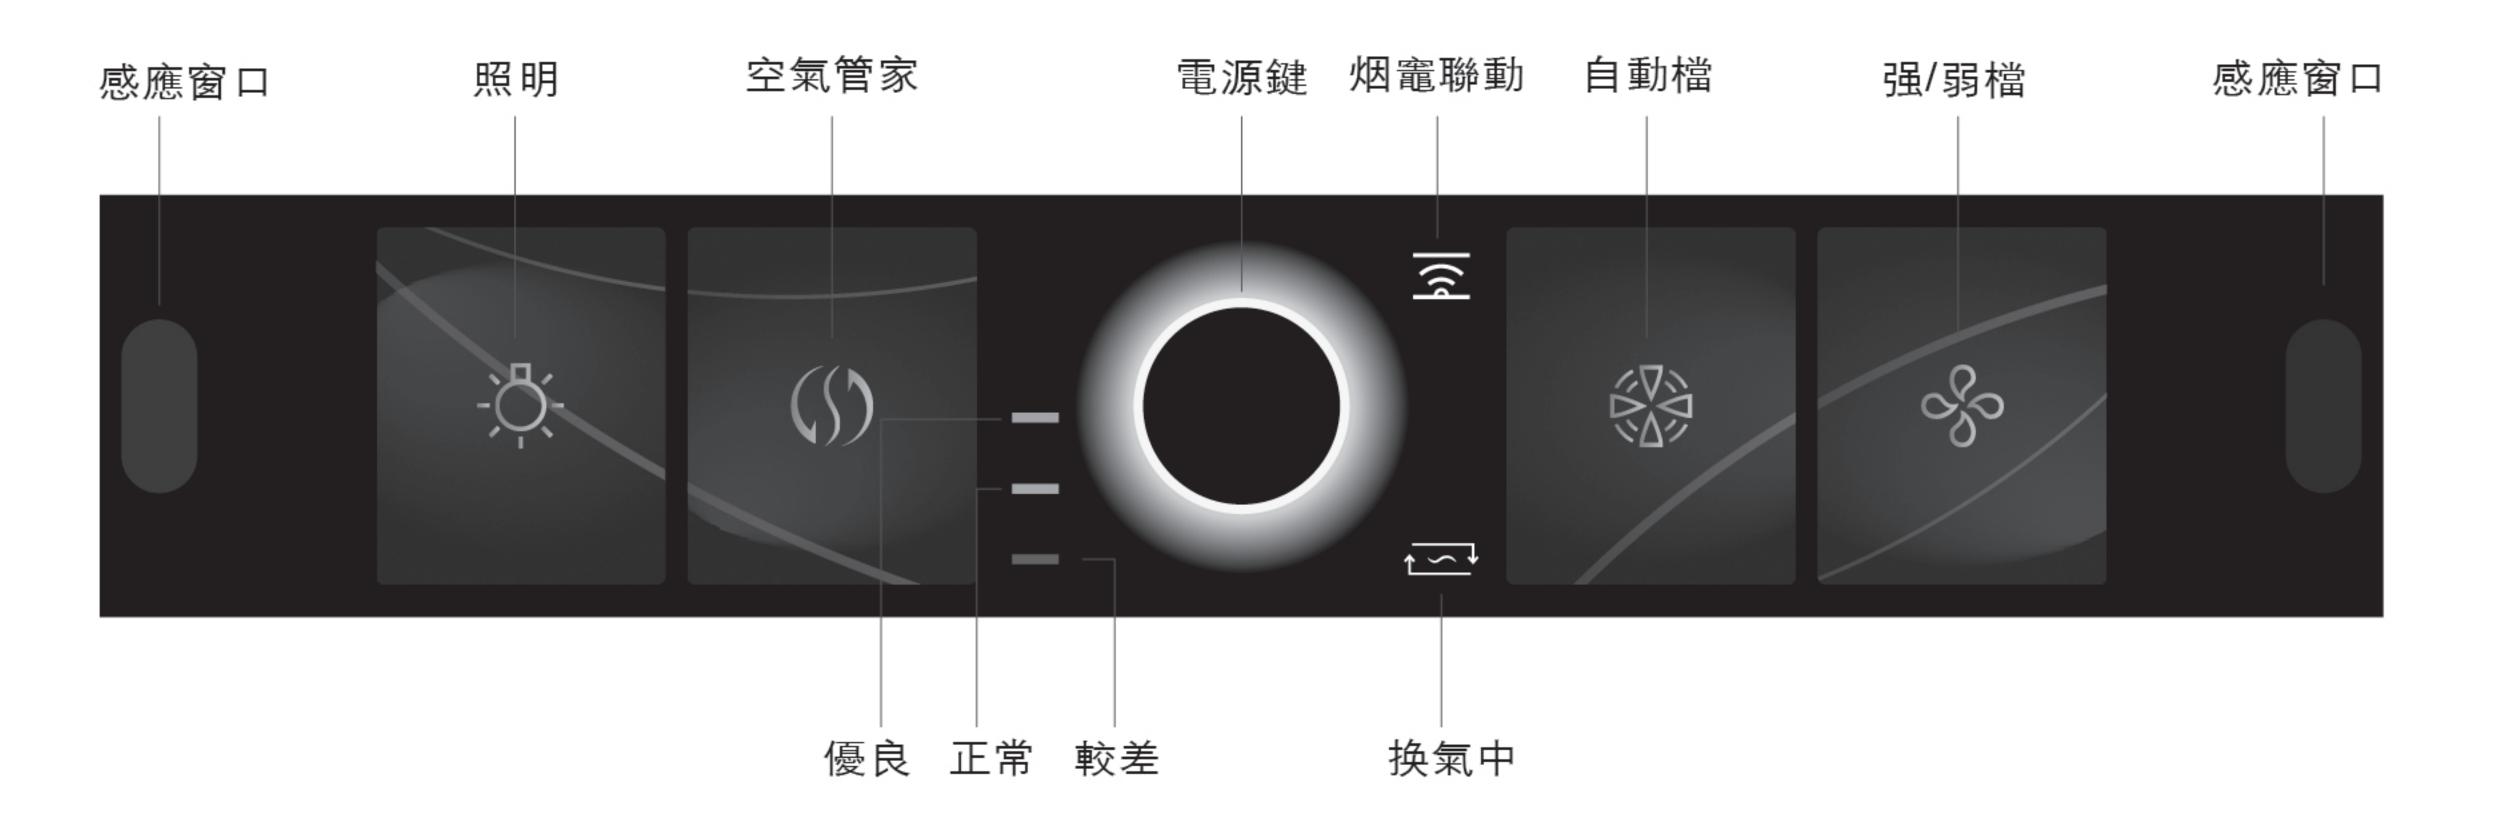

■ 功能按鍵説明



電源鍵

輕觸 () 進入待機狀態, 此時可操作其他按鍵;


(2分鐘内無其他按鍵操作,則自動關機)


風機運行狀態下,輕觸 ◎ ,◎閃爍,進入延時狀態,2分鐘后自動關機,如果再 輕觸 ○,則直接關機。

(延時關機過程中,如果輕觸其他風量鍵,則退出延時)

手勢感應功能

揮手 🖑 快速經過兩端感應窗口開啓/關閉吸油烟機(包括風機&照明燈),吸油烟 (^{手勢感應功能)}機關閉狀態下,同時按下 뿾 和 🗞 5秒,開啟/關閉手勢感應功能。

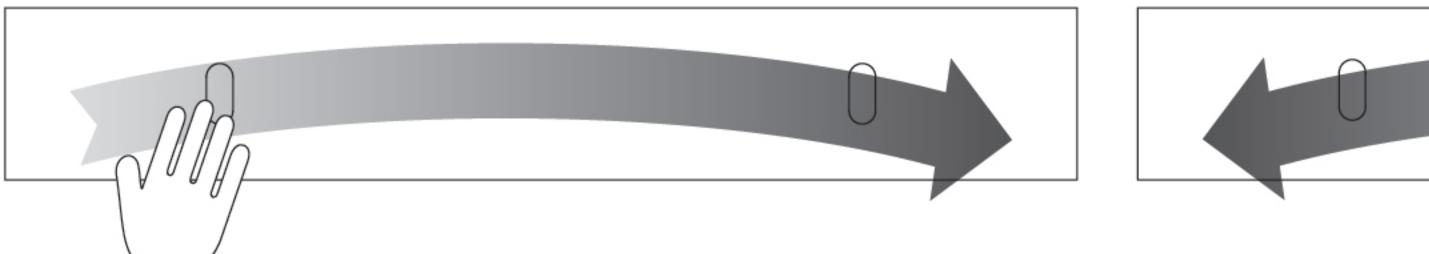

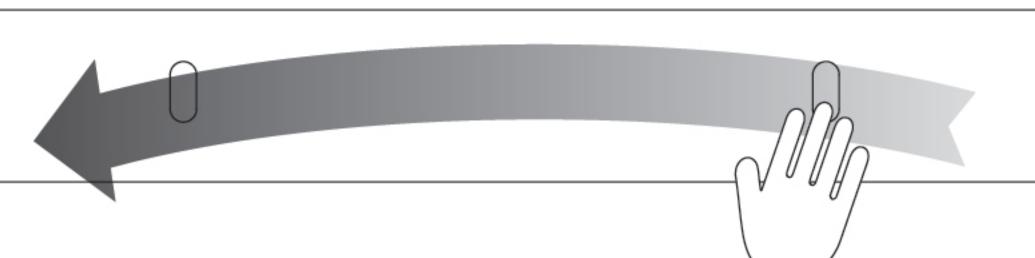

手勢感應功能示意圖

以下按鍵只在電源鍵開啓時有效



常態模式鍵(强/弱檔)

輕觸 %, %常亮,吸油烟機進入强檔運行;强檔狀態下,輕觸 %, %亮度减弱, 吸油 烟機進入弱檔狀態;弱檔狀態下,輕觸參,風機關閉。



自動巡航增壓模式鍵

輕觸 繆,吸油烟機發出"嘀"一聲,自動檔運行,再輕觸 繆,風機停止運轉。



燈鍵

輕觸 尖 開啓照明燈,再輕觸 尖 關閉照明燈。



空氣管家

厨房空氣管家鍵

輕觸 (()), (()) 閃爍, 吸油烟機進入智能檢測空氣質量狀態; 檢測到空氣質量好時, "優良"指示燈亮,風機不運轉,檢測到空氣質量較差時,"正常"指示燈及"換氣 中"指示燈亮,隔烟屏自動開啓,風機弱檔運行;檢測到空氣質量差時,"較差"指 示燈及"換氣中"指示燈亮,隔烟屏自動開啓,風機强檔運行。

注:當吸油烟機風機運轉或者照明燈打開時,隔烟屏會自動打開;關機時,隔烟屏會自動收回。

關于吸油烟機與竈具一體控制的説明



如果您同時購買了方太公司的具有烟竈聯動功能的吸油烟機和竈具,那么您可以享用我們的吸油烟機和竈具聯動功能!

具體使用方法如下:

- 1. 對碼連接(實現聯動之前需要進行吸油烟機和燃氣電具的對碼連接)
- (1) 吸油烟機插電,燃氣電具電池(電源)安裝好,同時確保所有旋鈕都處于關閉狀態;
- (2) 按電源鍵開機后,在10秒内長按照明鍵5秒后,蜂鳴器長鳴,烟竈聯動圖標閃爍,進入烟竈聯動配對狀態。該狀態下打開竈具旋鈕,等待片刻,如果吸油烟機收到符合規範的竈具聯動信號,烟竈聯動圖標 줄 常亮,表示對碼完成。

- 2. 對碼成功后,可以實現吸油烟機與燃氣竈具的聯動功能 當燃氣竈具點火后,吸油烟機自動開啓,運行在自動檔模式,同時照明燈亮; 當燃氣竈具關閉后,吸油烟機默認2分鐘后自動關機。
- 3. 解除烟竈配對
 - (1) 確保電具旋鈕都處于關閉狀態;
 - (2)按油烟機電源鍵開機后,在10秒内長按照明鍵5秒,蜂鳴器長鳴后, **云** 閃爍,此時再按電源鍵關機,則完成解除操作。
- ⚠ 注意: 對碼和解除功能,需在油烟機通電后的1小時之內進行;如無法觸發對碼和解除功能,請拔下油烟機插頭,等待兩分鐘后重新插上,再按上文進行操作。

常見故障的識别和處理

故障現象	可能原因	檢修方法
按開關,吸油烟機不	未接通電源	檢查電源插頭是否插好
工作,LED燈不亮	小汝地电冰	檢查插座是否有電
電機轉動但LED燈不亮	LED燈損壞	更换LED燈(本項必須由專業 人員進行)
有機械振動噪聲	螺釘松動	檢查吸油烟機表面螺釘是否 擰緊
	吸油烟機與電面的安裝 距離太大	降低吸油烟機安裝高度(本項必 須由專業人員進行)
吸力不强	吸油烟機周圍環境門窗通 風太多,對流太大	關閉部分門窗
噪聲太大	出風管表面凹陷變形	重新安裝出風管(本項必須由專業人員進行)



- a.更换LED燈,請聯系方太授權的服務中心。
- b.上述故障排除后,吸油烟機仍不能正常工作,請聯系方太授權的服務中心。
- c.保修期内保修需提供以下信息:

1.購買日期 2.產品型號

3. 序列號 4. 購買相關憑證

- d.其他人員不得擅自維修吸油烟機,以免造成嚴重后果,而且產品將不享受保修服務。
- e.以下情况不提供保修服務:
- 1.用户搬運、安裝、使用、維護、保管不當而損壞的。
- 2.超出正常使用條件,强行使用本產品造成的故障和損傷(例如電壓超出264V或低于 189V而損壞的)。
- 3.自行或非方太指定服務人員或服務機構安裝和拆修的產品。
- 4.購買憑證和保修卡信息與產品不符的。
- 5.因不可抗拒力造成產品損壞的(如自然灾害、戰争等)。
- 6.不根據"使用説明書"的規定使用,造成產品故障或損傷的。

FOTILE

RANGE HOOD

User Manual | ZMG9057-Y

Please read carefully about the user manual before using the product.

And keep it well after reading, for future reference.

Any needs, please contact FOTILE service center.

Some pictures in this manual are sketch map, only for reference. If there are some discrepancies, please subject to real object.


WWW.FOTILEGLOBAL.COM

Dear User, thank you for purchasing the Fotile Range Hood. At Fotile, we manufacture exquisite appliances that are expertly crafted with the finest materials. Before using the Fotile Range Hood, please take some time to read through this Product Manual (manual). It will familiarize you with important safety, operation and maintenance instructions, as well as help maximize your culinary experience.

Before using the Fotile Range Hood, you must follow the instructions, as specified in this manual. Any damage resulting from the improper operation and/or maintenance of the appliance may result in the loss of warranty. The warranty will become invalid, and your warranty application, whether direct or indirect, will not be accepted by authorized service center of Fotile. If you require warranty or post-warranty after-sale service, please contact the local authorized service center of Fotile nearest you.

Your satisfaction with the Fotile brand is important to us. Our after-sales service centers provide assistance in resolving issues with Fotile appliances.

If you need service, please provide the product model and serial number on the product nameplate. Refer to diagram A below to locate the nameplate on your product.

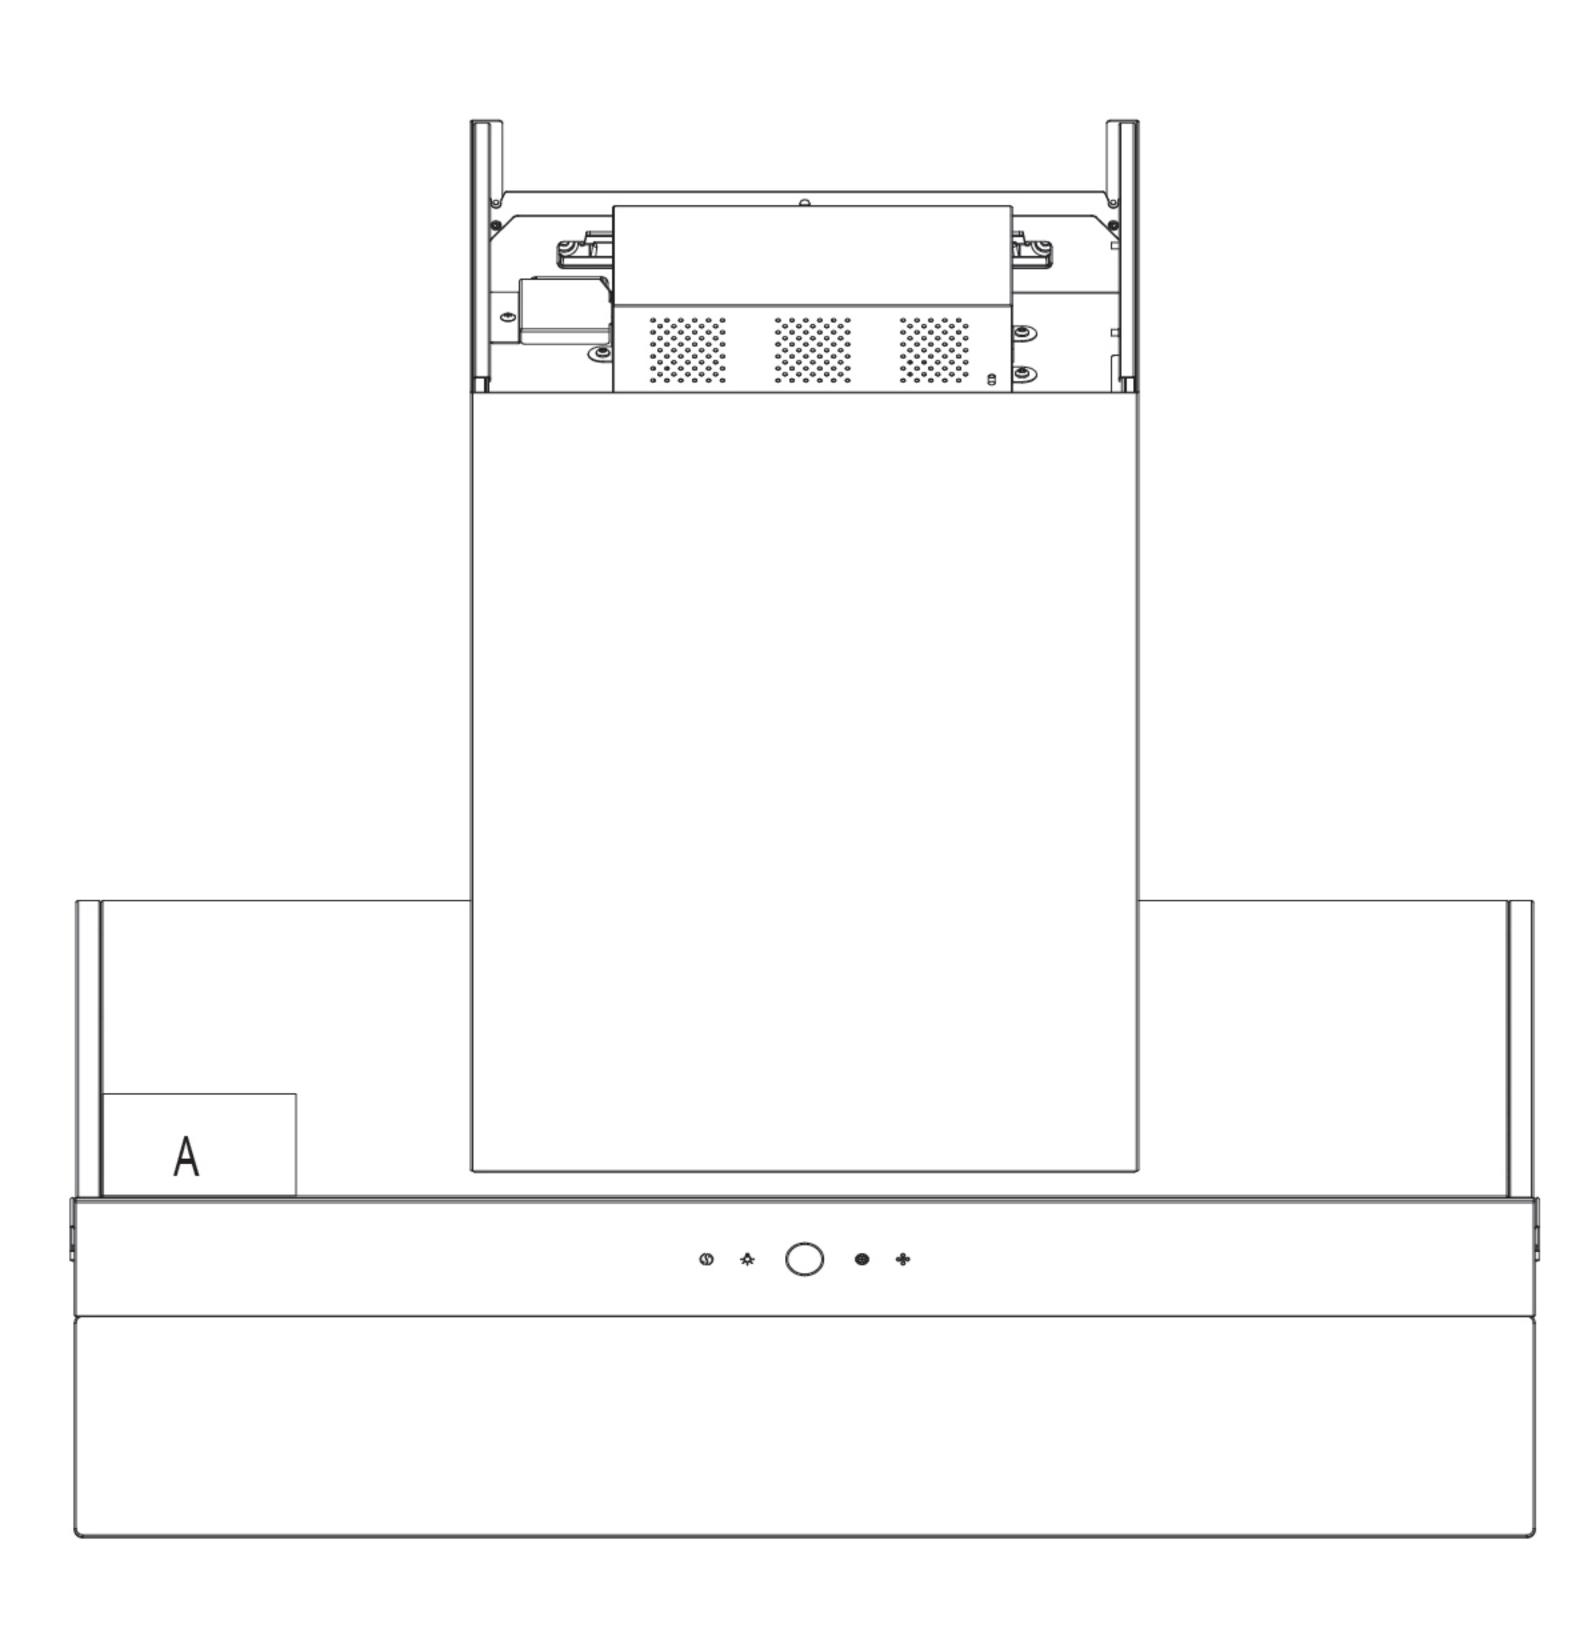

CONTENTS

Warning and Safety Instructions			
Installation	ງ	- 5	
	Packing List	- 5	
	Installation Warning	- 6	
	Product Basic Conditions	- 7	
	Installation Suggestions	7	
	Installation Steps	9	
	Debugging	12	
Cleaning	and Maintenance	13	
Usage		14	
	Main Technical Specifications	- 14	
	Operation Instruction	- 15	
	Introduction to Hood-hob Linkage Function	- 17	
Normal Malfunction and Trouble Shooting1			

Product features and specifications are subject to change, at any time, without notice and may be different from those in this material. Please visit our website at www.fotileglobal.com for the most up-to-date information.



Warning and Safety Instructions

Special version:

Please properly use the appliance, strictly complying with the user manual. FOTILE company will not bear responsibility for property loss and personal injury due to improper use.

riangle Warning:

This appliance is not intended for use by persons (including children) with reduced physical,sensory or mental capabilities, or lack of experience and konwledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

The appliance can be used by children aged from 8 years and above and persons with reduced physical.sensory or mental capabilities or lack of experience and konwledge if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved (only for EU market).

Children shall not play with appliance.

Cleaning and user maintenance shall not be made by children without supervison.

CAUTION: Accessible parts may become hot when used with cooking appliances.



- a. Pour out the gathering oil periodically; please wipe the range hood surface once after every using the range hood.
- b. Please frequently clean the range hood surface and oil cup.
- c. There is a fire risk if cleaning is not carried out in accordance with the instructions.

Strictly execute

Ground Connection	The plug should be connected with reliable ground wire to ensure safety. The ground wire should not be connected with gas pipe, tap water pipe, lightening rod and telephone line. Bad ground connection may cause electric shock or other accidents.
	This appliance incorporates an earth connection for functional purposes only.
The state of the s	Because the installation procedure of the range hood is complex, and the weight is heavier, it should be installed by professional person according to the instructions. Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.
	If the new range hood is damaged obviously before using, please don't install and contact FOTILE service center soon.
Safety Guideline	Please comply with the safety guideline provided by the heating equipment manufacturer priorly and safety regulations published by the fire authority simultaneously.

>30mm	The wall should be strong enough to support the range hood. As for hollow wall or hollow plate, the thickness of its solid part should be no less than 30mm. For drywalls, the range hood shall be fixed onto the wooden pillar at the back, mounting holes can be drilled directly into concrete walls. The range hood should be firmly fixed on the wall.
	When drilling on the roof or ceiling, please make sure not damage the electric wires and any other hidden devices.
	The range hood is for family use only, and don't use it in special environment (e.g. outdoor), and it also can't be used to exhaust dangerous or explosive substance or gas. Fotile assumes no responsibility if you use it in special environment.
	There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).
ON CONTRACTOR OFF	When the cooking pots catch fire, turn off the range hood immediately (It will stimulate the fire if the range hood is working). Effective fire extinguishing measures must be taken at once, such as covering the open flame with metal cover, turning off the general gas valve and keeping flammable substance away from the open flame, etc.
	Make sure the exhausting pipe can reach outdoors to avoid the fire and keep the fresh air in the room. Please don't make the waste gas stay indoor, loft, garage, etc. (This is only for ducted range hood)
T≤40°C	The working temperature should not be more than 40℃.
POTEME **TOTAL **TO	Please clean the range hood according to the user manual, otherwise, it may catch fire or cause other dangers.
	Please clean the oil cup timely to avoid overflowing when the oil reaches the very scale in the oil cup. Please don't use the waste oil.
ON OFF CONTRACTOR OF THE CONTR	Before install, clean or repair the range hood, please make sure cut off the power to avoid the electric shock. And wear protective golves to avoid your hands being hurt by range hood metal panel.



ON OFF	The plug shall be accessible after the appliance has been installed. Cut off the power if you are not going to use range hood for a long time.
	If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly persons in order to avoid a hazard.
ON CONTRACTOR ON	If there is abnormality, please turn off the range hood and cut off the main power supply, contact FOTILE service center to repair it. It will easily cause dangers like electric shock, fire, if the range hood still working under abnormal conditions.
	Please don't let children use range hood by themselves and don't place it where infants can touch, otherwise, it will cause burning injury, electric shock or other accidents.
	Please keep the product plastic package away from the infants, to avoid suffocation, etc. Children should be supervised to ensure that they do not play with the appliance.

Forbidden

	Please clean the range hood according to the user manual, otherwise, it may catch fire or cause other dangers.
	Don't transform, stretch, tie, ballast or extrude the power cord, or it may cause electric shock or fire.
	Don't change the internal wiring by yourself, otherwise, it will cause possible abnormality and personal injury; and the improper repair leads to electric shock, fire or other dangers.
Hot Flue	The air must not be discharged into a flue that is used for exhaust- ing fumes from appliances burning gas or other fuels.Regulations concerning on the discharge of air have to be fulfilled.
	It is strictly forbidden to let the stove working without pot otherwise it will damage the above range hood. Do not flame under the range hood.

	Don't touch the bulb that is still working or finish working for a short while, to avoid scalding.
Impeller	Don't put your hands or other things into impeller when it is working to avoid hurting.
	All electrical parts including motor, switch and connections, etc. should be away from water. Don't rinse range hood directly with water. Don't use the range hood when it is wet to prevent electric shock.
Jos o	Never touch the power plug, power switch or other electric parts with wet hand, otherwise, it may cause electric shock.



- a. Services guaranteed under warranty must be performed by Fotile certified service provider or personnel. The warranty is not effective for products removed for repair without authorization.
- b. Adhere to the voltage and frequency settings listed in this manual to avoid possible damages to the range hood.
- c. When the range hood and appliances supplied with enegy other than electricity are simultaneously in operation, the negative pressure in the room must not exceed 4 Pa(4 x 10⁻⁵ bar) (only for GERMANY).
- d. Range hoods and other cooking fume extractors may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to back flow of combustion gases. These gases can potentially result in carbon monoxide poisoning. After installation of a range hood or other cooking fume extractor, the operation of flued gas appliances should be tested by a competent person to ensure that back flow of combustion gases does not occur.
- e. Tempered glass is applied to the products of the company and the tempering treatment of the glass determines the extremely little possibility of spontaneous explosion. If the occurrence of spontaneous explosion is not due to improper use, our company promises free replacement of the accessories. The possibility of tempered glass breaking can be significantly increased in the following situations, which should be avoided: For instance, hitting the glass, especially the corners of the glass, with cooking utensils or other hard objects; The glass is impacted when you open a cabinet door around the Range Hood; Put the glass in an extremely hot or cold environment or an environment where heat and cold are excessively alternated.



Installation

Packing List

	Complete Appliance	1		Outlet housing	1
H	Sealing tape	2	+	Upper gasket	1
	Exhaust Pipe	1	600°	Hook	1
FOURE FO	Product instruction manual	1		Screw for exhaust duct ST3.9×9.5mm	4
	Hook screw ST4.5×60mm	6		Expansion Pipe Ф10×60mm	6
	Screw for fan frame M4×6mm	2		Oil Cup	1
	Screw for outlet housing M4×18mm	8			

The following accessories must be purchased separately (please contact the authorized Fotile branch).

Cover assembly accessories (optional)					
	Fan cover	1		Decorative cover	1
	Decorative cover hook	1		Hook screw ST4.5×60mm	2
	Expansion tube Ф10×60mm	2		Foam cushion	2
	Decorative cover screw ST2.9×19mm	2		Cross recesspan head self-tapping locking screwa M4×8mm	2

Installation Warning

/ Caution



It is recommended to install a range hood after the kitchen decoration is completed.



If the gas stove needs to be moved before installing the range hood, Follow strictly please close the gas valve before moving.



Ensure that the wall on which the range hood is installed is flat and Follow strictly the range hood must be kept level.



After installing the range hood, please ensure that the machine can Follow strictly operate normally and carefully read and keep the Operation Instruction.



Packaging of new range hood: Please handle these packaging materials in Follow strictly an environmentally friendly manner to maintain a good environment. Do not allow children to play with plastic films and packing boxes, which may cause suffocation accidents. Therefore, please keep packaging materials away from children. Packaging materials are not toys!



To protect the environment, please dispose of old range hoods that Follow strictly cannot be used properly.



The range hood is heavy and the installation process is complex, so Follow strictly please contact professionals to install it according to the Instructions.



Wear qualified protective gloves to avoid scratches and bruises caused Follow strictly by metal plates and orifices inside the range hood when installing, cleaning or repairing the range hood on account that it may have very sharp edges.



Pay attention not to damage wires and other hidden equipment when Follow strictly excavating or drilling holes in walls or ceilings. Please cut off the power supply of the range hood during installation.



The special power socket shall be applied and grounded reliably.



The wall where the range hood is installed should have sufficient Follow strictly support strength, otherwise the range hood may fall off and be damaged.



The exhaust duct must ensure gas discharge into outside. Exhaust the waste gas outside to avoid fire accidents and keep the air fresh. Do not exhaust the waste gas into the wall, attic or garage. (Only applicable to range hoods with exhaust ducts)

Exhaust gases from this appliance should not be discharged into flues that are used to discharge exhaust gases generated from appliances burning gas or other fuels (this section does not apply to appliances returning gases to the room).




Wall Preparation

The wall should be strong enough to support the range hood. As for hollow wall or hollow plate, the minimum thickness of the lumber should be 30mm. As for concrete wall, the installation can be directly operated. The range hood should be firmly fixed on the wall.



Product Basic Conditions

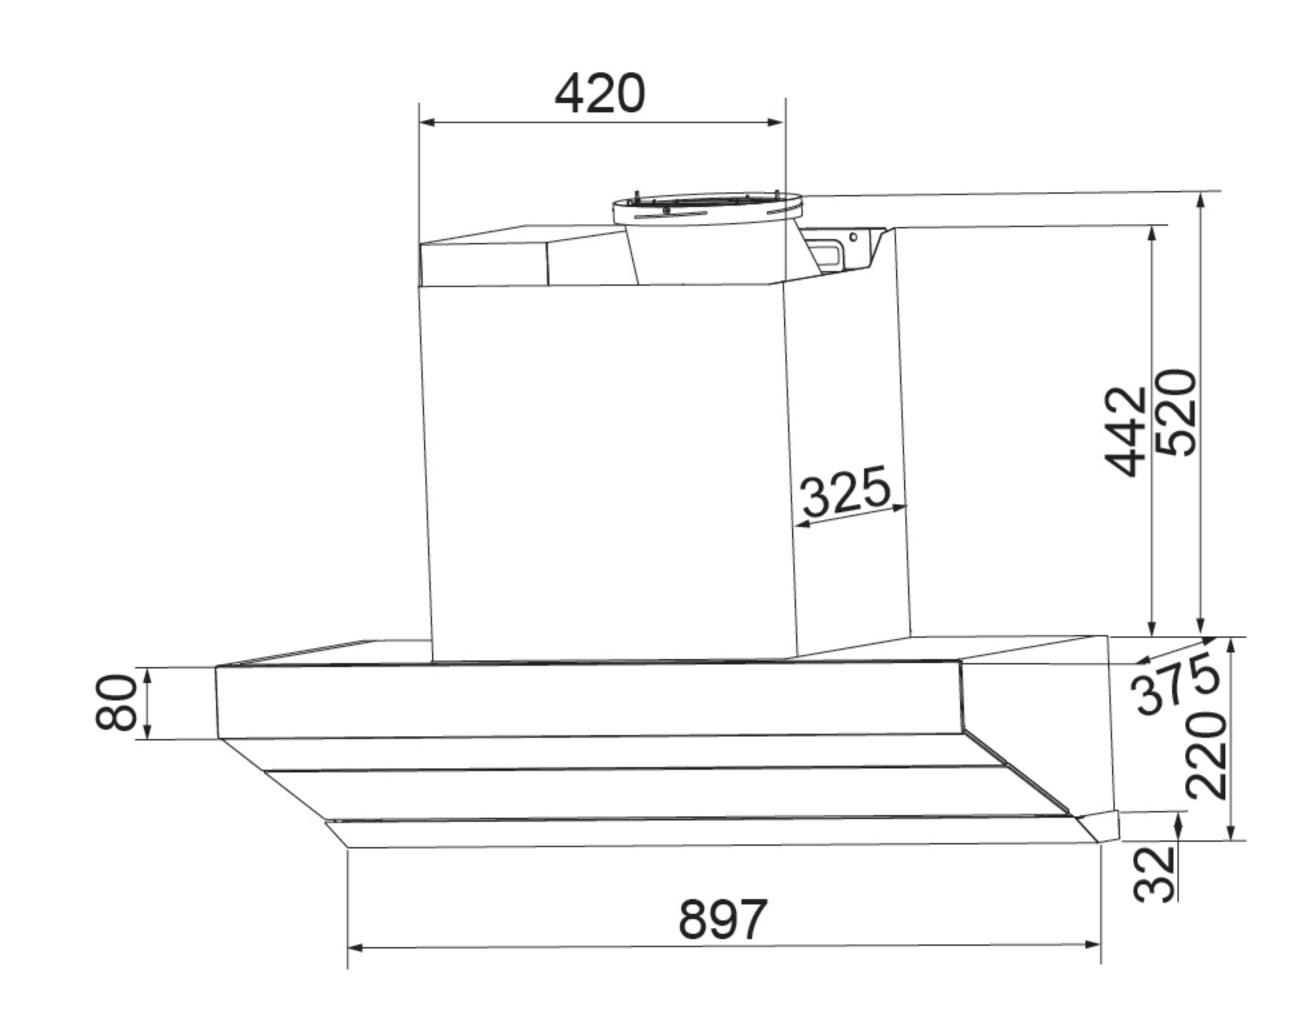

Product Basic Conditions(Unit: mm)


Installation Suggestions


Installation Position

- 1.The range hood is only for family use only; Please do not use the range hood under other conditions.
- 2.The range hood should be installed above the stove. Keep the appliance horizontal.
- 3.The temperature of the range hood should not be more than 40°C.
- 4. The wall should be none-flammable. Never install the range hood on the flammable wooden wall.

Installation Diagram of Hoods and Cabinets. (Unit: mm)

Hole size of ceiling or cabinet

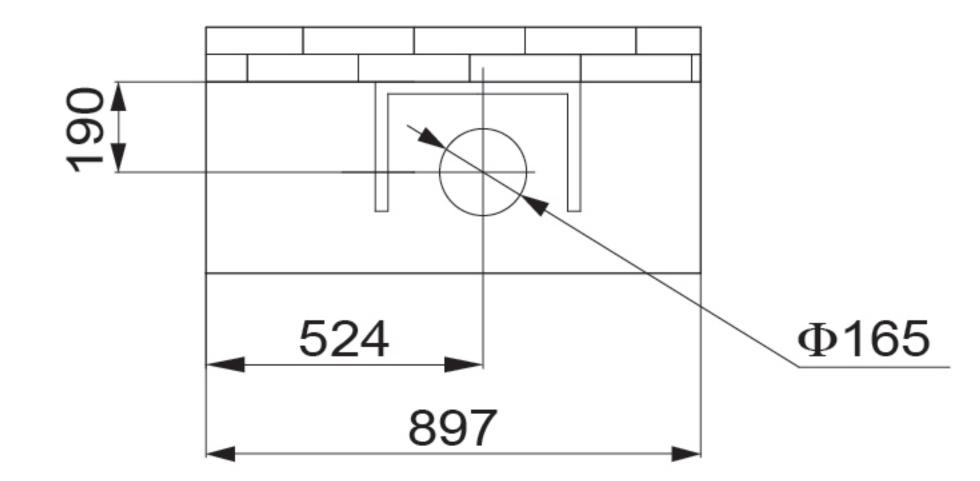

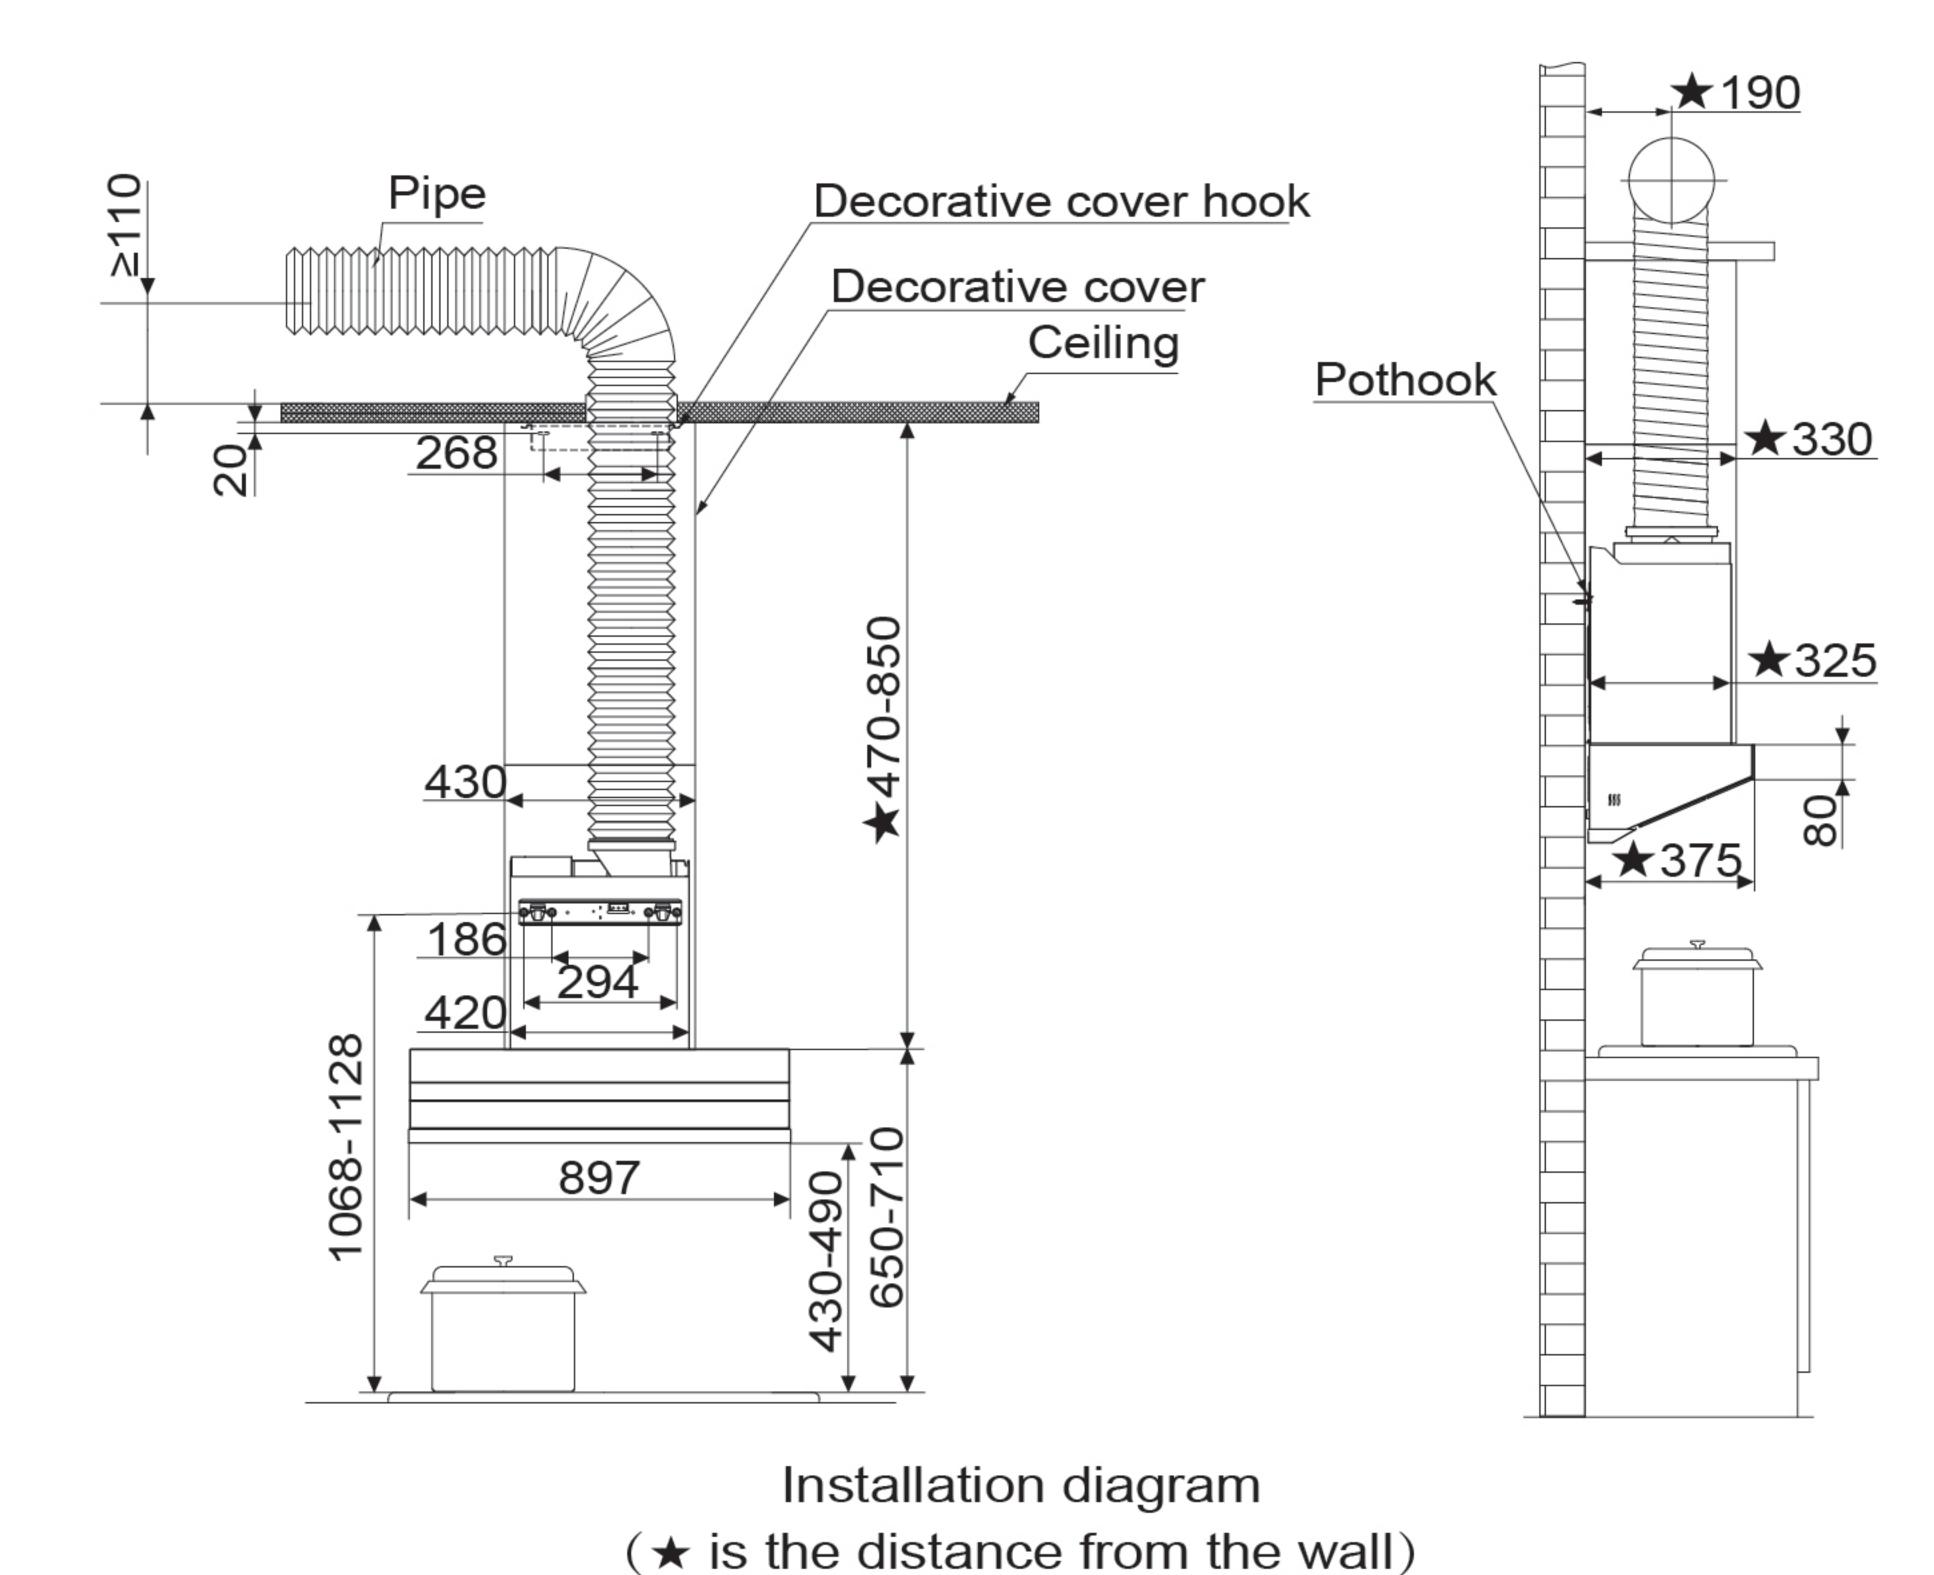

Notes:

- I. The installation height of the range hood is the recommended value (this height is the clearance value, i. e. the distance between the supporting surface of the cooking appliance on the stove and the lowest part of the range hood). The installation height can be adjusted according to the user height.
- 2. Please pay attention to the clearance between the exhaust fume collecting hood of the range hood and the cupboard on both sides before installation or disassembly.
- 3. This installation height is only applicable to electric ranges. If the range hood is installed above a gas range, the minimum distance between the supporting surface of the cooking appliance on the range and the lowest part of the range hood should be at least 650mm. If the installation instructions for the gas range specify a larger installation distance, this should be considered. The installation height of the range hood is the recommended value, and the cupboard and the range hood shown in the figure is for reference only. When the installation height of this product (i.e. the distance between the supporting surface of the cooking appliance on the range and the lowest part of the range hood) is lower than 650mm, all parts below 650mm are non-flammable parts of the range hood or parts working under safe and ultra-low voltage, and the deformation of these parts will not affect the protection against the touch of live parts. (If relevant laws in the region stipulate the installation height of range hood, it is recommended to abide by relevant laws, but the oil smoke suction effect of the product may be affected to some extent.)



Preparation before installation

- 1. Warning:
- (1) Please don't make sundries into exhaust pipe to avoid damaging the range hood. Estimate the exhaust pipe position.
- (2) Estimate the location between the range hood and the outdoor exhaust duct. Refer to the Installation Diagram.
- (3) A straight and short exhaust pipe makes smoke extraction more smooth.
- (4) A curving and long ducting run should be avoided, as it will lower the performance of the range hood.
- (5) The joint between exhaust pipe and wall hole should be sealed with tape, and ensure firm connection between exhaust pipe and exhaust cover.
- (6) Too small wall hole will affect smoke extraction, therefore, please broaden the wall hole to fit exhaust pipe size under safety condition.
- 2. Tool preparation

Please prepare the following tools before range hood installation (include but not limited to the following tools).


- (1) Impact electric drill (with drillbit of Φ 10mm)
- (2) Cross screwdriver


(3) Measuring tape

(4) Gradienter

Installation Steps


- 1. Open the packing box, take out the main body and count the packing lists;
- 2. Confirm the position for fixing the hook of main body: Confirm the installation position of the range hood, draw a center line, and then accurately determine the installation positions of the hook of main body and decorative cover hook on the wall with the bearing surface of the cooking appliance of the stove as the reference point, and make hole signs.

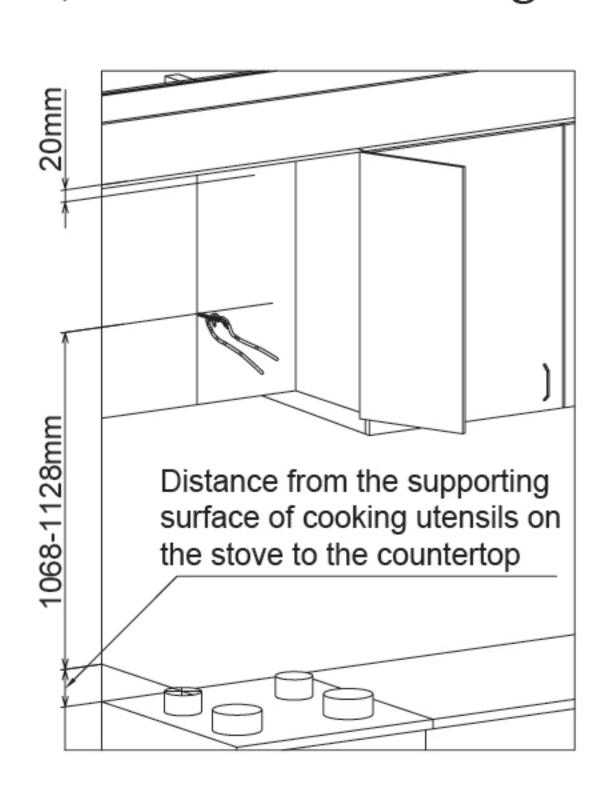


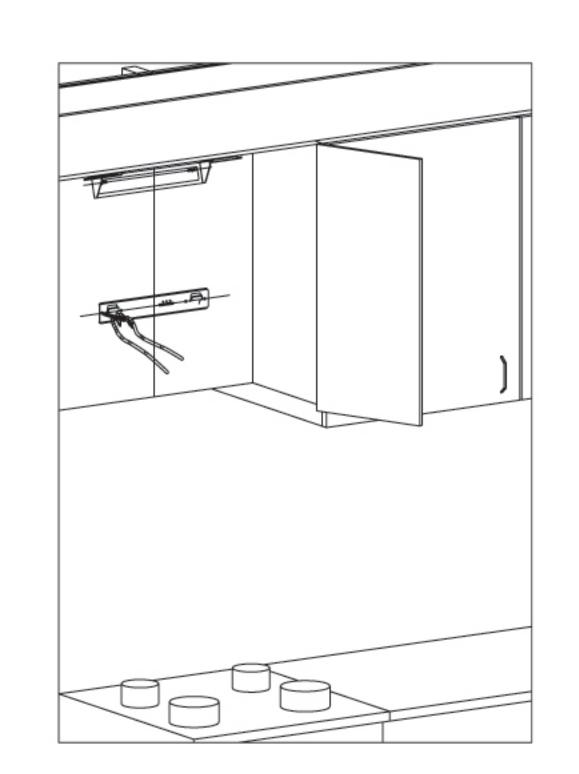


3. How to fix the hook:

1) Drill Φ 10mm hole at the drilling mark with an electric drill, then embed the expansion tube (10 x 60mm), fix the hook with the hook screw (ST4.5 x 60mm), and use a spirit level to make sure the hook is level;

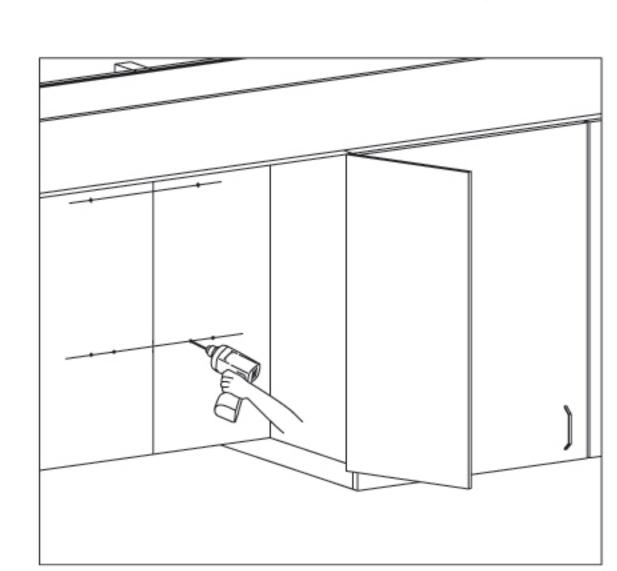


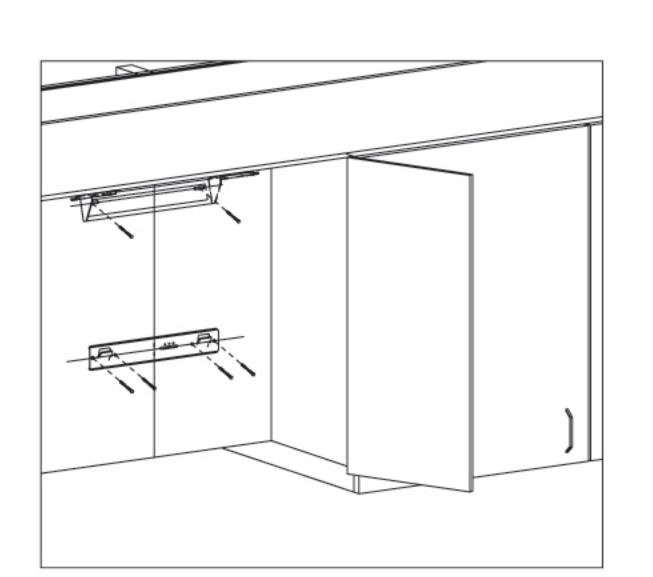



2) two cover hook screws (ST2.9 × 19 mm) can be used to fix it to the ceiling.(Applies only to purchased decorative cover components)

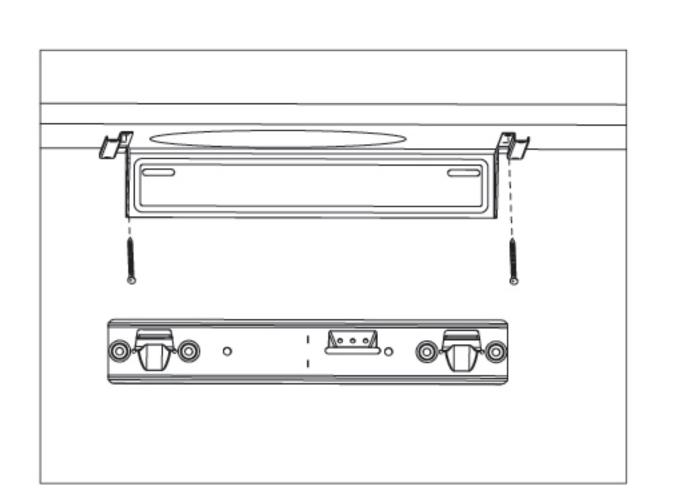


- 4. Install outlet housing:
 - Move the whole machine out of the packing box,
 - Place the outlet housing and the sealing rings at the air outlet of the main body, and use 8 screws (M4×18mm) to fix the outlet housing and the sealing rings.
- 5. Arrange the exhaust duct: the aluminum foil exhaust duct and the reserved smoke tube or wall hole shall be sealed tightly to prevent smoke leakage, the smoke tube shall be free from extrusion, deformation and small-angle elbow, the number of elbows shall not exceed 2, and the smoke tube shall be straightened and fixed.

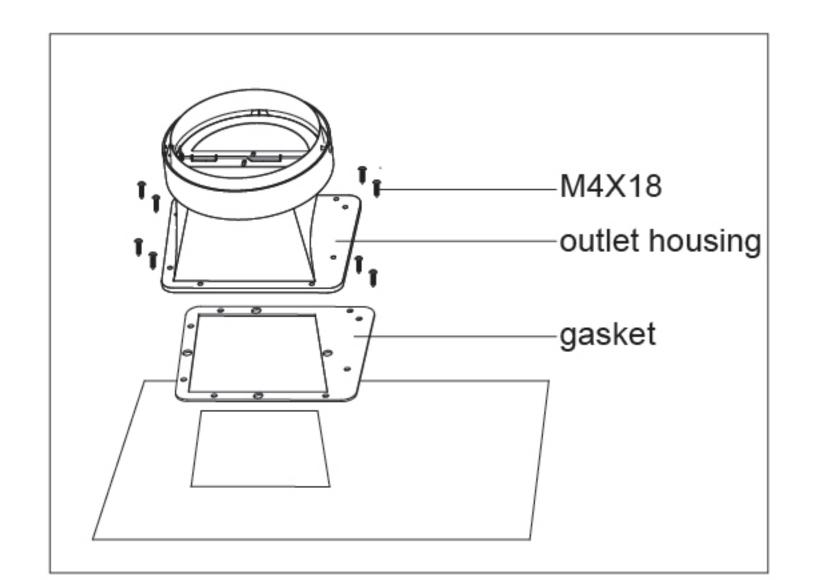

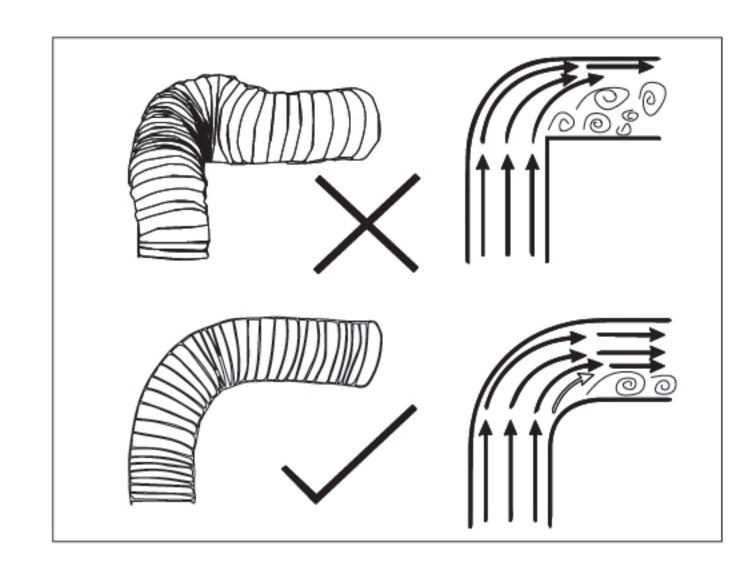

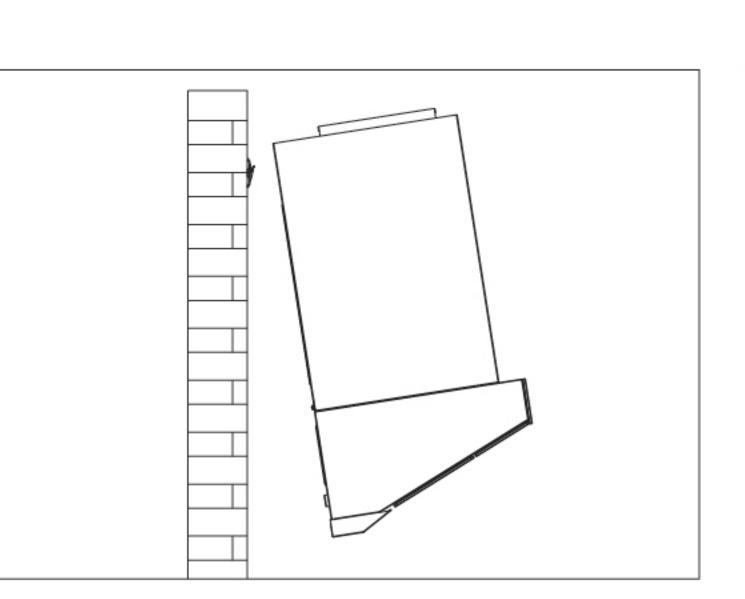


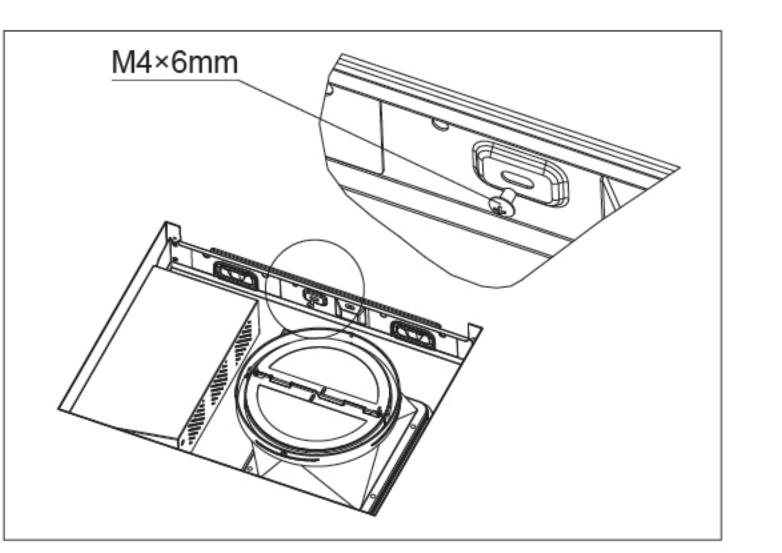




6. Hook the machine:


- Lift the main body, hang the hook holes at the upper part of the back of the range hood at the hooks, use the level ruler to confirm that the range hood is horizontal, and use the screws (M4×6mm) to fix the fan frame and the hooks;
- 7. Connect the exhaust duct: cut off the redundant exhaust duct or connect the smoke tube according to the actual distance, put the smoke tube into the outlet housing, then pre-fix the exhaust dust with two screws (ST3.9x9.5), and finally wrap it with foil tape for fixation and sealing;

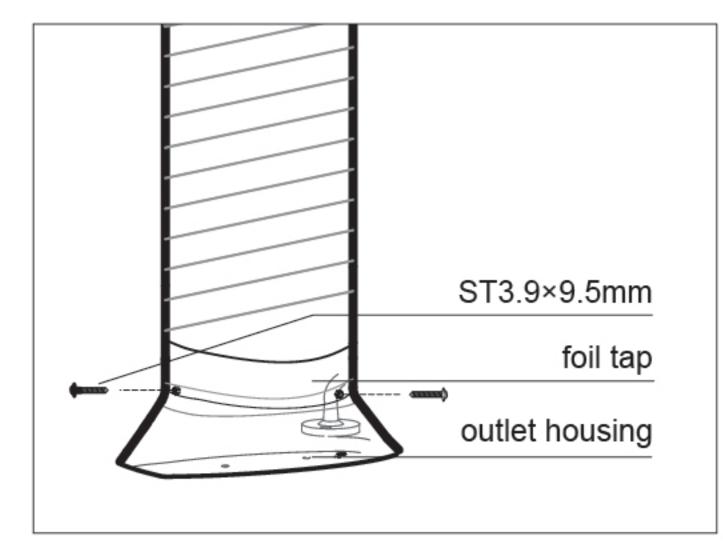

- 8. Insert the power cable plug of the range hood into the power socket, start the range hood, and check whether all joints of the exhaust duct are sealed well;
- 9. Tear the films: tear off the protective films of the fan cover and the decorative cover; Cautions: wear protective gloves;(Applies only to purchased decorative cover components)
- 10. Install the fan cover and the decorative cover:(Applies only to purchased decorative cover components) Put the decorative cover into the outer cover and pick them up at the same time, firstly, hang the decorative cover on the decorative cover hooks, then push the decorative cover and the fan cover inwards along the decorative cover hooks at the same time, when the fan cover slides down slowly, clamp the upper locking tab of the fan cover into the fan frame, and insert the lower edge into the gap between the top plate and the fan frame.



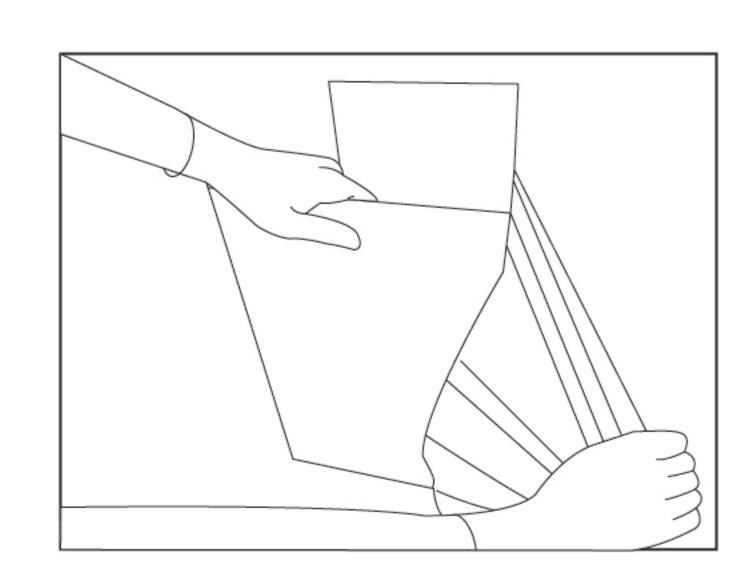

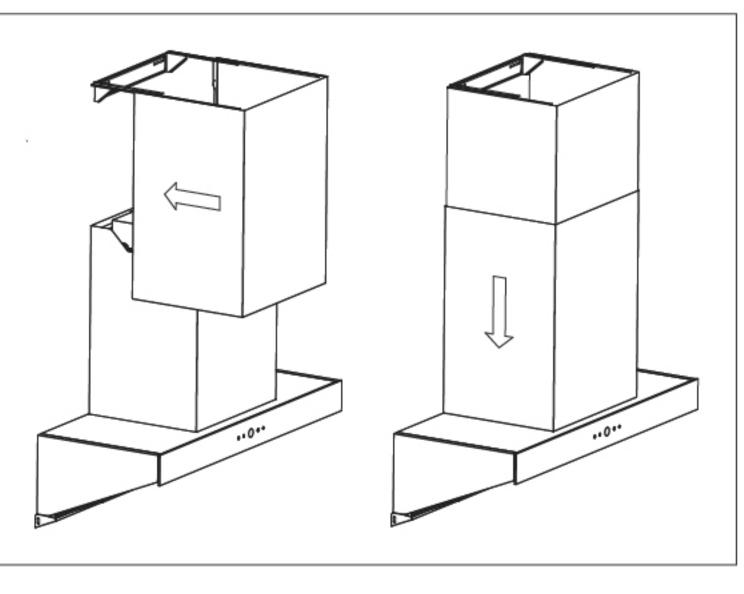

Notes:

- 1. The exhaust duct should protrude outdoors or into the common cold air suction flue, and the connections between the exhaust duct and the outlet housing and wall hole should be sealed with the adhesive tapes;
- 2. To ensure the smoke discharge effect, the exhaust duct outlet should not be deformed to avoid reducing the discharge area;
- 3. The power socket should be grounded reliably; The total length of power cable is 1.3 m, and should be taken into account when the socket position is designed.



Don't exhaust the waste gas from the range hood to the hot flue for exhausting Warning combustion gas or smoke of other fuels.

Debugging

- 1. Press ⊚, check whether smoke baffle turns up. Press ∹∴, check whether light works normally.
- 2. Press 🛞 or 🗞 , check whether motor turns normally. In the following cases, cut off power, stop turning and check whether it is reason of installation (if range hood breaks down, please contact our service center).
 - (1) Machine shakes violently (2) Expansion pipe looses (3) Impeller doesn't turn (4) Impeller with obvious grating when turning (5) Motor with abnormal noise
- 3. Tap (), the impeller will run in current mode and then shut down automatically after 2 minutes; tap

 again, the impeller will shut down directly.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Cleaning and Maintenance

I. Precautions for cleaning and maintenance

For convenient use, please clean the surface of the range hood frequently, which is good for the normal use of range hood.


- Clean with neutral soap or neutral detergent, and dry the surface of machine body with a soft cloth after cleaning.
- 2. Clean the stains on the surface of range hood with neutral detergent, and keep the detergent away from all buttons. Drop the detergent to the stains and keep it there for a moment (the detergent should not be kept on the machine body for a long time, otherwise it will damage the machine), and wipe the stains with soft cleaning cloth; remove the detergent with a damp towel, and then wipe the machine body with a soft dry towel.
- 3. Do not allow stains to remain on the surface of the range hood for too long.
- 4. If the stainless steel panel is stained with salty liquor, disinfectant, bleaching powder and other cleanser, please wipe it by wet cloth at once and dry it by dry cloth.




- a. There is a fire risk if cleaning is not carried out in accordance with the instructions.
- b.Please cut off the power first before cleaning and replacing components so as not to get an electric shock.
- c.Prevent the electrical parts such as motor and all control buttons from water while cleaning.
- d.Do not put your hand into the impeller operating area during operation of the impeller.
- e.Please don't clean with gasoline, acidic substance, benzene, solvent and other chemical agents.
- f.Please don't clean the surface with rough material like steel wire ball, brush or coarse cloth, etc. It will greatly scratch the surface.


II. Cleaning the oil cup and grating mesh

1. Hold both ends of the oil cup with both hands, keep the oil cup horizontal, move out slowly toward the front direction of the range hood, take down the oil cup and then drain off the accumulated oil;

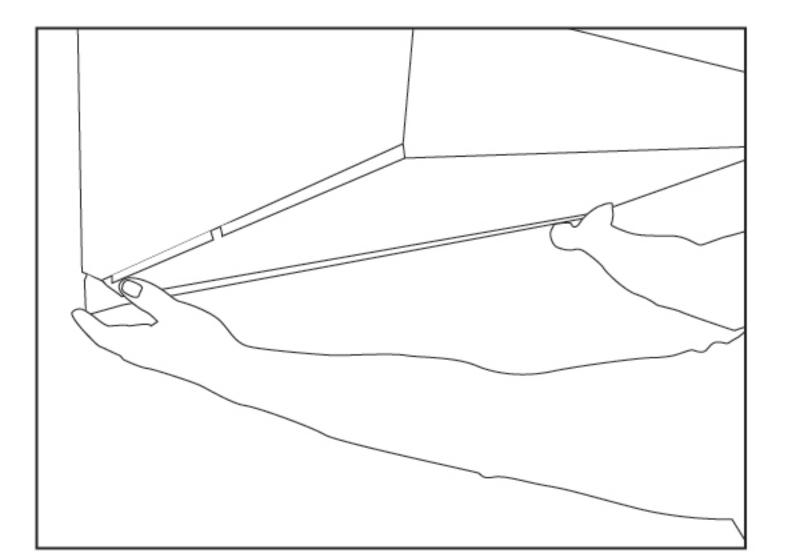

2. Touch the power button, and then the lighting button, open the smoke shield, and unplug the power plug. Hold the upper end of the grille with both hands and pull the locking tab downward to remove the grille. Immerse the oil cup and grille in warm water containing neutral detergent and wash them with a soft brush. After cleaning, install the oil cup and grille.

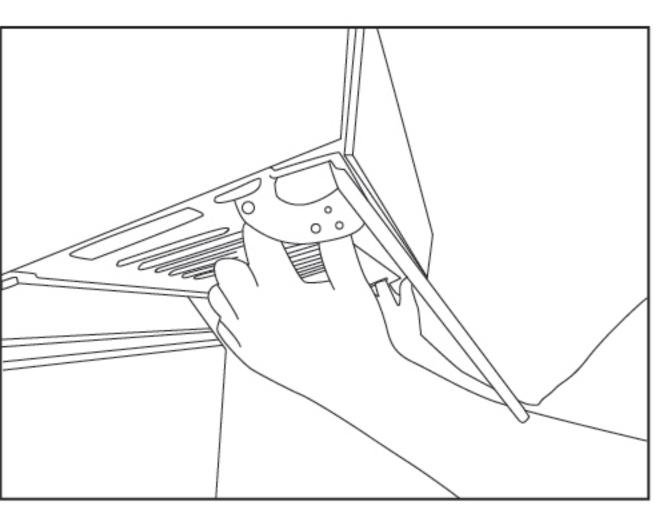

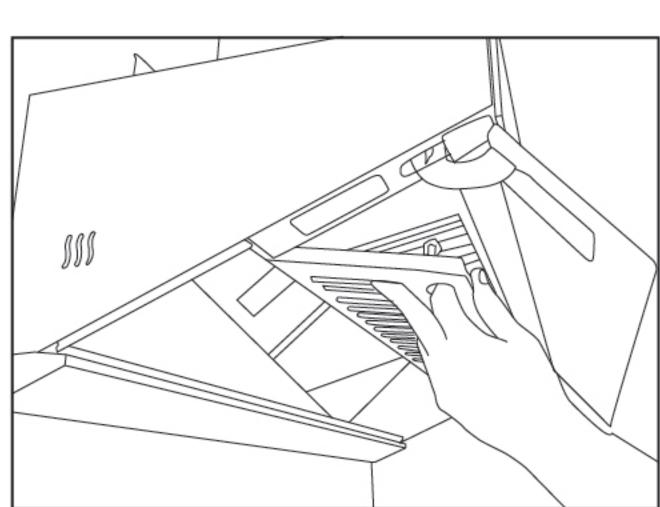



- a.Please clean the surface of the range hood frequently after use.
- b.Please pay attention to the oil level in the oil cup in daily use and remove it regularly to avoid oil overflowing.
- c.Wash the grille once every three months.
- d.Use type lamp is self-ballasted fluorescent reflector lamp Integral induction type ballast.
- -Max wattage: 1.5W -Voltage range: 9~10V
- -Dimensions: width 2 13/16"(70 mm)/depth 1 1/8"(28 mm)/height 11/16"(17mm)

Usage

Main Technical Specifications

Electrical parameter

Model	Voltage/Frequency	Input Power	Motor Power	LED Light Power
ZMG9057-Y	220-240V/50Hz	361W	358W	3W

Exhaust model (exhaust pipe)

Model	ZMG9057-Y	Product size	897mm(L)×375mr	m(W)×740mm(H)
Max static pressure(Pa)			1140	
	Gear	Auto speed 🔆	High speed	Low speed
	Air flow(m³/h)	1260	990	710
	Noise(dB)	56	52	43




- a. **※**: Auto speed has built-in auto turbo mode, air flow and noise in table are the maximum value on auto turbo mode.
- b. Noise shown in table is sound pressure level. The corresponding sound power level is: 56dB(A) for low, 65dB(A) for high and 69dB(A) for auto.
- c. The air flow in the table are tested in accordance with IEC 61591 standard. The noise in the table are tested in accordance with 60704-3 standard.



Operation Instruction

Control Interface

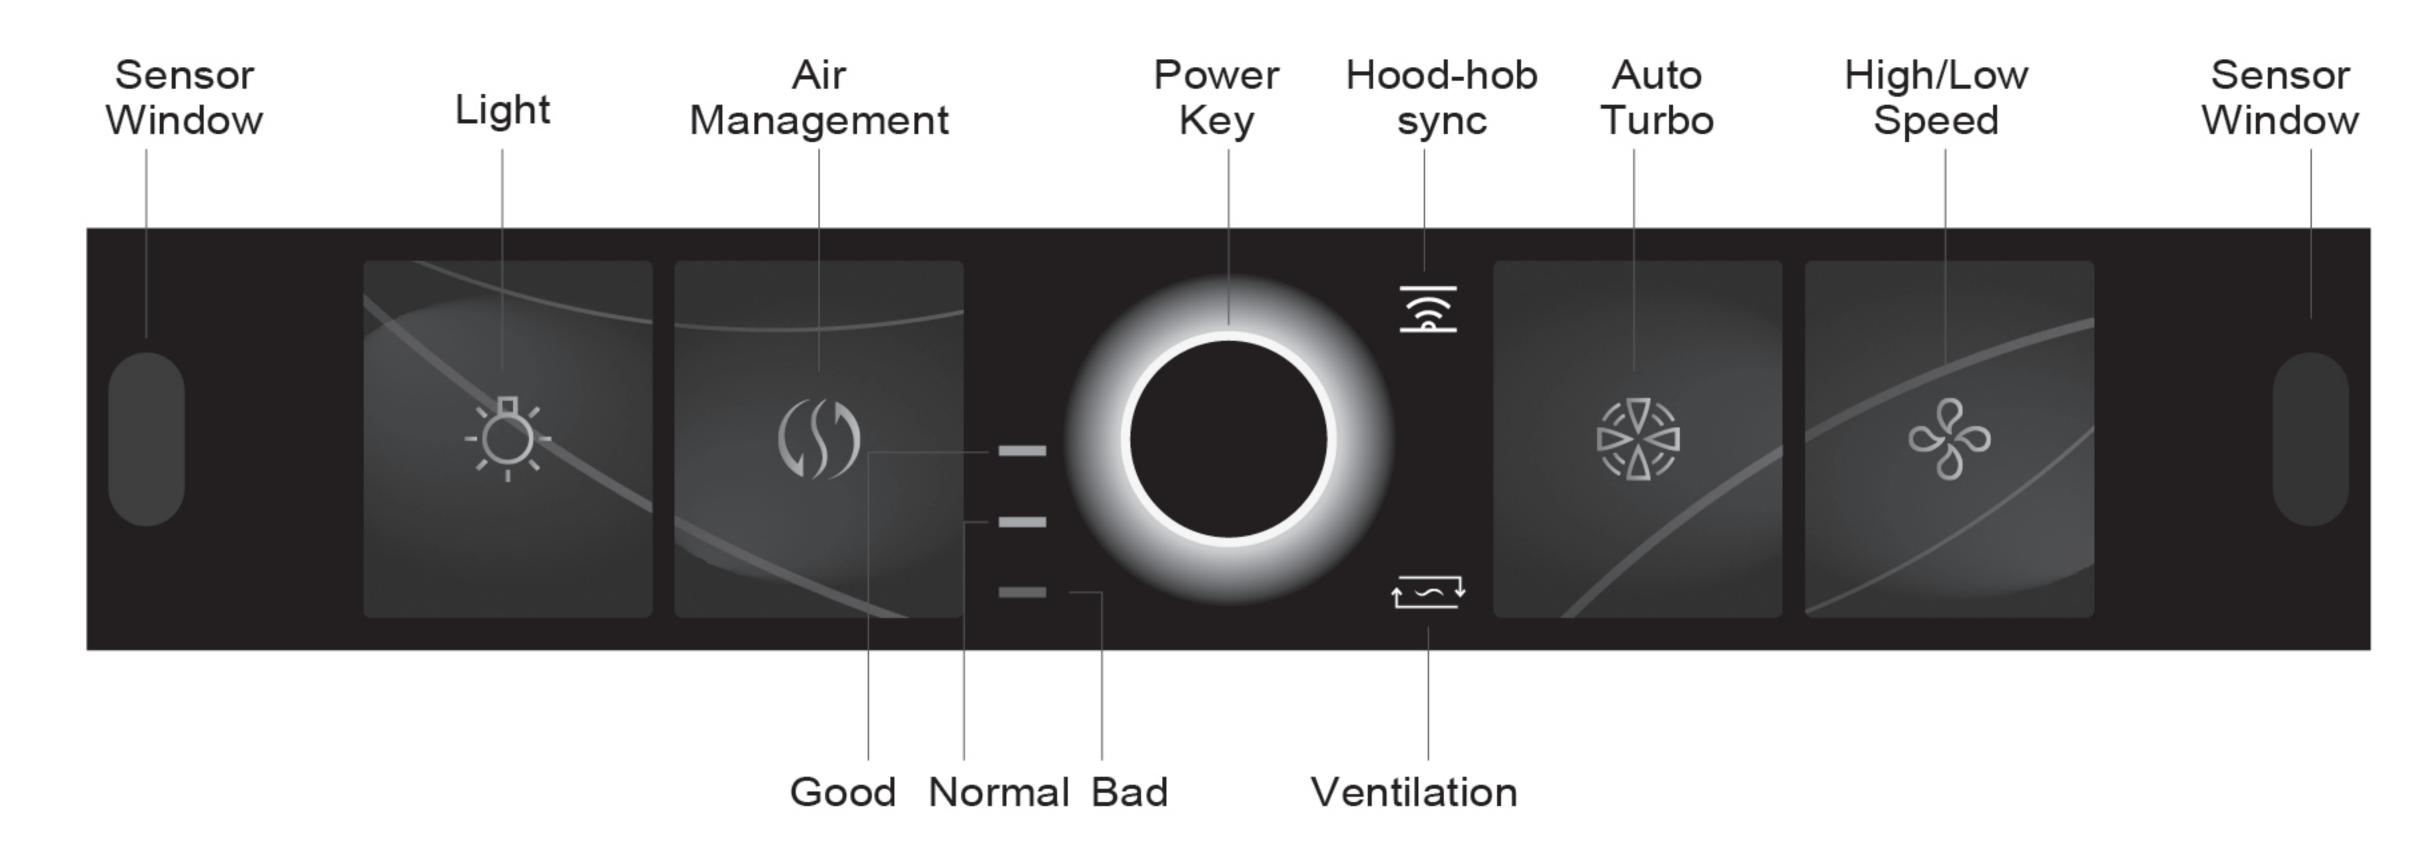

Description of Function Buttons



Power button

Touch ogently to enter the standby state, and then operate other buttons;


(If no other buttons are operated in 2 minutes, it will be shut down automatically.) When the fan is in the operating state, touch ⊚ gently to make ⊚ flash, indicating that it enters the delay state. It will be shut down automatically after 2 minutes. Touch ⊚ gently again to shut down directly.


(Touch any other volume button in the process of delayed shutdown to exit the delay mode)



Gesture sensing function

Wave your hand full quickly across the sensing windows on both ends to turn on/off the range hood (including fan & LED lamp); When the range hood is in the OFF state, press and at the same time and hold them for 5 seconds to enable/disable the gesture sensing function.

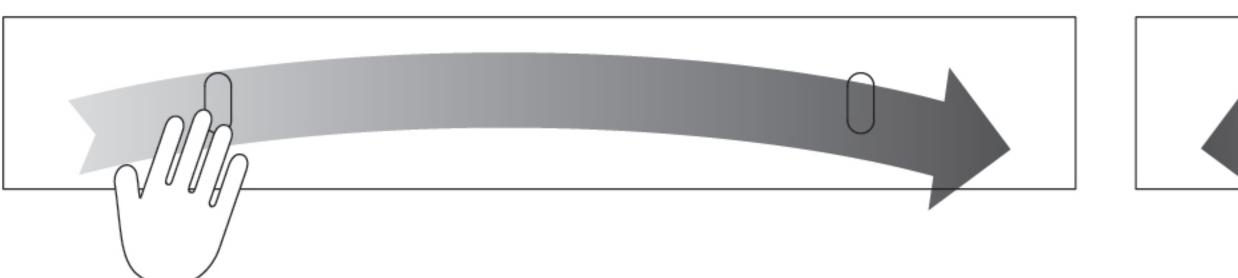

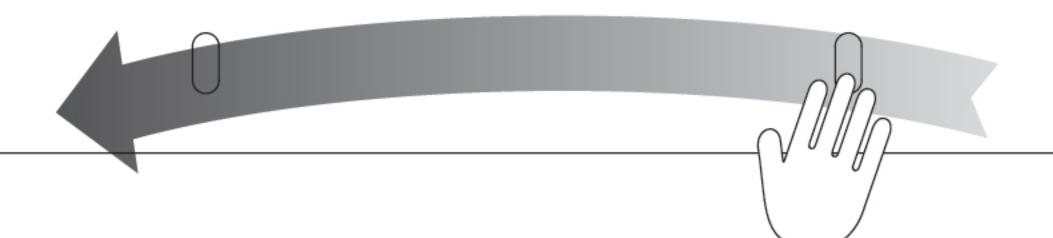

Schematic diagram of gesture sensing function

The following buttons are valid only when the power button is on.



Normal mode button (High/Low button)

Touch % gently to make % normally on, indicating that the range hood is operating in the High speed; in the High speed, touch % gently to reduce the brightness of %, indicating that the range hood is operating in the Low speed; in the Low speed, touch % gently to shut down the fan.



Auto turbo button

Touch gently. The range hood "beeps", and then operates in the Auto mode. Touch gently again to stop the fan.



Lighting button

Touch 🐥 gently to turn on the LED lamp; touch 🐥 gently again to turn off the LED lamp.

Intelligent air management air management button



Touch (()) gently to make (()) flash, indicating that the range hood is in the state of smart air quality detection. If the air quality is good, the "Green" indicator light will be on and the fan will not run; if the air quality is Normal, the "Orange" indicator light and the "Ventilation" indicator light will be on, the smoke shield will be started automatically, and the fan will operate in the Low speed; if the air quality is bad, the "Red" indicator light and the "Ventilation" indicator light will be on, the smoke shield will be started automatically, and the fan will operate in the High speed.

Note: When the range hood fan is running or the LED lamp is turned on, the smoke shield will be started automatically; when the range hood is turned off, the smoke shield will retract automatically.



Introduction to Hood-hob Linkage Function



If you have purchased FOTILE Range hood, and Gas Hob which have linkage function at the same time, you can enjoy their linkage function!

The specific operation method is as follows:

- 1. Code-matching connection (code-matching between the range hood and the gas hob is required before their connection)
- (1) Plug in the power cable connector of the range hood. Install the gas hob battery (power supply). Make sure that all knobs are in the Off state at the same time.
- (2) Press the Power button and then hold Lighting button for 5 seconds within 10 seconds, the buzzer rings. The range hood-hob linkage icon flashes, and the range hood-hob linkage matching starts. Turn on the hob knob in this state and wait for a moment. When the range hood receives a range hood-hob linkage signal in line with the specification, the range hood-hob linkage icon so will be always on, indicating that the code matching is completed.
- ⚠ Caution: If the electronic control board of your range hood or hob is repaired or replaced, please perform code matching again by repeating the above operation!
- 2. After code matching is successful, the linkage function of the range hood and the gas hob can be realized.
- Once the gas hob is ignited, the range hood will be automatically turned on and work in the Auto mode, and the LED lamp will be on at the same time;
- When the gas hob is turned off, the range hood will automatically shut down 2 minutes later by default.
- 3. Release range hood-hob matching
 - (1) Make sure that knobs of the hob are turned off;
 - (2) Press the Power button to turn on the range hood and then long press the Lighting button for 5 seconds within 10 seconds, the buzzer rings. The range hood-hob linkage icon a flashes, press the Power button again to shut down at this time, and the release operation will be completed.
- ⚠ Caution: Code matching and release must be performed within 1 hour after the range hood is powered on. If code matching and release cannot be triggered, please unplug the range hood, wait 2 minutes and plug it in again, and then proceed as described above.

Normal Malfunction and Trouble Shooting

Malfunctions	Possible reasons	How to check
Range hood can't work, light can't lighten	Haven't connected with	Check whether the plug is well inserted or not
light can't lighten	power supply	Check whether there is electricity or not in the plug
Motor can working, but light can't lighten	LED light is damaged	Replace LED light (done by professional people)
There is machinery shaking noise	Screw is loosed	check whether the surface screws are tightened or not
	Too long distance between range hood and stove	Lower the range hood installation height (done by professional people)
Suction power is weak	Too much ventilation near the range hood leads to strong convection	Close some doors and windows
Noisy	Exhaust pipe surface is distorted	Reinstall exhaust pipe (done by professional people)



- a.Change the LED light: please contact FOTILE after-sale service center.
- b.If the range hood still can't work after getting rid of the above malfunctions, please contact FOTILE service center.
- c.The following information is required for the warranty period:
- 1.Date of purchase
- 2.Product model
- 3.Serial number
- 4.Relevant vouchers for purchase
- d.The ventilator shall be not allowed to be repaired by any party other than Fotile's appointed technicians.Otherwise it may cause serious consequences and exempt the product from warranty.
- e. The following circumstances do not fall into the scope of free warranty, and a fee will be charged for repair.
- 1. Damage resulting from improper handling, installation, use, maintenance and safekeeping conducted by customer.
- 2.Failure and damage caused by using the product beyond the normal operating conditions(damage caused in the case that the voltage is higher than 264V or lower than 189V).
- 3. The product installed, dismantled or repaired by customer or any party other than Fotile's appointed service staff or agency.
- 4.Discrepancy between the information on the purchase voucher and the warranty card and the product.
- 5. Product damage caused by force majeure (such as natural disaster and war, etc.).
- 6.Product failure or damage arising from use not in conformity with the "instructions".